

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM 0103300

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Medio

9. WELL NO.

#2

10. FIELD AND POOL, OR WILDCAT

Undesignated

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

**Sec. 14 T19N R3W
NMPM**

12. COUNTY OR PARISH 13. STATE

Sandoval N. Mex.

SUNDRY NOTICES AND REPORTS ON WELLS
(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL ☒ GAS ☐
WELL WELL OTHER

2. NAME OF OPERATOR

SCO, Inc.

3. ADDRESS OF OPERATOR

P. O. Box 669, Santa Fe, New Mexico

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)

At surface

**595fsl 2080fel, Sec. 14 T19N R3W
NMPM SANDOVAL COUNTY, NEW MEXICO**

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

PULL OR ALTER CASING

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other)

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

REPAIRING WELL

FRACTURE TREATMENT

ALTERING CASING

SHOOTING OR ACIDIZING

ABANDONMENT*

(Other)


(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

It is proposed to plug and abandon this well in the following manner:

1. Spot a cement plug from 2673 to TD (3131).
2. Cut 3 1/2" casing @ free point and recover same.
3. Spot a 100" plug across cut off casing w/50' inside and 50' on top of stub.
4. Spot a cement plug from 100 to 200'.
5. Erect P & A marker w/10 sx surface plug.

This well is being plugged for lack of commercial production.

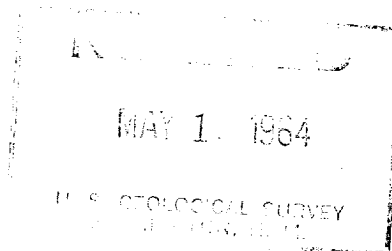

18. I hereby certify that the foregoing is true and correct

SIGNED

L. A. Bedford

TITLE **Agent for Operator**

DATE

MAY 2 1964


(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

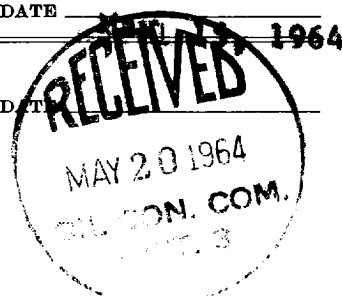

*See Instructions on Reverse Side

... ..

... ..

... ..

... ..

... ..

... ..

... ..

