16

UNITED STATES SUBMIT IN TRIPLICATE* Other instructions on reverse side)

AND SERIAL NO.

GEOLOGICAL SURVEY									
SUNDRY	NOTICES	AND	REPORTS	ON	WELLS				

Gr. : 708p!

(Do not use this fur	NY NOTICES AND REPORTS ON WELLS n for proposals to drill or to deepen or plug back to a different reservoir. se "APPLICATION FOR PERMIT—" for such proposals.)	5. N. INDIAN, 12201(-12 02 12202 VIII.)		
OIL GAS WELL WELL	OTHER	7. UNIT AGREEMENT NAME		
2. NAME OF OPERATOR		8. FARM OR LEASE NAME		
Guadalupe E	xploration Corporation	Laylor Ranch Lout.		
3. ADDRESS OF OPERATOR		9. WELL NO.		
P.O. Box 2() 4. Location of Well (Repo See also space 17 below.) At surface	57. Scottsdale, Az 85252 rt location clearly and in accordance with any State requirements.	1 10. FIELD AND POOL, OR WILDCAT wildcat		
6601 from N &	Elinw, NE4, NE4, Sec. 26, T21N, R3W	11. SEC., T., R., M., OR BLK. AND SURVEY OR ARBA		
Sandoval Count		Sec. 26,T21N, R3W		
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.)	12. COUNTY OR PARISH 13. STATE		
	Gr. : 7080 !	Sandoval Co. New Mexico		


Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO			SUBSEQUENT REPORT OF:			
TEST WATER SHUT-OFF		PULL OR ALTER CASING		WATER SHUT-OFF	REPAIRING WELL]
FRACTURE TREAT	<u> </u>	MULTIPLE COMPLETE		FEACTURE TREATMENT	ALTERING CABING	-
XXXXX ACIDIZE	$\mathbf{X}_{\mathbf{i}}$	ABANDON*		SHOOTING OR ACIDIZING	ABANDONMENT*	٦. ـ
REPAIR WELL.	1	CHANGE PLANS		North Report results of m	ck & running ¢a:	3111
(Other)				Completion or Recompletion	Report and Log form.)	

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS of leading so the religious of details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally a ded, give subsurface locations and measured and true vertical depths for all markers and sones pertinent to this work.)

Set cement plug, 65 sacks, 0150! to 5950!. Ran $4\frac{1}{2}$ " K-55, 9.5 lb. casing to 5845' and set with 285 sacks cement with 25% Gilsonite.

Intend to perforate 5782 to 5707 and treat with acid; then swab well and test. If a sand frac treatment is required it will be performed at a later date.

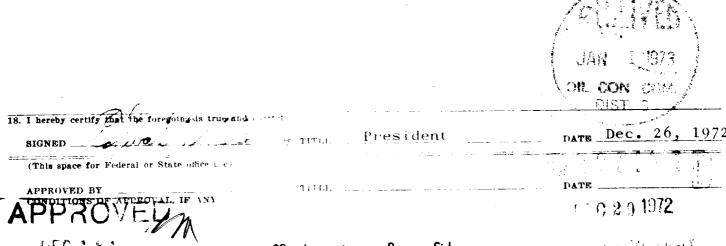

*See Instructions on Reverse Side

Burney Barry

