Form 9-331 (May 1963)

SHOOT OR ACIDIZI

REPAIR WELL

## UNITED STATES DEPARTMENT OF THE INTERIOR (Other instructions on reverse side)

SUBMIT IN TRIPLICATE.

SHOOTING OR ACIDIZING

(Other) \_\_

Drilling Progress

Form approved. Budget Bureau No. 42-R1424.

GEOLOGICAL SURVEY

ABANDON\*

CHANGE PLANS


ABANDONMENT\*

υ.	LEASE	DESIGNATION	AND	SERIAL	NO.
	SF-	078056			

SUNDRY NOTICES A (Do not use this form for proposals to di Use "APPLICATION F		ack to a different reservoir.	6. IF INDIAN, ALLOTTE	E OR TRIBE NAME	
OIL GAS OTHER			7. UNIT AGREEMENT NAME		
WELL WELL EX OTHER  2. NAME OF OPERATOR  Hixon Development Compan	8. FARM OR LEASE NAME Federal "C"				
3. ADDRESS OF OPERATOR P.O. Box 2810, Farmingto.	9. WELL NO.				
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface  1750' FNL, 1850' FWL, Section 5, T25N, R12W			10. FIELD AND POOL, OR WILDCAT  WAW-Fruitland-PC  11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA  Section 5, T25N, R12V		
	EVATIONS (Show whether DF,	RT, GR, etc.)	12. COUNTY OR PARISE San Juan		
16. Check Approprie	ate Box To Indicate N	ature of Notice, Report, or	Other Data		
NOTICE OF INTENTION TO	Г	BEDQUENT REPORT OF:			
	ALTER CASING	WATER SHUT-OFF FRACTURE TREATMENT	REPAIRING T		

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.) (Other) 17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

8/29/79: Staked well location 1750' FNL, 1850' FWL, Section 5, T25N, R12W, San Juan County, New Mexico. GLE - 6159'. Location to be a stepout WAW-Fruitland-PC gas 10/20/79: Spud well at 10:00 am. Drilled 12-1/4" hole to 95' GLE. Ran 94.42' 7" 20# K-55 casing. Cemented w/80 sacks Class B neat cement. Good returns to 10/21/79: WOC. 10/22/79: Depth 510'. Flange up BOP. Test surface. WOC. casing and BOP to 750 psi for 30 minutes. Held OK. Drill out from under surface with 5" bit. Drill 94'-510'. Ran Totco survey - 1/4°. 10/23/79: Depth 1030'. Drilled 5" hole 510'-1030'.

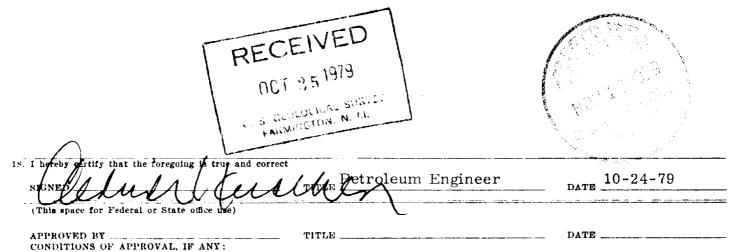

FARMINGTON COPY

\*See Instructions on Reverse Side