

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPPLICATE*
(Other instructions on reverse side)Form approved.
Budget Bureau No. 42-E1424.
5. LEASE DESIGNATION AND SERIAL NO.

SF 078056

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ <i>Water Inj Well</i>	7. UNIT AGREEMENT NAME <i>Control Bisti</i>
2. NAME OF OPERATOR <i>Hixon Development Co.</i>	8. FARM OR LEASE NAME <i>CBU</i>
3. ADDRESS OF OPERATOR <i>341 Milam Bldg. SAN ANTONIO, TEXAS</i>	9. WELL NO. <i>WI #1</i>
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also Space 17 below.) At surface <i>5' fml & 5' fwl Sec 6 T25N, R2W SAN JUAN Co. New Mexico</i>	10. FIELD AND POOL, OR WILDCAT <i>Bisti Gallup</i>
14. PERMIT NO.	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA <i>Sec 6 T25N R2W</i>
15. ELEVATIONS (Show whether DF, RT, GR, etc.) <i>6190 DF</i>	12. COUNTY OR PARISH <i>SAN JUAN</i>
	13. STATE <i>N.M.</i>

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐	FULL OR ALTER CASING ☒
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☒
REPAIR WELL ☐	CHANGE PLANS ☐
(Other) ☐	

SUBSEQUENT REPORT OF:


WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
(Other) ☐	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

This well is no longer necessary for operation of unit. It is intended to plug & abandon this well in the following manner:

- 1. Squeeze Perfs 4920 - 4826*
- 2. Spot 10 ex plug across top of Pt Lookout*
- 3. Cut & pull 5 1/2" Csg.*
- 4. Spot plug 50' in & 50' out of Stub*
- 5. Spot 150 ex plug over PC @ 1140'*
- 6. Cut Surface Csg off 4' below Grd level*
- 7. Place 10 ex plug in top of Surface Csg.*
- 8. Clean Location*

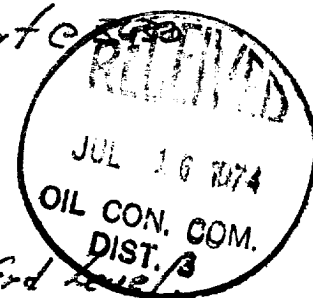

18. I hereby certify that the foregoing is true and correct.

SIGNED *Larry Bedford* TITLE *Agent for Operator* DATE *July 15, 1974*

(This space for Federal or State office use)

APPROVED BY _____
CONDITIONS OF APPROVAL, IF ANY:

TITLE _____

*See Instructions on Reverse Side

