

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.

Use "APPLICATION FOR PERMIT - " for such proposals


SUBMIT IN TRIPLICATE

1. Type of Well
☐ Oil Well ☒ Gas Well ☐ Other

2. Name of Operator
ENERGEN RESOURCES CORPORATION

3. Address and Telephone No.
2198 Bloomfield Highway, Farmington, NM 87401

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)
990' FSL, 990' FWL, Sec. 35, T27N, R3W, N.M.P.M.

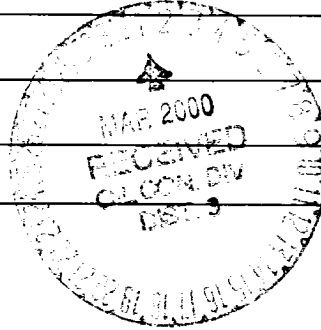

5. Lease Designation and Serial No.

Jic Cont 95

6. If Indian, Allottee or Tribe Name

Jicarilla Apache

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Jicarilla 95 3

9. API Well No.

30-039-06794

10. Field and Pool, or exploratory Area
Gavilan PC/Blanco MV

11. County or Parish, State

Rio Arriba NM

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION

- ☐ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☒ Other Plug PC
☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Due to excessive water production, it is intended to plug the PC as follows:

1. MIRU. TOH.
2. TIH and set RBP at 4120'. TOH.
3. TIH with packer to 3900'. Test RBP. Set packer at 3600'. Squeeze cement perfs 3804-3885 with 100 sks cement. WOC.
4. TOH. TIH with bit. Drill out squeeze. Test casing to 500 psi. TOH.
5. TIH and retrieve RBP. TOH.
6. Land tubing at 6100'. Swab in return to production.

14. I hereby certify that the foregoing is true and correct

Signed Monica Papp

Title Production Assistant

Date 1/26/00

(This space for Federal or State office use)

Approved by [Signature]

Lands and Mineral Resources

Title

Date 2/21/00

Conditions of approval, if any:

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.