

NO. OF COPIES RECEIVED	2
DISTRIBUTION	
SANTA FE	1
FILE	1 ✓
U.S.G.S.	
LAND OFFICE	
OPERATOR	1

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease
State <input type="checkbox"/> Federal <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.

## SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name <b>Huerfano Unit</b>
2. Name of Operator <b>El Paso Natural Gas Company</b>	8. Farm or Lease Name <b>Huerfano Unit</b>
3. Address of Operator <b>Box 990, Farmington, New Mexico - 87401</b>	9. Well No. <b>44</b>
4. Location of Well UNIT LETTER <b>H</b> <b>1650</b> FEET FROM THE <b>North</b> LINE AND <b>990</b> FEET FROM THE <b>East</b> LINE, SECTION <b>4</b> TOWNSHIP <b>26N</b> RANGE <b>10W</b> NMPM.	10. Field and Pool, or Wildcat <b>West Kutz P. C.</b>
15. Elevation (Show whether DF, RT, GR, etc.) <b>6724' GL</b>	12. County <b>San Juan</b>

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data  
NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>

SUBSEQUENT REPORT OF:

REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

Because of non-production it is planned to plug and abandon this well as follows:

Kill well with water, spot 50 sack cement plug down tubing and pull tubing (est. top of plug will be 1900').

Determine casing free point and shoot casing in two if amount of free casing will be economical to recover. Spot 25 sack cement plug on the casing stub by pumping down the freed casing.


Pull casing (it is estimated that about 1000' will be recovered).

Remove surface casing flange, place 12 sack cement plug at surface and install a dry hole marker.

Clean and level location.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED \_\_\_\_\_ TITLE **Petroleum Engineer**

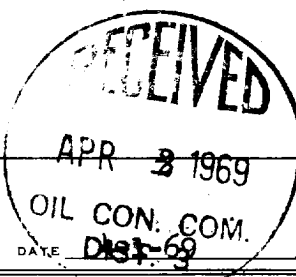

APPROVED BY Emory Clarend  
CONDITIONS OF APPROVAL, IF ANY:

TITLE Sgt Dist III

DATE 4-3-69