

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.
5. **Navajo Tribal** AND SERIAL NO.
NOO-C-14-20-2971

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Dry & Abandoned		7. UNIT AGREEMENT NAME	
2. NAME OF OPERATOR Apache Corporation		8. FARM OR LEASE NAME Navajo Tribal Tract 52	
3. ADDRESS OF OPERATOR P. O. Box 2299, Tulsa, Oklahoma		9. WELL NO. 1-21	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 330' REL and 500' WEL being SE/4 SE/4 of Section 21		10. FIELD AND POOL, OR WILDCAT Wildcat	
14. PERMIT NO. 6117 GR		15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6117 GR	
		12. COUNTY OR PARISH San Juan	13. STATE N. Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☒
SHOOT OR ACIDIZE ☐	ABANDON* ☐
REPAIR WELL ☐	CHANGE PLANS ☐
(Other) ☐	

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
(Other) ☐	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Drilled to total depth @ 6850'. Well was logged and tested and will be plugged and abandoned following the procedure outlined below.

- 1) 50 sack cement plug from 6600'-TD
 - 2) 35 sack cement plug from 6150'-6250'
 - 3) 35 sack cement plug from 5727'-5825'
 - 4) 25 sack cement plug from 3850'-3900'
 - 5) 25 sack cement plug from 2150'-2200'
 - 6) 75 sack cement plug from 880'-1050'
 - 7) 10 sack cement plug from top of surface casing
 - 8) Install regulation dry hole marker and clean location of all debris.
- Permission to abandon using the above procedure was obtained as per telephone conversation on 10/13/70 with Mr. T. T. McGrath, U.S.G.S., Farmington, New Mexico

18. I hereby certify that the foregoing is true and correct

ORIGINAL SIGNED BY
SIGNED LOYD SOMERS

TITLE Regional Production Mgr.

DATE 10/13/70

(This space for Federal or State office use)

APPROVED BY _____
CONDITIONS OF APPROVAL, IF ANY:


TITLE _____

*See Instructions on Reverse Side

RECEIVED

OCT 14 1970

U. S. GEOLOGICAL SURVEY
FARMINGTON, N. M.

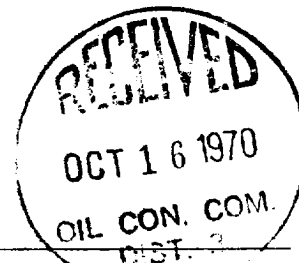

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.