

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE\*  
(Other instructions on re-  
verse side)

Form approved.  
Budget Bureau No. 42-R1424

5. LEASE DESIGNATION AND SERIAL NO.

**N00-C-14-20-2727**

6. IF INDIAN, ALLOTTEE OR TRUST LAND, NAME

**SUNDRY NOTICES AND REPORTS ON WELLS**

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>		7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR <b>TEXACO, Inc.</b>		8. FARM OR LEASE NAME <b>Navajo Indian Reservation</b>
3. ADDRESS OF OPERATOR <b>P.O. Box EE Cortez, Colorado 81321</b>		9. WELL NO. <b>3</b>
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface <b>NE 1/4 NW 1/4 Sec. 35</b> <b>660' FNL &amp; 1980' FWL, Sec. 35</b>		10. FIELD AND POOL, OR WELLS <b>Tocito</b>
14. PERMIT NO.		11. SEC., T., R., M., GRIK, AND SURVEY OR ADVA <b>Sec. 35-T20N-R10W</b>
15. ELEVATIONS (Show whether DF, RT, GR, etc.) <b>5596' KB</b>		12. COUNTY OR PARISH <b>San Juan</b>

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) ☐

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

ABANDON\* ☒

CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT\* ☐



(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of start of proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all sections and pertinent to this work.) \*

We propose to abandon this well because it was completed non-productive.

**ABANDONMENT PROCEDURE:**

Fill hole with mud. Spot 30 sacks cement 6450'-6300'. Run free pipe and cut casing (4700'). Spot 50 sacks cement 100' in and out of casing. Spot 75 sacks cement plugs 3900'-3700' and 2150'-1950'. Spot 70 sacks cement 1700'-1550' across intermediate string shoe and 10 sacks cement at surface with the marker.

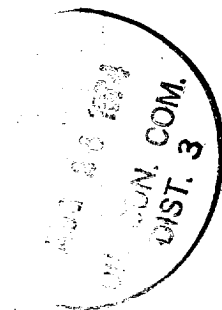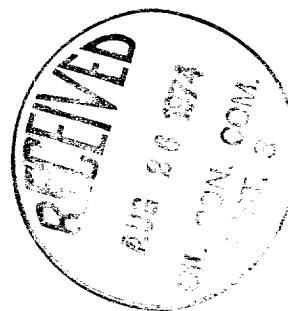

18. I hereby certify that the foregoing is true and correct

SIGNED Alvin R. Marx

TITLE Field Foreman

DATE 8-23-74

(This space for Federal or State office use)

APPROVED BY \_\_\_\_\_

TITLE \_\_\_\_\_

DATE \_\_\_\_\_

CONDITIONS OF APPROVAL, IF ANY:

\*See Instructions on Reverse Side