
1-File 2-Mountain Fuel 6 MMS Form 9-231 UNITED STATES (May 1963) DEPARTMENT OF THE INTERIOR (Other instructions on reverse side) Form approved. Budget Bureau No. 42-R1424. 5. LEASE DESIGNATION AND SERIAL NO. GEOLOGICAL SURVEY NM/17781 SUNDRY NOTICES AND REPORTS ON WELLS 6. IF INDIAN, ALLOTTEE OR TRIBE NAME (Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.

Use "APPLICATION FOR PERMIT—" for such proposals.) WEILL 7. UNIT AGREEMENT NAME WELL X OTHER 2. NAME OF OPERATOR 8. FARM OR LEASE NAME Dugan Production Corp. Paul Revere 3. ADDRESS OF OPERATOR 9. WELL NO. Box 234, Farmington, NM 87401 LOCATION OF WELL (Report location clearly and in accordance with any State See also space 17 below.)
At surface #203 10. FIELD AND POOL, OR WILDCAT Wildcat /2/ 1190' FNL - 1000' FWL GEOLOGICAL SURVEY 11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA FARMINGTON, N. M. Sec 22 T26N R13W. 14. PERMIT NO. 15. ELEVATIONS (Show whether DF, RT, GR, etc.) 12. COUNTY OR PARISH | 13. STATE 6212' GR San Juan 16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data TEST WATER SHUT-OFF PULL OR ALTER CASING WATER SHUT-OFF REPAIRING WELL FRACTURE TREAT MULTIPLE COMPLETE FRACTURE TREATMENT ALTERING CASING SHOOT OR ACIDIZE ABANDON* SHOOTING OR ACIDIZING ABANDONMENT* REPAIR WELL CHANGE PLANS (NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.) 17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any nent to this work.) • directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) • Request permission to plug and abandon as follows: Fill 2-7/8" O.D., 6.4#, J-55, 10R, NUE tubing for casing from PBTD to surface using 39 sx class "B neat cement, total slurry 45.4 SCF. 2. Install permanent dry hole marker. Fill all pits. Clean well location of all equipment, pipe, junk, and trash. Perform surface restoration as specified by the surface management agency or land owner next planting season. Cut off or remove tie-downs.

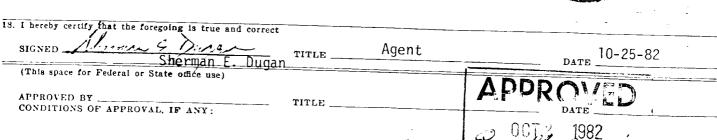

*See Instructions on Reverse Side

JAMES F. SIMS

DISTRICT ENGINEER