

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE*
(Other instructions on re-
verse side)


Form approved.
Budget Bureau No. 42-R1424.
5. LEASE DESIGNATION AND SERIAL NO.

105,655

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☒ OTHER	7. UNIT AGREEMENT NAME Gallegos Canyon Unit
2. NAME OF OPERATOR PAN AMERICAN PETROLEUM CORPORATION	8. FARM OR LEASE NAME
3. ADDRESS OF OPERATOR 501 Airport Drive, Farmington, New Mexico 87401	9. WELL NO. 69
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.) At surface 1016' FWL and 1016' FWL	10. FIELD AND POOL, OR WILDCAT West Kutz-Pictured Cliffs
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, FT, GR, etc.) 5370' GL
11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Section 28, T-28-N, R-12-W	
12. COUNTY OR PARISH Sag Juan	
13. STATE New Mexico	

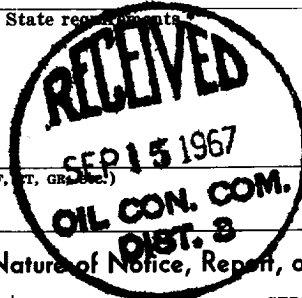

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

As a result of the well's production decreasing to an uneconomical level, we plan to plug and abandon as follows:

1. Pull tubing.
2. Pump 30 sack cement plug down 5-1/2" casing and squeeze, leaving cement plug at about 1200' (130' above casing shoe). Hole and casing capacity 24 sacks, leaving 6 sacks squeezed into formation.
3. Load hole with mud.
4. Spot 5 sacks cement 40' to surface.
5. Attempt to pump water down bradenhead. If able to pump down 8-5/8" - 5-1/2" annulus, cement with 16 sacks (surface to 100'). If unable to pump water down bradenhead, spot 5-10 sacks in annulus.
6. Cut off wellhead, erect PXA marker, and clean up location.

18. I hereby certify that the foregoing is true and correct

SIGNED G. W. Eaton, Jr.
G. W. Eaton, Jr.

TITLE Ares Engineer

DATE September 13, 1967

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

*See Instructions on Reverse Side

U. S. GEOLOGICAL SURVEY

Instructions

General: This form is designed for submitting proposals to perform certain well-operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1963-O-695329

607-451

