

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☒ OTHER ☐		5. LEASE DESIGNATION AND SERIAL NO. NM 013685
2. NAME OF OPERATOR El Paso Natural Gas Company		6. IF INDIAN, ALLOTTEE OR TRIBE NAME
3. ADDRESS OF OPERATOR Box 990, Farmington, New Mexico		7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 990'S, 990'W		8. FARM OR LEASE NAME Schwerdtfeger
14. PERMIT NO.		9. WELL NO. 1
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6067' DF		10. FIELD AND POOL, OR WILDCAT Bianco Mesa Verde
		11. SEC. T., R., M., OR B.L. AND SURVEY OR AREA Sec. 27, T-31-N, R-9-W N.M.P.M.
		12. COUNTY OR PARISH San Juan
		13. STATE New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐	WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐	FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☒	SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
REPAIR WELL ☐	CHANGE PLANS ☐	(Other) ☐	

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) *

The mechanical condition of this well is such that a workover and recompletion in the old hole is uneconomical. It is therefore intended to plug and abandon this well in the following manner:


Pull tubing, if tubing is stuck shoot off below the 5 1/2" casing shoe.

Set a cast iron cement retainer on the tubing near the bottom of the 5 1/2" casing and squeeze the open hole with 200 sacks of cement.

Perforate the 5 1/2" casing at 1660' and block squeeze the 5 1/2" annulus with 100 sacks of cement.

Remove the wellhead and install a 4" x 4' plug and abandonment plug in a 5 sack cement plug in the top of the surface casing.


No casing recovery is planned.

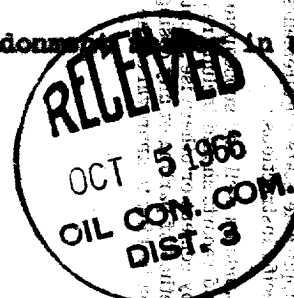

18. I hereby certify that the foregoing is true and correct

SIGNED _____	TITLE Petroleum Engineer	DATE 10-4-66
(This space for Federal or State office use)		
APPROVED BY 76	TITLE _____	
CONDITIONS OF APPROVAL, IF ANY:		

*See Instructions on Reverse Side

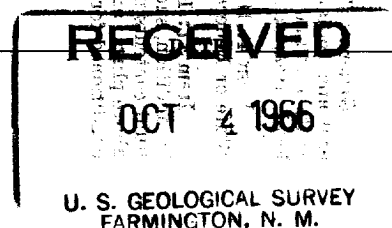

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local area or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 1: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 2: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present, significant fluid content not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of placing, liner or tubing pulled and the depth of any left in the hole; method of closing top of well; and date well site conditions or final inspection log to be approved for abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1981 O-685729

687-351