

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.5. LEASE DESIGNATION AND SERIAL NO.
Ute Mountain Tribal

Contract 14-20-604-82

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

Ute Mountain Tribe
of Indians

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Ute-Indian

9. WELL NO.

5-20

10. FIELD AND POOL, OR WILDCAT

Verde Gallup

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

20-31N-14W N.M.P.M.

12. COUNTY OR PARISH
San Juan13. STATE
N. Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐	
2. NAME OF OPERATOR Empire State Oil Company	
3. ADDRESS OF OPERATOR Box 871 Thermopolis, Wyoming	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 2080' FSL & 330' FWL Sec. 20-T31N-R14W	
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 5615 GR

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

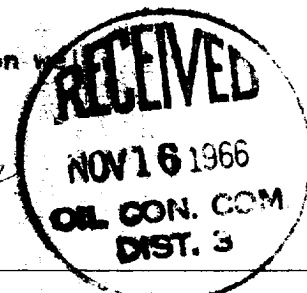
ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

We propose to plug and abandon this well as follows:

1. Cover perfs 2935-3066 with cement and bring cement up into 5½" casing to 2885'.
2. Cut off 5½" casing at lowest free point and pull casing.
3. Set 100 foot cement plug extending from 50 feet down inside casing to 50 feet above cut-off point.
4. Set 50 foot cement plug in bottom surface casing.
5. Set a 10 sack plug in top of surface casing.
6. Erect regulation dry hole marker, clean location and abandon well.

Leave heavy mud between all plugs

18. I hereby certify that the foregoing is true and correct

SIGNED

Thomas E. Fenno

TITLE

Engineer

DATE 11-9-66

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

APPROVED

NOV 14 1966

E. J. GARDNER

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any access to Federal instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and regulations, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.