

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐		5. LEASE DESIGNATION AND SERIAL NO. Ute Mountain Tribe Contract 14-20-604-82
2. NAME OF OPERATOR Empire State Oil Company		6. IF INDIAN, ALLOTTEE OR TRIBE NAME Ute Mountain Tribe of Indians
3. ADDRESS OF OPERATOR Box 871 Thermopolis, Wyoming		7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 660' FNL and 660' FEL Sec. 20-T31N-R14W		8. FARM OR LEASE NAME Ute-Indian
14. PERMIT NO.		9. WELL NO. 4-25
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 5719 GR		10. FIELD AND POOL, OR WILDCAT Verde Gallup
		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA 20-31N-14W N.M.P.M.
		12. COUNTY OR PARISH San Juan
		13. STATE N. Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

We propose to plug and abandon this well as follows:

1. Cover perfs (2670-2792) with cement and bring cement up into 5½' casing to 2620.
2. Cut off 5½' casing at lowest free point and pull casing.
3. Set 100 foot cement plug extending from 50 feet down inside casing to 50 feet above cut-off point.
4. Set 50 foot cement plug in bottom surface casing.
5. Set a 10 sack plug in top of surface casing.
6. Erect regulation dry hole marker, clean location and abandon.

Leave heavy mud between all plugs.

18. I hereby certify that the foregoing is true and correct

SIGNED

Thomas E. Fenno

TITLE

Engineer

DATE

11-9-66

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:


TITLE

DATE

APPROVED

NOV 14 1966

*See Instructions on Reverse Side

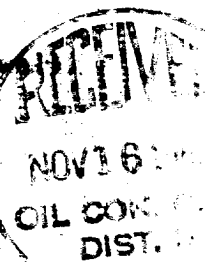

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.