Form 9-331 (May 1963)

UNITED STATES DEPARTMENT OF THE INTERIOR (Other Instructions on re-

SUBMIT IN TRIPLICATE*

Form approved. Budget Bureau No. 42-R1424. 5. LEASE DESIGNATION AND SERIAL NO.

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

GEOLOGICAL SURVEY

SUNDRY NOTICES AND REPORTS ON WELLS

301 1D1(1) 10 11 CES 1 13 12 11 CES 1 1 1 CES 1
(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use "APPLICATION FOR PERMIT—" for such proposals.)

7.	UNIT	AGREEMENT	NAME

8. FARM OR LEASE NAME <u>Vanderslice</u>

SF-078215-A

	WE'L		GAS WELL		
2.	NAME	OF OF	ERATOR	_	

Aztec Oil & Gas Company

P. O. Drawer 570, Farmington, New Mexico
LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

1575' FNL & 875' FEL

OTHER

15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6227' GR

9. WELL NO.

10. FIELD AND POOL, OR WILDCAT Blanco Mesa Verde

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Section 18, T32N, R10W

12. COUNTY OR PARISH 13. STATE San Juan New Mexico

16.

14. PERMIT NO.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL (Other)

PULL OR ALTER CASING MULTIPLE COMPLETE ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF FRACTURE TREATMENT SHOOTING OR ACIDIZING

REPAIRING WELL ALTERING CASING ABANDONMENT*

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)


17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

PROPOSE TO:

Spot plug across Mesa Verde perfs from 4800' to 5146'. (15 sacks) 1.

(Other) .

- Take stretch on 2-7/8" casing. Shoot off and recover same.
- Perforate Ojo Alamo at 2100' and squeeze inside and outside pipe with 100 sacks.
- Set 100 sack plug at surface.
- Set dry hole marker.

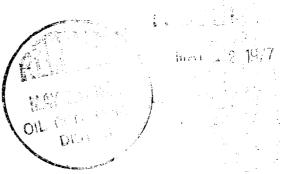

							٠.			
18.	I hereby certify that the foregoing is true and correct	TITLE	District	Production	Manager	DATE	May	10,	1977	
	(This space for Federal or State office use)							-		=
	APPROVED BY CONDITIONS OF APPROVAL, IF ANY:	TITLE			 	DATE	 -		1 11 1 .	

