

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPI
(Other instructions
verse side)TE*
re-Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ <u>Water Injection Well</u>	7. UNIT AGREEMENT NAME <u>Maljamar (Gratere)</u>
2. NAME OF OPERATOR <u>Maljamar Oil Company</u>	8. FARM OR LEASE NAME <u>Maljamar Unit</u>
3. ADDRESS OF OPERATOR <u>Maljamar, New Mexico</u>	9. WELL NO. <u>3</u>
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface <u>Unit 1, Maljamar, New Mexico, Sec. 3, T-17-S-32-E, R-10W</u>	10. FIELD AND POOL OR WILDCAT <u>Maljamar (Gratere)</u>
14. PERMIT NO. <u>4370.1</u>	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA <u>Sec. 3, T-17 S-32-E, R-10W</u>
15. ELEVATIONS (Show whether DF, RT, GR, etc.) <u>GR 4370.1</u>	12. COUNTY OR PARISH <u>Lea</u>
	13. STATE <u>New Mexico</u>

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐FRACTURE TREAT ☐SHOOT OR ACIDIZE ☐REPAIR WELL ☐(Other) ☐PULL OR ALTER CASING ☐MULTIPLE COMPLETE ☐ABANDON* ☐CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐FRACTURE TREATMENT ☐SHOOTING OR ACIDIZING ☐(Other) ☐REPAIRING WELL ☐ALTERING CASING ☐ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Work to commence first quarter 1975. Federal office will be notified prior to commencing actual drilling operations.

1. Run and set 18" on tubing to 400', spot 2500 cement on top of 18" with tubing.

2. Flood hole with mud laden fluid.

3. Determine true point of casing (approx. 300').

4. Shoot off casing, pull at 100' down 5" casing.

5. Run tubing, open ended to 5' below casing; shut and spot 3500 cement. Pull tubing to 150', spot 3500 cement. Spot 1000 cement 20' to surface.

6. Weld steel plate with 4" orator. Place fill pit & cellar. Clean up location.

AMENDMENT: Place additional cement plugs as follows:

1. 25 sacks inside 5 1/2" at 3100-3300 feet.

2. 35 sack plug at 2400-2500 feet.

3. 35 sack plug at 1200-1300 feet.

18. I hereby certify that the foregoing is true and correct

SIGNED

J. E. Bueh

TITLE

Drilling Supervisor

DATE


Dec. 26, 1974

(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

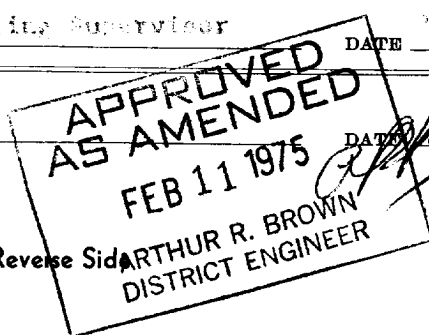

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1972-782-241/207 REGION NO. 8

