

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN WELL LOGS
(Other instructions on reverse side)Form approved.
Budget Bureau No. 42 R1424
LEASE DESIGNATION AND SERIAL NO.

101 - 3016

IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL ☒ WELL ☐ GAS ☐ WELL ☐ OTHER ☐	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR HARRIS, BOYER & STOVALL	8. FARM OR LEASE NAME Young Federal
3. ADDRESS OF OPERATOR Box 1940 Graham, Texas 76046	9. WELL NO. 5
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.) At surface	10. FIELD AND POOL OR WILDCAT Young Queen
5. - Section 19 - T19S-R32E	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA E-19-19S-32E
14. PERMIT NO.	12. COUNTY OR PARISH
15. ELEVATIONS (Show whether DF, RT, G, etc.)	13. STATE

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

TEST WATER SHUT-OFF	BUILD OR ALTER CASING
FRAC TREAT	MULTIPLE COMPLETION
SHOOTING OR ACIDIZING	ABANDON*
REPAIR WELL	CHANGE PLANS
(Other)	

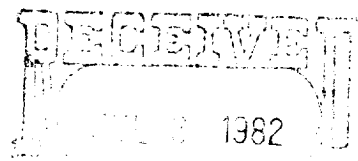
WATER SHUT-OFF	REPAIRING WELL
FRAC TREATMENT	ALTERING CASING
SHOOTING OR ACIDIZING	ABANDONMENT*
(Other)	

(NOTE: Report results of multiple completion or Well Completion or Recommendation Report and Log form.)

17. (If this is a notice of intention to complete operations, clearly state all pertinent details, and give pertinent dates including estimated date of starting any work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Propose to plug and abandon subject well as follows:

1. Set C.I.C.P. 1 3/8" 3650'. Dump bail 35' cement on top of plug.
2. Set 100' cement plug (50' in & 50' out) in 4 1/2" casing stub.
3. Set 100' cement plug (50' in & 50' out) in 8 3/8" surface shoe. (Shoe 1 3/8")
4. Set 15 in. cement plug at top of surface and install dry hole marker.

GEOLOGICAL SURVEY
HOBBS, NEW MEXICO

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

Production Superintendent

DATE June 15, 1982

This space for Federal or State office use

APPROVED BY

TITLE

CONDITIONS OF APPROVAL IF ANY:

*See Instructions on Reverse Side

