

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEYSUBMIT IN TRIPI  
(Other instructions  
verse side)TE-  
re-Form approved.  
Budget Bureau No. 42-R1424.

## SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals.)

|                                                                                                                                                                                                                                                |                                                                   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
| 1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>                                                                                                                               | 7. UNIT AGREEMENT NAME<br>*                                       |
| 2. NAME OF OPERATOR<br><b>Shall Oil Company</b>                                                                                                                                                                                                | 8. FARM OR LEASE NAME<br><b>Federal 1</b>                         |
| 3. ADDRESS OF OPERATOR<br><b>P. O. Box 1838, Roswell, New Mexico 88201</b>                                                                                                                                                                     | 9. WELL NO.<br><b>1</b>                                           |
| 4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*<br>See also space 17 below.)<br>At surface <b>1650' NW &amp; 1980' NW (SE/4 NW/4) Section 25,<br/>T-20-S, R-34-E, N1M, Lea County, New Mexico</b> | 10. FIELD AND POOL, OR WILDCAT<br><b>Lee Bone Spring, South</b>   |
| 14. PERMIT NO.                                                                                                                                                                                                                                 | 15. ELEVATIONS (Show whether DF, RT, GR, etc.)<br><b>3774' DF</b> |
|                                                                                                                                                                                                                                                | 12. COUNTY <b>Lea</b> 13. STATE <b>New Mexico</b>                 |

16.

## Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

## NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐FRACTURE TREAT ☐SHOOT OR ACIDIZE ☐REPAIR WELL ☐

(Other)

PULL OR ALTER CASING ☐MULTIPLE COMPLETE ☐ABANDON\* ☐CHANGE PLANS ☐**Remedial** ☒

## SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐FRACTURE TREATMENT ☐SHOOTING OR ACIDIZING ☐

(Other)

REPAIRING WELL ☐ALTERING CASING ☐ABANDONMENT\* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*

1. Run tubing open-ended and circulate mud in hole.
2. Spot 40 sz plug over perforations 10,064'-10,074'.
3. Pull tubing, locate free point, shoot and pull 7" casing.
4. Run tubing and spot the following plugs:  
40 sz over 7" casing stub  
40 sz at base of 9 3/8" casing (5490').
5. Pull tubing to 4000', WOC 4 hours and circulate hole w/ fresh water.
6. Set CIBP at 3910' and cap w/cement.
7. Perforate 9 3/8" casing at 3868', 3857', 3848', 3831', 3812', 3774', 3767', 3745', 3735', 3720' and 3710' w/case 3/8" JSPY (total 11 holes).
8. Spot 700 gallons 15% HCA w/fo additive on bottom, set 15% HCA at approximately 3600'. Displace acid to formation and treat w/additional 2000 gallons 15% HCA.
9. Swab test.

18. I hereby certify that the foregoing is true and correct

Original Signed By  
SIGNED **C. R. Coffay****C. R. Coffay**

TITLE

Acting District

Exploitation Engineer

DATE

**June 28, 1965**


(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

\*See Instructions on Reverse Side

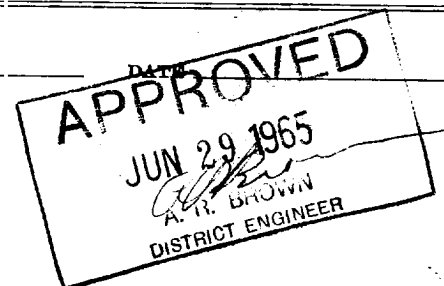

## Instructions

**General:** This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

**Item 4:** If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

**Item 17:** Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.