Form 3160-5 (August 2007)

UNITED STATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT

FORM APPROVED OMB NO. 1004-0135 Expires: July 31, 2010

SUNDRY NOTICES AND REPORTS ON WELLS Do not use this form for proposals to drill or to re-enter an abandoned well. Use form 3160-3 (APD) for such proposals.					5. Lease Serial No. NMNM04411 6. If Indian, Allottee of	or Tribe Name	
SUBMIT IN TRIPLICATE - Other instructions on reverse side.					7. If Unit or CA/Agreement, Name and/or No. NMNM91055X		
1. Type of Well ☐ Gas Well ☐ Other					8. Well Name and No. WLSU 02		
2. Name of Operator Contact: BRENDA F RATHJEN ENERGEN RESOURCES CORPORATIONALI: brenda.rathjen@energen.com					9. API Well No. 30-025-31767-00-S1		
3a. Address 3300 NORTH A STREET BLDG 4 SUITE 100 Ph: 432-688-33 MIDLAND, TX 79705				e)) 10. Field and Pool, or Exploratory W LOVINGTON		
4. Location of Well (Footage, Sec., T., R., M., or Survey Description)					11. County or Parish, and State		
Sec 33 T15S R35E SESE 330FSL 725FEL					LEA COUNTY, NM		
12. CHECK APPR	ROPRIATE BOX(ES) TO	O INDICATE	NATURE OF	NOTICE, RI	EPORT, OR OTHEI	R DATA	
TYPE OF SUBMISSION	TYPE OF ACTION						
Notice of Intent ■	☐ Acidize	☐ Dec	Deepen		tion (Start/Resume)	■ Water Shut-Off	
	☐ Alter Casing	☐ Fra	cture Treat	☐ Reclam	ation	■ Well Integrity	
☐ Subsequent Report	Casing Repair	ising Repair		□ Recomp	olete	☐ Other	
☐ Final Abandonment Notice	☐ Change Plans	🛛 Plu	g and Abandon	☐ Tempor	arily Abandon		
	☐ Convert to Injection	vert to Injection Plug Back		■ Water I	☐ Water Disposal		
13. Describe Proposed or Completed Ope If the proposal is to deepen directiona Attach the Bond under which the wor following completion of the involved testing has been completed. Final Ab determined that the site is ready for fi Energen Resources requests a	Illy or recomplete horizontally, k will be performed or provide operations. If the operation re andonment Notices shall be fil nal inspection.)	give subsurface the Bond No. o sults in a multip ed only after all	locations and meas n file with BLM/BI le completion or rec	sured and true ve A. Required sul completion in a	ertical depths of all pertine bsequent reports shall be new interval, a Form 3160	ent markers and zones. filed within 30 days 0-4 shall be filed once	
						_	
Attached is the proposed Plug Thanks, Jim!	SEE ATTACHED FOR CONDITIONS OF APPROVAL						
					changes		
RECLAMATION PROCEDURE ATTACHED							
14. I hereby certify that the foregoing is	true and correct. Electronic Submission # For ENERGEN RES Committed to AFMSS for p	SOURCES CO	RPORATION, se	ent to the Hob	bs		
Name (Printed/Typed) BRENDA F RATHJEN			Title REGUI	Title REGULATORY ANALYST			
Signature (Electronic S	ubmission)		Date 03/24/2	2015			
	THIS SPACE FO	OR FEDERA	L OR STATE	OFFICE U	SE		
Approved By ans	R. ams_		Title Sz	AET		3-31-15 ⁻	
Conditions of approval, if any, are attached termy that the applicant holds legal or equ which would entitle the applicant to conduc	itable title to those rights in the		Office	FD	•	<u> </u>	
Title 18 U.S.C. Section 1001 and Title 43 U.S. States any false, fictitious or fraudulent st	J.S.C. Section 1212, make it a tatements or representations as	crime for any per to any matter w	rson knowingly and ithin its jurisdiction	d willfully to ma	ike to any department or a	agency of the United	

** BLM REVISED ** BLM REVISED ** BLM REVISED ** BLM REVISED **

FOR RECORD ONLY

138 4/8/2015

APR 1.4 2013



WLSU #2

West Lovington Strawn Unit Lea County, NM

330' FSL and 725' FEL Sec 33, T15S, R35E API — 30-025-31767 Completion Date: 12/92

Plug & Abandon Procedure

1 MIRU Well Service Unit. NDWH, NU BOP.

2 Dump 25 sx cement on CIBP at 11,396'. هود حمع . (210 مام)

3 Circulate hole to 10 ppg MLF # Add plugs Below.

5 Spot 25 sxs cement plug at 7,150' and displace to 7,050'. WOC and tag. 160 from 6325-6165

Perforate and squeeze at 4,660' w/25 sxs cement plug and displace to 4,560'. WOC and 140 plug 4525

6 tag.

Perforate and squeeze at 3,000' w/25 sxs cement plug and displace to 2,900'. WOC and 130 plus 287:

7 tag. 2000'
Perforate and squeeze at 4,800' w/25 sxs cement plug and displace to 1,700'. WOC and

8 tag.

- 9 Perforate and squeeze at 460' w/125 sxs cement plug. Circulate cement to surface.
- 10 Cut off all casing strings at base of cellar or 3' below restored ground level.
- 11 Cover wellbore with metal plate welded in place or with cement cap.
- 12 Erect capped abandonment marker inscribed with well information.
- 13 Cut off dead man anchors and fill in cellar.

Clean and restore location to natural condition and fulfill any and all regulatory

14 requirements.

* Add Alugs!

- 10920 - 10720 (200° plus) Cisco


- 10640. 10440 (200 plug) Wolfcamp (con combine w/ Cisco


- 8270 - 8090 (180' plug) Abo

TOR RECORD ONLY

BS 4/8/2015

7

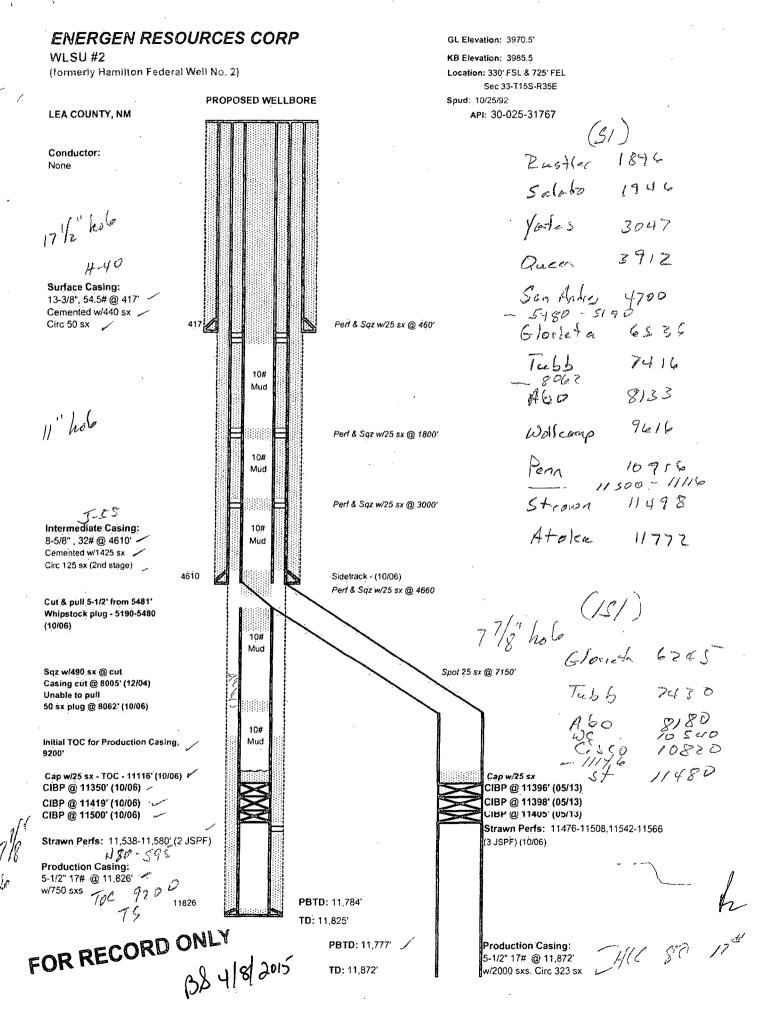

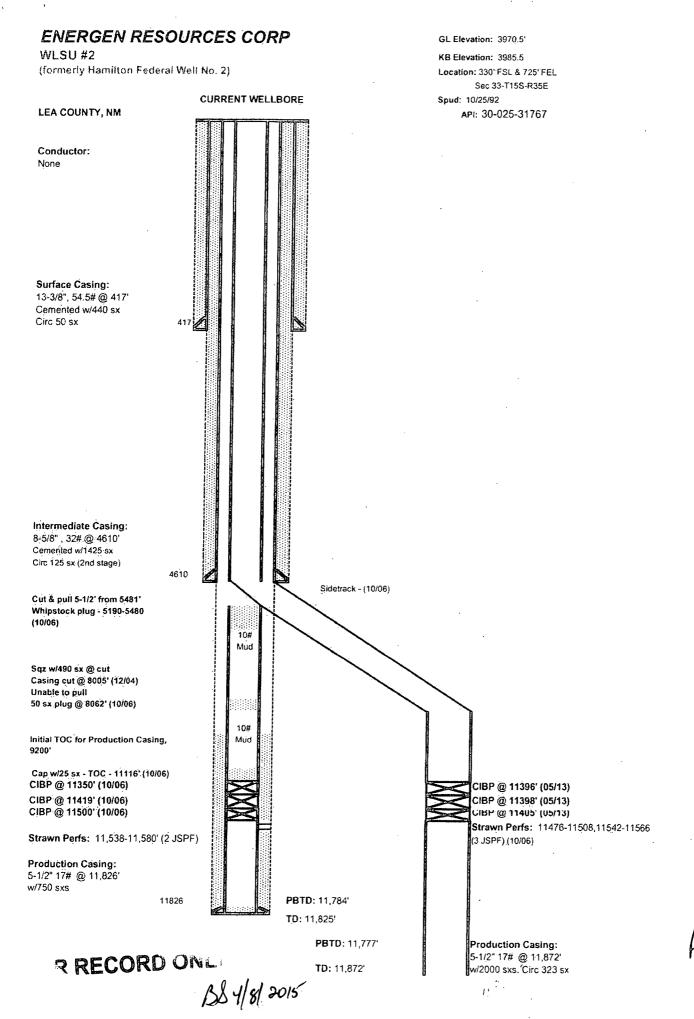

BUREAU OF LAND MANAGEMENT Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 575-234-5972

Permanent Abandonment of Federal Wells Conditions of Approval

Failure to comply with the following Conditions of Approval may result in a Notice of Incidents of Noncompliance (INC) in accordance with 43 CFR 3163.1.

1. Plugging operations shall commence within <u>ninety (90)</u> days from the approval date of this Notice of Intent to Abandon.

If you are unable to plug the well by the 90th day provide this office, prior to the 90th day, with the reason for not meeting the deadline and a date when we can expect the well to be plugged. Failure to do so will result in enforcement action.

The rig used for the plugging procedure cannot be released and moved off without the prior approval of the authorized officer. Failure to do so may result in enforcement action.

- 2. <u>Notification</u>: Contact the appropriate BLM office at least 24 hours prior to the commencing of any plugging operations. For wells in Chaves and Roosevelt County, call 575-627-0272; Eddy County, call 575-361-2822; Lea County, call 575-393-3612.
- 3. <u>Blowout Preventers</u>: A blowout preventer (BOP), as appropriate, shall be installed before commencing any plugging operation. The BOP must be installed and maintained as per API and manufacturer recommendations. The minimum BOP requirement is a 2M system for a well not deeper than 9,090 feet; a 3M system for a well not deeper than 13,636 feet; and a 5M system for a well not deeper than 22,727 feet.
- 4. <u>Mud Requirement:</u> Mud shall be placed between all plugs. Minimum consistency of plugging mud shall be obtained by mixing at the rate of 25 sacks (50 pounds each) of gel per 100 barrels of **brine** water. Minimum nine (9) pounds per gallon.
- 5. <u>Cement Requirement</u>: Sufficient cement shall be used to bring any required plug to the specified depth and length. Any given cement volumes on the proposed plugging procedure are merely estimates and are not final. Unless specific approval is received, no plug except the surface plug shall be less than 25 sacks of cement. Any plug that requires a tag will have a minimum WOC time of 4 hours.

In lieu of a cement plug across perforations in a cased hole (not for any other plugs), a bridge plug set within 50 feet to 100 feet above the perforations shall be capped with 25 sacks of cement. If a bailer is used to cap this plug, 35 feet of cement shall be sufficient. Before pumping or bailing cement on top of CIBP, tag will be required to verify depth. Based on depth, a tag of the cement may be deemed necessary.

FOR RECORD ONLY

BS 4/8/2015

Unless otherwise specified in the approved procedure, the cement plug shall consist of either Neat Class "C", for up to 7,500 feet of depth or Neat Class "H", for deeper than 7,500 feet plugs.

- 6. <u>Dry Hole Marker</u>: All casing shall be cut-off at the base of the cellar or 3 feet below final restored ground level (whichever is deeper). The BLM is to be notified a minimum of 4 hours prior to the wellhead being cut off to verify that cement is to surface in the casing and all annuluses. Wellhead cut off shall commence within ten (10) calendar days of the well being plugged. If the cut off cannot be done by the 10th day, the BLM is to be contacted with justification to receive an extension for completing the cut off.
- The well bore shall then be capped with a 4-inch pipe, 10-feet in length, 4 feet above ground and embedded in cement, unless otherwise noted in COA (requirements will be attached). The following information shall be permanently inscribed on the dry hole marker: well name and number, name of the operator, lease serial number, surveyed location (quarter-quarter section, section, township and range or other authorized survey designation acceptable to the authorized officer such as metes and bounds).
- 7. <u>Subsequent Plugging Reporting:</u> Within 30 days after plugging work is completed, file one original and three copies of the Subsequent Report of Abandonment, Form 3160-5 to BLM. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. **Show date well was plugged.**
- 8. <u>Trash</u>: All trash, junk and other waste material shall be contained in trash cages or bins to prevent scattering and will be removed and deposited in an approved sanitary landfill. Burial on site is not permitted.

Following the submission and approval of the Subsequent Report of Abandonment, surface restoration will be required. See attached reclamation procedure.

J. Amos 3/6/11

FOR RECORD ONLY

B& 4/8/ 2015



United States Department of the Interior

BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 E. Greene St. Carlsbad, New Mexico 88220-6292 www.blm.gov/nm



In Reply Refer To: 1310

Reclamation Objectives and Procedures

Reclamation Objective: Oil and gas development is one of many uses of the public lands and resources. While development may have a short- or long-term effect on the land, successful reclamation can ensure the effect is not permanent. During the life of the development, all disturbed areas not needed for active support of production operations should undergo "interim" reclamation in order to minimize the environmental impacts of development on other resources and uses. At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its predisturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, redistribute the native soils, provide erosion control as needed, rip and seed as specified in the original APD COA. This will apply to well pads, facilities, and access roads. Barricade access road at the starting point. If reserve pits have not reclaimed due to salts or other contaminants, submit a plan for approval, as to how you propose to provide adequate restoration of the pit area.

- 1. The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of Operations must include adequate measures for stabilization and reclamation of disturbed lands. Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD process as per Onshore Oil and Gas Order No. 1.
- 2. For wells and/or access roads not having an approved plan, or an inadequate plan for surface reclamation (either interim or final reclamation), the operator must submit a proposal describing the procedures for reclamation. For interim reclamation, the appropriate time for submittal would be when filing the Well Completion or Recompletion Report and Log (Form 3160-4). For final reclamation, the appropriate time for submittal would be when filing the Notice of Intent, or the Subsequent Report of Abandonment, Sundry Notices and Reports on Wells (Form 3160-5). Interim reclamation is to be completed within 6 months of well completion, and final reclamation is to be completed within 6 months of well abandonment.
- 3. The operator must file a Subsequent Report Plug and Abandonment (Form 3160-5) following the plugging of a well.
- 4. Previous instruction had you waiting for a BLM specialist to inspect the location and provide you with reclamation requirements. If you have an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It would be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation

FOR RECORD ONLY

BS 4/8/2015

1

equipment to ensure that it meets BLM objectives. Upon conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a specialist to inspect the location to verify work was completed as per approved plans.

- 5. The approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been reestablished. If the BLM objectives have not been met the operator will be notified and corrective actions may be required.
- 6. It is the responsibility of the operator to monitor these locations and/or access roads until such time as the operator feels that the BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the BLM objectives have been met submit a Final Abandonment Notice (FAN), Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
- 7. At this time the BLM specialist will inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability of the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

Jim Amos Supervisory Petroleum Engineering Tech 575-234-5909, 575-361-2648 (Cell)

Duncan Whitlock Environmental Protection Specialist 575-234-5926

Linda Denniston Environmental Protection Specialist 575-234-5974 Cody Layton Supervisory Multi Resources 575-234-5959

Trishia Bad Bear Natural Resource Specialist 575-393-3612

Jeffery Robertson Natural Resource Specialist 575-234-2230

Solomon Hughes Natural Resource Specialist 575-234-5951

FOR RECORD ONLY

BS 4/8/2015