Form 3160-5 (March 2012)

UNITED STATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT

FORM APPROVED OMB No. 1004-0137 Expires: October 31, 2014

ease Serial No. NMLC062486

SUNDRY NOTICES AND REPORTS ON WELLS 6. If Indian, Allottee or Tribe Name Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals. 7. If Unit of CA/Agreement, Name and/or No. SUBMIT IN TRIPLICATE - Other instructions on page 2. 1. Type of Well 8. Well Name and No. DRICKEY QUEEN SAND UNIT #805 Oil Well Gas Well Other INJECTION 2. Name of Operator API Well No. 30-005-00978 LEGACY RESERVES OPERATING LP 3a. Address 3b. Phone No. (include area code) 10. Field and Pool or Exploratory Area MOBBS OCD PO BOX 10848 MIDLAND, TX 79702 CAPROCK; QUEEN 432-689-5200 4. Location of Well (Footage, Sec., T.,R.,M., or Survey Description) 11. County or Parish, State CHAVES CO., NM 660 FSL & 660 FEL, UNIT LETTER P. SEC. 4, T14S, R31E 12. CHECK THE APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT OR OTHER DATA RECEIVED TYPE OF SUBMISSION TYPE OF ACTION Acidize Deepen Production (Start/Resume) Water Shut-Off Notice of Intent Alter Casing Fracture Treat Reclamation Well Integrity Casing Repair New Construction Recomplete Other Subsequent Report Change Plans Plug and Abandon Temporarily Abandon Final Abandonment Notice Convert to Injection Plug Back Water Disposal 13. Describe Proposed or Completed Operation: Clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recomplete horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports must be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 must be filed once testing has been completed. Final Abandonment Notices must be filed only after all requirements, including reclamation, have been completed and the operator has determined that the site is ready for final inspection.) 05/26/2015 Ran MIT, pressure casing to 520#, for 31 minutes. Chart attached. Well is now TA'd. SEE ATTACHED FOR APPROVED FOR CONDITIONS OF E-PERMITTING < SWD INJECTION> RBDM. CONVERSION **RETURN TO CHG LOC CSNG** P&A NR P&AR 14. I hereby certify that the foregoing is true and correct. Name (Printed/Typed) Title REGULATORY TECH LAURA PINA Date 06/10/2015

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved by

/s/ Robert Hoskinson


Conditions of approval, if any, are attached. Approval of this notice does not warra that the applicant holds legal or equitable title to those rights in the subject lease will entitle the applicant to conduct operations thereon.

Roswell Field

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to all deartiment or agency of the United States any

fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

(Instructions on page 2)

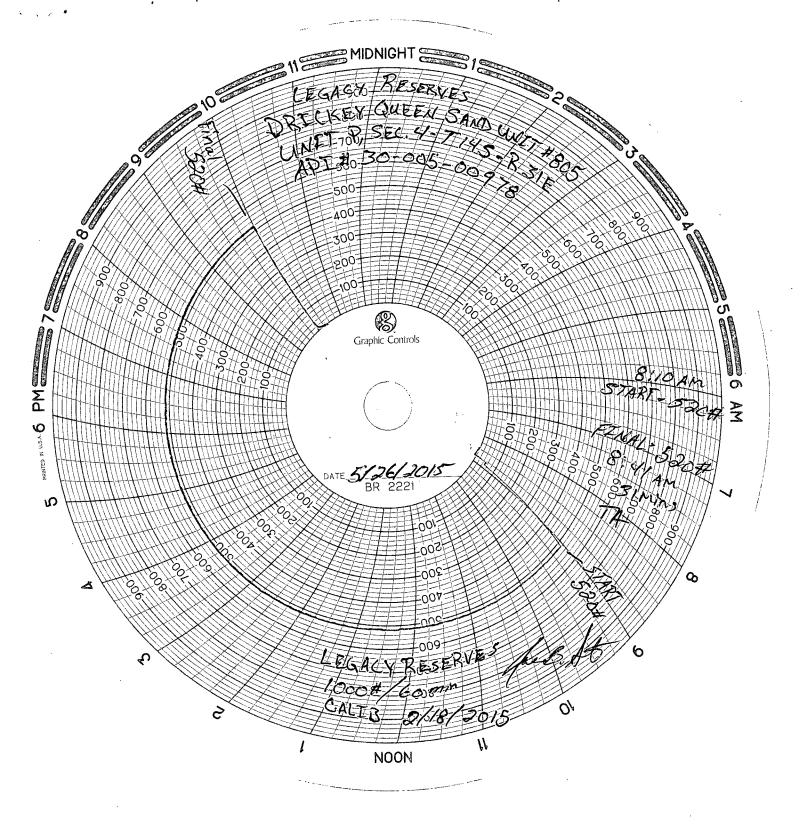

h

BUREAU OF LAND MANAGEMENT Roswell Field Office 2909 West Second Street Roswell, New Mexico 88201 575-627-0272

Temporary Abandonment of Wells on Federal Lands Conditions of Approval

A temporary abandoned well is defined as a completion that is not capable of production in paying quantities but may have value as a service well. Pursuant to 43 CFR 3162.3-4(c), no well may be temporarily abandoned for more than 30 days without the prior approval of the authorized officer.

Temporary Abandonment (TA) status approval requires a successful casing integrity test as follows:

- A Notice of Intent (NOI) Sundry Notice (Form 3160-5) requesting approval to run a mechanical integrity test (MIT) or casing integrity test (CIT).
- 2. A description of the temporary abandonment procedure.
- A. A bridge plug or packer must be installed as close to 50 feet above any open perforations or open hole as possible. If a cement plug is used, the top of the cement must be verified by tagging.
- B. The wellbore must be filled with corrosion inhibited fluid and pressure tested to 500 psi. The casing shall be capable of holding this pressure for at least 30 minutes with a 10% allowable leakoff.
- C. All downhole production/injection equipment (tubing, rods, etc.) shall be removed from the casing if they are not isolated by a packer.
- D. A bradenhead test must be conducted. If the test indicates a problem exists, a remedial plan and time frame for remediation shall be submitted within ninety (90) days of the test.
- E. Contact the BLM Roswell Field Office at least 24 hours prior to the scheduled Casing Integrity Test. For wells in Chaves and Roosevelt County, during office hours or after office hours call (575) 627-0205. Engineer on call during office hours phone (575) 627-0275 or phone (after hours) call (575) 626-5749.

Wells that successfully pass the casing integrity test may be approved for Temporary Abandonment (TA) status up to 12 months.

- 1. Submits a subsequent Sundry Notice (Form 3160-5) requesting TA approval.
- 2. Attaches a clear copy of the original pressure test chart.
- 3. Provided justification why the well should be temporarily abandoned rather than permanently plugged and abandoned and an estimated date that the well will be returned to beneficial use or plugged and abandoned.
- 4. Describes the temporary abandonment procedure.

The TA status could be extended without another casing integrity test provided there was no leak-off during the test and the test was witnesses by a BLM representative.

If the well does not pass the casing integrity test, then the operator shall within 30 days submit to BLM for approval one of the following:

- 1. A procedure to repair the casing so that a TA approval can be granted.
- 2. A procedure to plug and abandon the well.

Ref: IM: NM-95-022 (12/16/1994)

h