#### Received by OCD; 8/21/2024 8:54:09 AM State of New Mexico Phone: (505) 476-3441 Fax: (55) 476-3462 Energy, Minerals and Natural Resources General Information WELL API NO. Phone: (505) 629-6116 30-039-05667 OIL CONSERVATION DIVISION Online Phone Directory Visit: 5. Indicate Type of Lease https://www.emnrd.nm.gov/ocd/contact-us/ 1220 South St. Francis Dr. STATE X FEE Santa Fe, NM 87505 6. State Oil & Gas Lease No. SUNDRY NOTICES AND REPORTS ON WELLS 7. Lease Name or Unit Agreement Name (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A C P STATE DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.) 8. Well Number 1. Type of Well: Oil Well Gas Well Other 001 2. Name of Operator 9. OGRID Number NANCY WILCOX E QUALLS 15501 3. Address of Operator 10. Pool name or Wildcat PO BOX 420 FARMINGTON, NM 87410 **BALLARD PICTURED CLIFFS** 4. Well Location Unit Letter H : 1650 feet from the FNL line and 990 feet from the FEL **NMPM** Section 2 Township 24N Range 06W County RIO ARRIBA 11. Elevation (Show whether DR, RKB, RT, GR, etc.) 6666' 12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data SUBSEQUENT REPORT OF: NOTICE OF INTENTION TO: PERFORM REMEDIAL WORK □ PLUG AND ABANDON $\boxtimes$ REMEDIAL WORK ALTERING CASING □ **TEMPORARILY ABANDON** CHANGE PLANS COMMENCE DRILLING OPNS.□ P AND A PULL OR ALTER CASING MULTIPLE COMPL CASING/CEMENT JOB DOWNHOLE COMMINGLE **CLOSED-LOOP SYSTEM** OTHER: OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion. Pursuant to OCD Order No R-23250 Enduring Resources has been given authorization to plug and abandon the above Nancy Wilcox E Qualls well. Please see Enduring Resources plug and abandon plan and wellbore diagram that are attached. 2/28/1959 Spud Date: Rig Release Date:

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE Heather Huntington

TITLE Permitting Tech

Type or print name Heather Huntington

E-mail address: hhuntington@enduringresources.com

PHONE: 505-636-9751

TITLE

APPROVED BY:

Released to Imaging: 8/22/2024 3:02:59 PM

DATE

# **ENDURING RESOURCES IV, LLC**

#### PLUG AND ABANDONMENT PROCEDURE

WELL: C P State #001 Latitude 36.3451347 N API: 30-039-05667 Longitude 107.4319763 W

ER WELL: 0

**LOCATION:** 1650' FNL & 990' FEL, Sec.2, 24N, 06W

COUNTY: Rio Arriba

STATE: NM

**AFE:** WO01880

<u>PRIVING DIRECTIONS:</u> From the intersection of US HWY 550 & US HWY 64 in Bloomfield, NM:

South on US HWY 550 for 46.4 miles to MM 103.9; Left (North) on CR 378 (just past gas plant) staying on CR 378 for 10.0 miles to T of CR 403; Left (North) for 0.1 miles on CR403 to Y; Right (NorthEast) on CR J36 for 2.0 miles to T; Left (NorthEast) on lease road for 1.2 miles to C P State #001 location entrance on left.

- **NOTES:** 1) All cement volumes assume 100% excess volume outside pipe and 50' excess inside pipe. Cement will be Type III (14.6 ppg and 1.39 cuft/sx), or similar. A stabilizing wellbore fluid with density of 8.3 ppg will be sufficient to balance pressures encountered in the well.
  - 2) Any waste fluids circulated from the well to surface, including excess cement, will be stored in steel tanks and then disposed of at an approved disposal facility.
  - 3) Notify NMOCD prior to beginning P&A well-work operations. Comply with all NMOCD regulations. Obtain approval from NMOCD prior to making any changes or adjustments to the approved procedure.
  - 4) Plugs will be adjusted as necessary depending on the results of of any RCBLs and pressure tests. All logs and pressure test results will be submitted / reported to Regulatory Agencies.
  - 5) Wait on cement, tag, and spot additional cement plugs as necessary depending on results of casing pressure tests.
  - Hold safety meetings daily (minimum) with all personnel on location. Record tubing, casing, and bradenhead pressures daily on reports.
  - 7) Test and install rig anchors, if necessary (if rig does not have a base-beam).

PROCEDURE:

- 1) MIRU daylight pulling unit and associated equipment.
- 2) Blow down well. Kill well, if necessary (well is currently in TA status; should not require blowing down or killing).
- 3) ND WH. NU BOPE. POH with tubing. RU wireline. Run CBL from PBTD to surface.
- 4) PU and TIH with cast iron cement retainer (CICR) on 2-7/8" work-string to: 2,406 '
- 5) Set CICR. Sting out. Load annulus and press test to 500 psi. Sting in and establish injection rate minimum of 2 bpm.
- 6) PLUG #1a: PICTURED CLIFFS PERFORATIONS

Pump 12 sx cement.

Existing Perf holes: 2456 to 2476 5-1/2" CICR: 2,406'

2,476' Plug Coverage: 2,406' to Cement Volume Below CICR: 12 sx **TOTAL** 

12 sx

**7)** Sting out of CR.

## 8) PLUG #1b: FRUITLAND COAL, KIRTLAND, OJO ALAMO PLUG

Pump 61 sx cement.

5-1/2" CICR: 2,406'

Plug Coverage: 2,406' 1,777' to

61 sx Cement Volume Above CICR:

> 61 sx **TOTAL**

9) Pull 3 stands and reverse tubing clean. WO cement. RIH to tag cement @ 1,777 'MD

**10)** RU wireline, perforate from: 868 to MD

4 spf, 90° phase. RD wireline. Attempt to establish circulation.

11) PU and TIH with cast iron cement retainer (CICR) on 2-7/8" work-string to: 818 'MD

12) Set CICR. Sting out. Load annulus and press test to 500 psi. Sting in and establish injection rate minimum of 2 bpm.

13) PLUG #2a: NACIMIENTO TOP + ANNULUS

Pump 226 sx cement. Or until cement circulated to surface.

Perf holes: 868'

Plug Coverage: ' to 868' Below CICR and inside annulus.

Cement Volume: 226 sx

> 226 sx **TOTAL**

14) Sting out of CR.

#### 15) PLUG #2b: NACIMIENTO TOP, SURFACE CASING SHOE and SURFACE

Pump 84 sx cement.

5-1/2" CICR: 818'


Plug Coverage: 818' to


Cement Volume Above CICR: 84 sx

> 84 sx **TOTAL**

- 16) ND BOPE. Cut off casing and wellhead (minimum of 3' below finished grade). Top off annulus and casing with cement, if required. RDMO cement equipment. Install P&A marker to comply with NMOCD regulations. RDMO.
- 17) Complete surface reclamation as per approved reclamation plan.

Created by: G Olson 4/3/2024 **Updated: S** Owens 7/10/2024

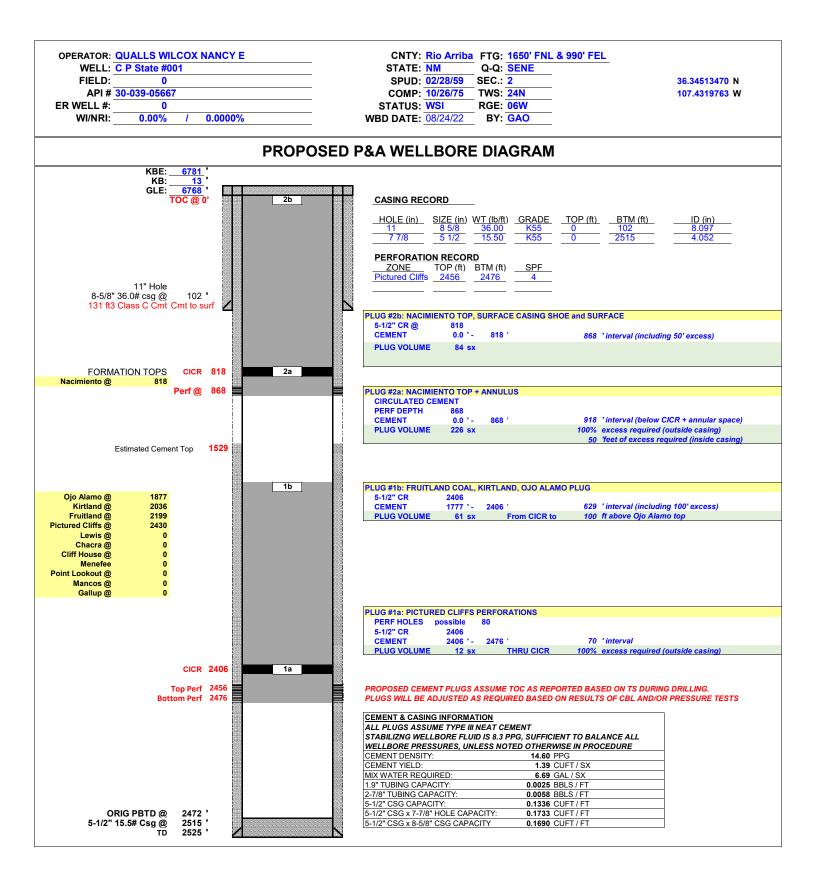

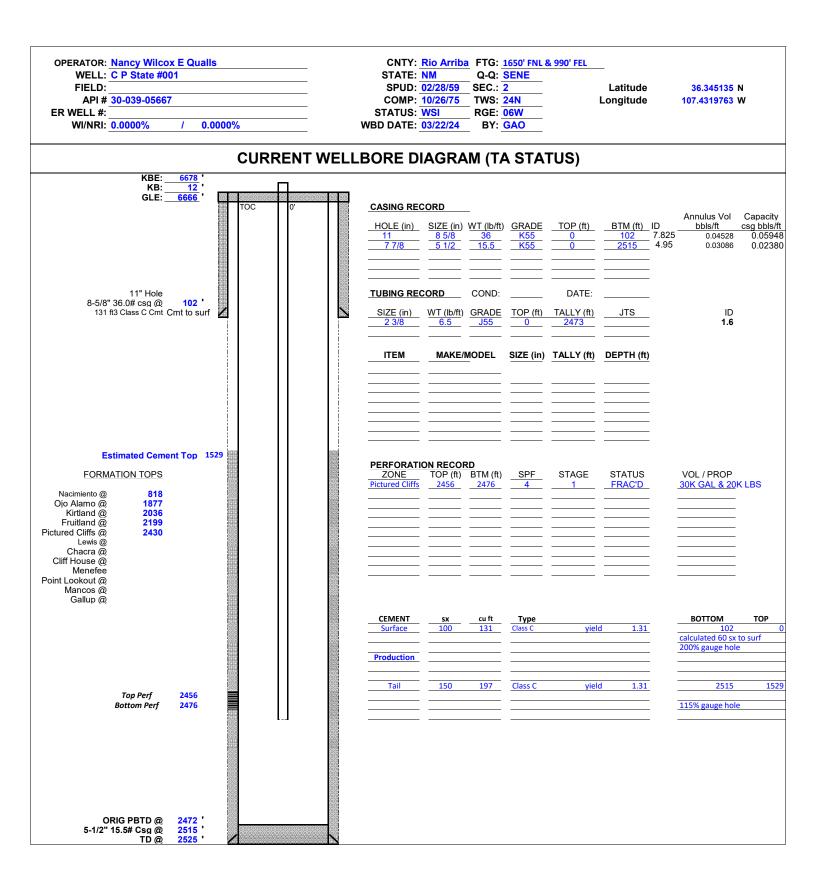

# State of New Mexico Energy, Minerals and Natural Resources Department Oil Conservation Division Standard Plugging Conditions



This document provides OCD's general plugging conditions of approval. It should be noted that the list below may not cover special plugging programs in unique and unusual cases, and OCD expressly reserves the right to impose additional requirements to the extent dictated by project conditions. The OCD also reserves the right to approve deviations from the below conditions if field conditions warrant a change. A C-103F NOI to P&A must be approved prior to plugging operations. Failure to comply with the conditions attached to a plugging approval may result in a violation of 19.15.5.11 NMAC, which may result in enforcement actions, including but not limited to penalties and a requirement that the well be re-plugged as necessary.

- 1. Notify OCD office at least 24 hours before beginning work and seek prior approval to implementing any changes to the C-103 NOI to PA.
  - North Contact, Monica Kuehling, 505-320-0243, monica.kuehling@emnrd.nm.gov
  - South Contact, Gilbert Cordero, 575-626-0830, gilbert.cordero@emnrd.nm.gov
- A Cement Bond Log is required to ensure strata isolation of producing formations, protection of
  water and correlative rights. A CBL must be run or be on file that can be used to properly
  evaluate the cement behind the casing.

Note: Logs must be submitted to OCD via OCD permitting. A copy of the log may be emailed to OCD inspector for faster review times, but emailing does not relieve the operators obligation to submit through OCD permitting.

- 3. Once Plugging operations have commenced, the rig must not rig down until the well is fully plugged without OCD approval. If gap in plugging operations exceeds 30 days, the Operator must file a subsequent sundry of work performed and revised NOI for approval on work remaining. At no time shall the rig be removed from location if it will result in waste or contamination of fresh water.
- 4. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- 5. Fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
  - North, water or mud laden fluids
  - South, mud laden fluids
- 6. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to an OCD permitted disposal facility.

7. Class of cement shall be used in accordance with the below table for depth allowed.

Class	TVD Lower Limit (feet)		
Class A/B	6,000		
Class I/II	6,000		
Class C or III	6,000		
Class G and H	8,000		
Class D	10,000		
Class E	14,000		
Class F	16,000		

- 8. After cutting the well head any "top off cement jobs" must remain static for 30 minutes. Any gas bubbles or flow during this 30 minutes shall be reported to the OCD for approval of next steps.
- 9. Trucking companies being used to haul oilfield waste fluids (Commercial or Private) to a disposal facility shall have an approved OCD C-133 permit.
  - A copy of this permit shall be available in each truck used to haul waste products.
  - It is the responsibility of the Operator and Contractor to verify that this permit is in place prior to performing work.
  - Drivers shall be able to produce a copy upon request of an OCD Compliance Officer.
- 10. Filing a [C-103] Sub. Plugging (C-103P) will serve as notification that the well has been plugged.
- 11. A [C-103] Sub. Release After P&A (C-103Q) shall be filed no later than a year after plugging and a site inspection by OCD Compliance officer to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to meet OCD standards before bonding can be released.
- 12. Produced water or brine-based fluids may not be used during any part of plugging operations without prior OCD approval.

#### 13. Cementing;

- All cement plugs will be neat cement and a minimum of 100' in length. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- If cement does not exist between or behind the casing strings at recommended formation depths, the casing perforations will be shot at 50' below the formation top and the cement retainer shall be set no more than 50' from the perforations.
- WOC (Wait on Cement) time will be:
  - o 4 hours for accelerated (calcium chloride) cement.
  - o 6 hours on regular cement.
- Operator must tag all cement plugs unless it meets the below condition.
  - The operator has a passing pressure test for the casing annulus and the plug is only an inside plug.
- If perforations are made operator must tag all plugs using the work string to tag unless given approval to tag with wireline by the correct contact from COA #1 of this document.
  - This includes plugs pumped underneath a cement retainer to ensure retainer seats properly after cement is pumped.
- Cement can only be bull-headed with specific prior approval.
- Squeeze pressures are not to exceed the exposed formations frac gradient or the burst pressure of the casing.

- 14. A cement plug is required to be set from 50' below to 50' above (straddling) formation tops, casing shoes, casing stubs, any attempted casing cut offs, anywhere the casing is perforated, DV tools.
  - Perforation/Formation top plug. (When there is less than 100ft between the top
    perforation to the formation top.) These plugs are required to be started no greater than
    50ft from the top perforation. However, the plug should be set below the formation top
    or as close to the formation top as possible for the maximum isolation between the
    formations. The plug is required to be a 100ft cement plug plus excess.
  - Perforation Plug when a formation top is not included. These plugs are required to be started within 50ft of the top perforation. The plug is required to be a 100ft cement plug plus excess.
  - Cement caps on top of bridge plugs or cement retainers for perforation plugs, that are
    not straddling a formation top, may be set using a bailer with a minimum of 35' of
    cement in lieu of the 100' plug. The bridge plug or retainer must be set within 50ft of the
    perforations.
  - Perforations are required below the surface casing shoe if cement does not exist behind
    the casing, a 30-minute minimum wait time will be required immediately after
    perforating to determine if gas and/or water flows are present. If flow is present, the
    well will be shut-in for a minimum of one hour and the pressure recorded. If gas is
    detected contact the OCD office for directions.
- 15. No more than 3000 feet is allowed between cement plugs in cased hole and no more than 2000 feet is allowed in open hole.
- 16. Formation Tops to be isolated with cement plugs, but not limited to are:
  - Northwest See Figure A
  - South (Artesia) See Figure B
  - Potash See Figure C
    - O In the R-111-P (Or as subsequently revised) Area a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, woe 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
  - South (Hobbs) See Figure D1 and D2
  - Areas not provided above will need to be reviewed with the OCD on a case by case basis.

#### 17. Markers

- Dry hole marker requirements 19.15.25.10.
   The operator shall mark the exact location of plugged and abandoned wells with a steel marker not less than four inches in diameter set in cement and extending at least four feet above mean ground level. The marker must include the below information:
  - 1. Operator name
  - 2. Lease name and well number
  - 3. API number
  - 4. Unit letter
  - 5. Section, Township and Range

- AGRICULTURE (Below grade markers)
  - In Agricultural areas a request can be made for a below ground marker. For a below ground marker the operator must file their request on a C-103 notice of intent, and it must include the following;
    - A) Aerial photo showing the agricultural area
    - B) Request from the landowner for the below ground marker.
    - C) Subsequent plugging report for a well using a below ground marker must have an updated C-102 signed by a certified surveyor for SHL.

Note: A below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to OCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to OCD. OCD requires a current survey to verify the location of the below ground marker, however OCD will accept a GPS coordinate that were taken with a GPS that has an accuracy of within 15 feet.

18. If work has not commenced within 1 year of the approval of this procedure, the approval is automatically expired. After 1 year a new [C-103] NOI Plugging (C-103F) must be submitted and approved prior to work.

#### Figure A

### North Formations to be isolated with cement plugs are:

- San Jose
- Nacimiento
- Ojo Alamo
- Kirtland
- Fruitland
- Picture Cliffs
- Chacra (if below the Chacra Line)
- Mesa Verde Group
- Mancos
- Gallup
- Basin Dakota (plugged at the top of the Graneros)
- Deeper formations will be reviewed on a case-by-case basis

### Figure B

### South (Artesia) Formations to be isolated with cement plugs are:

- Fusselman
- Montoya
- Devonian
- Morrow
- Strawn
- Atoka
- Permo-Penn
- Wolfcamp
- Bone Springs
- Delaware, in certain areas where the Delaware is subdivided into;
  - 1. Bell Canyon
  - 2. Cherry Canyon
  - 3. Brushy Canyon
- Any salt sections
- Abo
- Yeso
- Glorieta
- San Andres
- Greyburg
- Queen
- Yates

#### Figure C

#### Potash Area R-111-P

T 18S - R 30E

Sec 10 Unit P. Sec 11 Unit M,N. Sec 13 Unit L,M,N. Sec 14 Unit C -P. Sec 15 Unit A G,H,I,J,K,N,O,P. Sec 22 Unit All

except for M. Sec 23, Sec 24 Unit C,D,E,L, Sec 26 Unit A-G, Sec 27 Unit A,B,C

T 19S - R 29E

Sec 11 Unit P. Sec 12 Unit H-P. Sec 13. Sec 14 Unit A,B,F-P. Sec 15 Unit P. Sec 22 Unit A,B,C,F,G,H,I,J K,N,O,P. Sec 23.

Sec 24. Sec 25 Unit D. Sec 26 Unit A- F. Sec 27 Unit A,B,C,F,G,H.

T 19S - R 30E

Sec 2 Unit K,L,M,N. Sec 3 Unit I,L,M,N,O,P. Sec 4 Unit C,D,E,F,G,I-P. Sec 5 Unit A,B,C,E-P. Sec 6 Unit I,O,P. Sec 7 – Sec

10. Sec 11 Unit D, G—P. Sec 12 Unit A,B,E-P. Sec 13 Unit A-O. Sec 14-Sec 18. Sec 19 Unit A-L, P. Sec 20 – Sec 23. Sec

24 Unit C,D,E,F,L,M,N. Sec 25 Unit D. Sec 26 Unit A-G, I-P. Sec 27, Sec 28, Sec 29 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 32

Unit A,B,G,H,I,J,N,O,P. Sec 33. Sec 34. Sec 35. Sec 36 Unit D,E,F,I-P.

T 19S - R 31E

Sec 7 Unit C,D,E,F,L. Sec 18 Unit C,D,E,F,G,K,L. Sec 31 Unit M. Sec 34 Unit P. Sec 35 Unit M,N,O. Sec 36 Unit O,P.

T 20S - R 29E

Sec 1 Unit H,I,P. Sec 13 Unit E,L,M,N. Sec 14 Unit B-P. Sec 15 Unit A,H,I,J,N,O,P. Sec 22 Unit A,B,C,F,G,H,I,J,O,P. Sec

23. Sec 24 Unit C,D,E,F,G,J-P. Sec 25 Unit A-O. Sec 26. Sec 27 Unit A,B,G,H,I,J,O,P. Sec 34 Unit A,B,G,H. Sec 35 Unit

A-H. Sec 36 Unit B-G.

T 20S - R 30E

Sec 1 – Sec 4. Sec 5 Unit A,B,C,E-P. Sec 6 Unit E,G-P. Sec 7 Unit A-H,I,J,O,P. Sec 8 – 17. Sec 18 Unit A,B,G,H,I,J,O,P.

Sec 19 Unit A,B,G,H,I,J,O,P. Sec 20 – 29. Sec 30 Unit A-L,N,O,P. Sec 31 Unit A,B,G,H,I,P. Sec 32 – Sec 36.

T 20S - R 31E

Sec 1 Unit A,B,C,E-P. Sec 2. Sec 3 Unit A,B,G,H,I,J,O,P. Sec 6 Unit D,E,F,J-P. Sec 7. Sec 8 Unit E-P. Sec 9 Unit E,F,J-P.

Sec 10 Unit A,B,G-P. Sec 11 – Sec 36.

T 21S - R 29E

Sec 1 – Sec 3. Sec 4 Unit L1 – L16,I,J,K,O,P. Sec 5 Unit L1. Sec 10 Unit A,B,H,P. Sec 11 – Sec 14. Sec 15 Unit A,H,I. Sec

23 Unit A,B. Sec 24 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 25 Unit A,O,P. Sec 35 Unit G,H,I,J,K,N,O,P. Sec 36 A,B,C,F – P.

T 21S - R 30E

Sec 1 – Sec 36

T 21S - R 31E

Sec 1 – Sec 36

T 22S - R 28E

Sec 36 Unit A,H,I,P.

T 22S - R 29E

Sec 1. Sec 2. Sec 3 Unit I,J,N,O,P. Sec 9 Unit G – P. Sec 10 – Sec 16. Sec 19 Unit H,I,J. Sec 20 – Sec 28. Sec 29 Unit

A,B,C,D,G,H,I,J,O,P. Sec 30 Unit A. Section 31 Unit C – P. Sec 32 – Sec 36

T 22S – R 30E

Sec 1 - Sec 36

T 22S - R 31E

Sec 1 – Sec 11. Sec 12 Unit B,C,D,E,F,L. Sec 13 Unit E,F,K,L,M,N. Sec 14 – Sec 23. Sec 24 Unit C,D,E,F,K,L,M,N. Sec 25

Unit A,B,C,D. Sec 26 Unit A,BC,D,G,H. Sec 27 – Sec 34.

T 23S - R 28E

Sec 1 Unit A

T 23S - R 29E

Sec 1 – Sec 5. Sec 6 Unit A – I, N,O,P. Sec 7 Unit A,B,C,G,H,I,P. Sec 8 Unit A – L, N,O,P. Sec 9 – Sec 16. Sec 17 Unit

A,B,G,H,I,P. Sec 21 – Sec 23. Sec 24 Unit A – N. Sec 25 Unit D,E,L. Sec 26. Sec 27. Sec 28 Unit A – J, N,O,P. Sec 33

Unit A,B,C. Sec 34 Unit A,B,C,D,F,G,H. Sec 35. Sec 36 Unit B,C,D,E,F,G,K,L.

T 23S - R 30E

Sec 1 – Sec 18. Sec 19 Unit A – I,N,O,P. Sec 20, Sec 21. Sec 22 Unit A – N, P. Sec 23, Sec 24, Sec 25. Sec 26 Unit

A,B,F-P. Sec 27 Unit C,D,E,I,N,O,P. Sec 28 Unit A – H, K,L,M,N. Sec 29 Unit A – J, O,P. Sec 30 Unit A,B. Sec 32 A,B. Sec

33 Unit C,D,H,I,O,P. Sec 34, Sec 35, Sec 36.

T 23S - R 31E

Sec 2 Unit D,E,J,O. Sec 3 – Sec 7. Sec 8 Unit A – G, K – N. Sec 9 Unit A,B,C,D. Sec 10 Unit D,P. Sec 11 Unit G,H,I,J,M,N,O,P. Sec 12 Unit E,L,K,M,N. Sec 13 Unit C,D,E,F,G,J,K,L,M,N,O. Sec 14. Sec 15 Unit A,B,E – P. Sec 16 Unit

I, K – P. Sec 17 Unit B,C,D,E, I – P. Sec 18 – Sec 23. Sec 24 Unit B – G, K,L,M,N. Sec 25 Unit B – G, J,K,L. Sec 26 – Sec

34. Sec 35 Unit C,D,E.

T 24S – R 29E

Sec 2 Unit A, B, C, D. Sec 3 Unit A

T 24S – R 30E

Sec 1 Unit A – H, J – N. Sec 2, Sec 3. Sec 4 Unit A,B,F – K, M,N,O,P. Sec 9 Unit A – L. Sec 10 Unit A – L, O,P. Sec 11.

Sec 12 Unit D,E,L. Sec 14 Unit B – G. Sec 15 Unit A,B,G,H.

T 24S – R 31E Sec 3 Unit B – G, J – O. Sec 4. Sec 5 Unit A – L, P. Sec 6 Unit A – L. Sec 9 Unit A – J, O,P. Sec 10 Unit B – G, K – N. Sec 35 Unit E – P. Sec 36 Unit E,K,L,M,N.

T 25S – R 31E Sec 1 Unit C,D,E,F. Sec 2 Unit A – H.

Figure D1 and D2

South (Hobbs) Formations to be isolated with cement plugs are:

The plugging requirements in the Hobbs Area are based on the well location within specific areas of the Area (See Figure D1). The Formations in the Hobbs Area to be isolated with cement plugs are (see Figure D2)

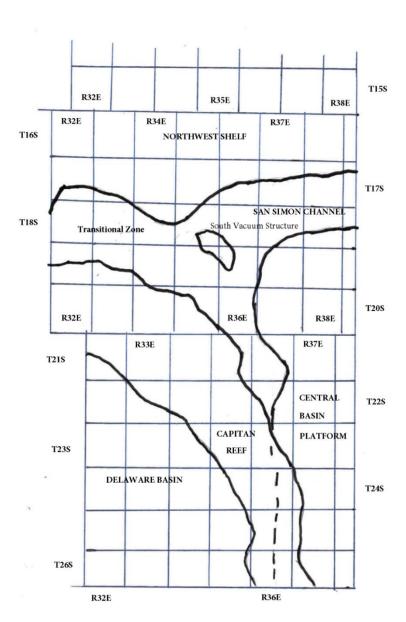


Figure D1 Map

# Figure D2 Formation Table

	100'	P'lug to isolate upper a	nd lower fresh water	zones (typiailly 2.50' to	350')	
ND!rthwest Shelf	C;iptan Reef Are <a< th=""><th>Trani5ition Zone</th><th>San Simon Oh.annel</th><th>South \lacJUUm Structure</th><th>Delaware Basin</th><th>Ce<n,tiral basin="" platform<="" th=""></n,tiral></th></a<>	Trani5ition Zone	San Simon Oh.annel	South \lacJUUm Structure	Delaware Basin	Ce <n,tiral basin="" platform<="" th=""></n,tiral>
Granit \./ash (Detrital basement material and fractured pre-Cambrian basement rock)	Siluro-Devonian	Morrow	Siluro-Devonian	Ellenburger	Siluro-Devonian	Granit \./ash (Detrital basement material, fractured pre-Cambrian basement rock and fracture Mafic Volcanic intrusives).
Montoya	Mississippian	Atoka	Morrow	Mckee	Morrow	Ellenburger
Fusselman	Morrow	Strawn	\./olfcamp	Siluro-Devonian	Atoka	Connell
Woodford	Atoka	Cisco	Abo Reef	Woodford	Strawn	Waddell
Siluro-Devonian	Strawn	Pennsylvanian	Bone Spring	Mississippian	Pennsylvanian	Mckee
Chester	Pennsylvanian	\./olfcamp	Delaware	Barnett Shale	Low er \./olfcamp	Simpson Group
Austin	\./olfcamp	Bone Spring	San Andres	Morrow	Upper \./olfcamp	Montoya
Mississippian	Abo Reef, if present	Delaware	Queen	Atoka	\./olfcamp	Fusselman
Morrow	Abo, if present	San Andres	Yates	Strawn	Third Bone Spring Sand (Top of \./olfbone)	Silurian
Atoka	Queen, if present	Grayburg-San Andres	Base of Salt	Canyon	First Bone Spring Sand (Top of Lower Bone Spring)	Devonian
Lower Pennsylvanian	Bone Spring	Queen	Rustler	Pennsylvanian	Bone Spring	Strawn
Cisco-Canyon	Delaware	Seven Rivers		Blinebry	Brushy Canyon	Pennsylvanian
Pennsylvanian	Base Capitan Reef	Yates		Bone Spring	Delaw are (Base of Salt)	\./olfcamp
Bough	Seven Rivers	Base of Salt		San Andres	Rustler	Abo
\./olfcamp	Yates	Rustler		Queen		Abo Reef
Abo	Top Capitan Reef			Base of Salt		Drinkard
Abo Reef, if present	Base of Salt			Rustler		Tubb
Yeso (Township 15 South to Township 17 South)	Rustler					Blinebry
Drinkard or Low er Y eso (Township 15 South to Township 17 South)						Paddock
Tubb (Township 15 South to Township 17 South)						Glorieta
Blinebry (Township 15 South to Township 17 South)						San Andres
Pad dock (Township 15 South to Township 17 South)						Grayburg
Glorieta						Grayburg-San Andres
San Andres						Queen
Queen (Township 15 South to Township 17 South)						Seven Rivers
Seven Rivers (Township 15 South to Township 17 South)						Yates
Yates (Township 15 South to Township 17 South)						Base of Salt
Base of Salt						Rustler
Rustler						

District III

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

District II 811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 376071

#### **CONDITIONS**

Operator:	OGRID:
ENDURING RESOURCES, LLC	372286
6300 S Syracuse Way	Action Number:
Centennial, CO 80111	376071
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

#### CONDITIONS

Created By	Condition	Condition Date
loren.died	e Notify NMOCD 24 hours prior to beginning P&A operations.	8/22/2024
loren.died	e Submit CBL into NMOCD Imaging via E Permitting.	8/22/2024