

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

RECEIVED

FORM APPROVED
OMB NO. 1004-0137
Expires March 31, 2007

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

SEP 19 2011

Farmington Field Office

Bureau of Land Management

SUBMIT IN TRIPLICATE - Other instructions on reverse side

1. Type of Well <input checked="" type="checkbox"/> Oil Well <input type="checkbox"/> Gas Well <input type="checkbox"/> Other		5. Lease Serial No NM-26659
2. Name of Operator OXY USA INC <Attn:Brent Sonnier> 16696		6. If Indian, Allottee or Tribe Name
3a. Address PO Box 4294, Houston, Texas 77210	3b. Phone No. (include area code)	7. If Unit or CA/Agreement, Name and/or No
4. Location of Well (Footage, Sec., T., R., M., or Survey Description) 2285 FSL & 2055 FEL Sec. 29 T23N R8W (J)		8. Well Name and No Gillespie Federal #1
		9. API Well No. 30-045-26611
		10. Field and Pool, or Exploratory Area Kimbeto Wash Gallup
		11. County or Parish, State San Juan NM

12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION			
<input checked="" type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (Start/Resume)	<input type="checkbox"/> Water Shut-Off
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Fracture Treat	<input type="checkbox"/> Reclamation	<input type="checkbox"/> Well Integrity
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete	<input type="checkbox"/> Other
	<input type="checkbox"/> Change Plans	<input checked="" type="checkbox"/> Plug and Abandon	<input type="checkbox"/> Temporarily Abandon	
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Disposal	

13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompletable horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the final site is ready for final inspection.)

OXY USA Inc. request to P&A the subject well.

See attached Procedure and Wellbore Diagrams.



see added mancos and chacra plugs

14. I hereby certify that the foregoing is true and correct Name (Printed/Typed) Jereme Robinson jereme.robinson@oxy.com	Title Sr. Regulatory analyst
	Date 09/15/2011

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved by Original Signed: Stephen Mason	Title	Date SEP 20 2011
Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.	Office	

Title 18 U.S.C. Section 1001, and Title 43 U.S.C. Section 1212, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction

NMOC D W

OXY USA Inc

Proposed Plugging Procedure Attachment to 3160-5

Gillespie Federal #1 - 30-045-26611

Lease #: NM-26659

Sec. 29 T23N R8W

TD: 4950' PBTD: 4895'

8 5/8" @ 254' w/ 180 sx, 12 1/4" hole, TOC Surf

4 1/2" @ 4897' w/ 875 sx, 7 7/8" hole, TOC Surf (circ)

Perforations 4588-4789'

Contact BLM- Farmington, 24 hours prior to job.

Circulate hole with 10# MLF and between plugs

1. POOH and lay down tubing
2. RIH and set CIBP @ 4538' w/ 75sx class "C" to 4228' - WOC & Tag (Gallup)
3. Plug @ ⁴⁵⁴⁶~~2458-2558~~ 1746' w/ 35sx "C" - WOC & Tag- (Menece) *Mesa Verde*
4. Plug @ 310-Surface' w/ 110sx "C" - WOC-Verify

Use Class C Cement.

Reclaim location per rules and recommendations of the BLM-COA.

Plug *Proctored Cliffs / Fruitland* 1128'-885'
Plug *Kirchland / Ojo Alamo* 648'-354'

Plug *Mancos* 3663' - 3563'
Plug *Chacra* 1478' - 1378'



OXY USA Inc

Gillespie Federal #1

API#: 3004526611

Current

Lease # NM-26659

Surface Casing:

Drld 12 1/4" hole

8-5/8" 24# csg set at 254'


Cmtd w/ 180sx to surface (circ)

Production Casing:

Drld 7-7/8" hole.

7" 9 5# 0' - 4897'

Cmtd w/ 875sx, TOC- Surf

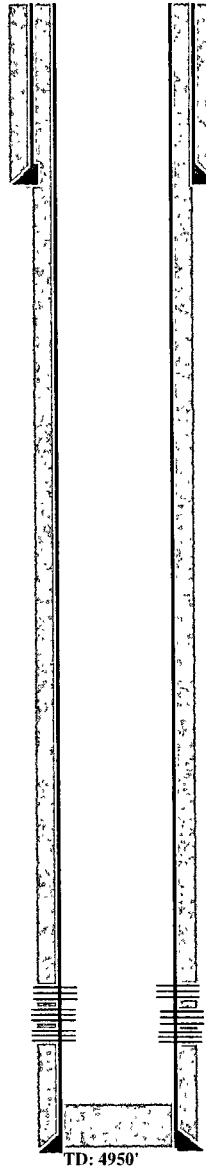

Perforations:

4588-4789'

PBTD: 4895'

TD: 4950'



OXY USA Inc

Gillespie Federal #1

API#: 3004526611

Proposed P&A

Lease #. NM-26659

Surface Casing:

Drl'd 12 1/4" hole
8-5/8" 24# csg set at 254'
Cmtd w/ 180sx to surface (circ).


Production Casing:

Drl'd 7-7/8" hole
7" 9.5# 0' - 4897'
Cmtd w/ 875sx, TOC- Surf'

Perforations:

4588-4789'

PBTD: 4895'

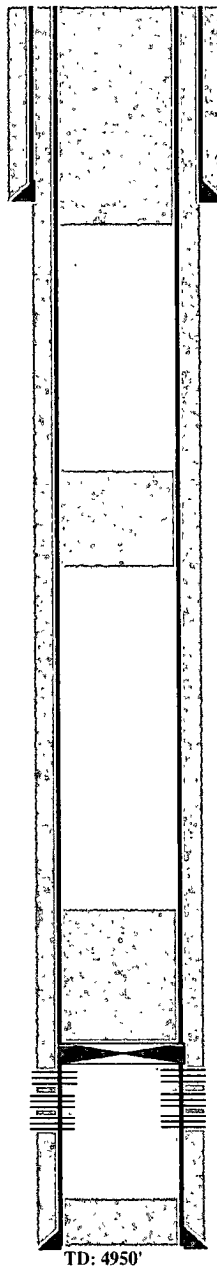

Plug @ 310-Surf w/ 110sx "C" WOC-Verify

Plug @ 2458-2358' w/ 35sx "C"- WOC-TAG

Plug to 4228' w/ 75sx "C" WOC-TAG

CIBP @ 4538'

**UNITED STATES DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
FARMINGTON DISTRICT OFFICE
1235 LA PLATA HIGHWAY
FARMINGTON, NEW MEXICO 87401**

Attachment to notice of
Intention to Abandon:

Re: Permanent Abandonment
Well: 1 Gillespie Federal

CONDITIONS OF APPROVAL

1. Plugging operations authorized are subject to the attached "General Requirements for Permanent Abandonment of Wells on Federal and Indian Lease."
2. Farmington Office is to be notified at least 24 hours before the plugging operations commence (505) 599-8907.
3. The following modifications to your plugging program are to be made:
 - a) Place the Mesaverde plug from 1846' – 1746'.
 - b) Place the Pictured Cliffs/Fruitland plug from 1128' – 885'.
 - c) Place the Kirtland/Ojo Alamo plug from 648' – 354'.

You are also required to place cement excesses per 4.2 and 4.4 of the attached General Requirements.

Office Hours: 7:45 a.m. to 4:30 p.m.