

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use Form 9-331-C for such proposals.)

1. oil well ☒ gas well ☐ other ☐
2. NAME OF OPERATOR
TEXACO Inc.
3. ADDRESS OF OPERATOR
P. O. Box 728, Hobbs, New Mexico 88240
4. LOCATION OF WELL (REPORT LOCATION CLEARLY. See space 17 below.)
AT SURFACE: 660' FNL & 600' FWL
AT TOP PROD. INTERVAL: (Unit Letter 'D')
AT TOTAL DEPTH:
16. CHECK APPROPRIATE BOX TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

REQUEST FOR APPROVAL TO:		SUBSEQUENT REPORT OF:
TEST WATER SHUT-OFF	<input type="checkbox"/>	<input type="checkbox"/>
FRACTURE TREAT	<input type="checkbox"/>	<input type="checkbox"/>
SHOOT OR ACIDIZE	<input type="checkbox"/>	<input type="checkbox"/>
REPAIR WELL	<input type="checkbox"/>	<input type="checkbox"/>
PULL OR ALTER CASING	<input type="checkbox"/>	<input type="checkbox"/>
MULTIPLE COMPLETE	<input type="checkbox"/>	<input type="checkbox"/>
CHANGE ZONES	<input type="checkbox"/>	<input type="checkbox"/>
ABANDON*	<input checked="" type="checkbox"/>	<input type="checkbox"/>
(other)		

5. LEASE
LC - 062300
6. IF INDIAN, ALLOTTEE OR TRIBE NAME
-
7. UNIT AGREEMENT NAME
Cotton Draw Unit
8. FARM OR LEASE NAME
Cotton Draw Unit
9. WELL NO.
45
10. FIELD OR WILDCAT NAME
Paduca Delaware
11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA
Sec. 28, T-25-S, R-32-E
12. COUNTY OR PARISH
Lea
13. STATE
New Mexico
14. API NO.
15. ELEVATIONS (SHOW DF, KDB, AND WD)
3380' (DF)

(NOTE: Report results of multiple completion or zone change on Form 9-330.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

1. Rig up. Install BOP.
2. Spot 40' (3 sx) Cement on top of CIBP presently set @ 4475'.
3. Cut 4 1/2" Csg @ 1200' & pull.
4. Spot 100' (30 sx.) Cement plug from 1250' - 1150'.
5. Spot 100' (35 sx.) Cement plug from 860' - 760'.
6. Spot 100' (30 sx.) Cement plug from 390' - 290'.
7. Spot 25' (6 sx.) Cement plug from 25' - Surface.
8. Install Dry Hole Marker. Clean Location. Plug & Abandon.

Subsurface Safety Valve: Manu. and Type

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

Asst. Dist. Mgr.

DATE

2-17-83

(This space for Federal or State office use)

APPROVED BY



TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY.

Plugs Nos. 4 + 6 will be tagged
to verify proper location

*See Instructions on Reverse Side

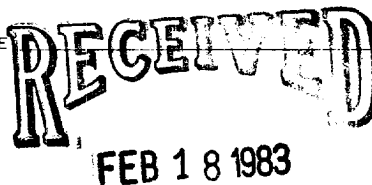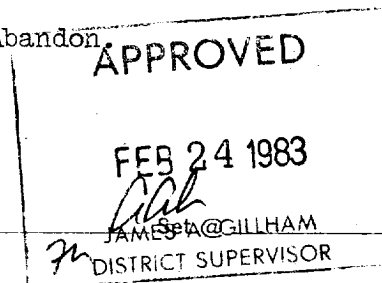

OIL & GAS
MINERALS MGMT. SERVICE
ROSWell, NEW MEXICO

RECEIVED
FEB 25 1983
O.C.D.
HOBBS OFFICE