

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TWO COPIES
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM 040750-A

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

USA-Fitzgerald

9. WELL NO.

3

10. FIELD AND POOL, OR WILDCAT

Round Tank San Andres

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 19, T-15-S, R-29-E, NMP

12. COUNTY OR PARISH

Chaves

13. STATE

New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

Tenneco Corporation By Its Managing Agent Tenneco Oil Company

3. ADDRESS OF OPERATOR

c/o C. H. Brockett, Box 1005, Midland, Texas

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

1980' FNL & 660' FNL of Section 19

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3746' DF

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

PULL OR ALTER CASING

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other)

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

REPAIRING WELL

FRACTURE TREATMENT

ALTERING CASING

SHOOTING OR ACIDIZING

ABANDONMENT*

(Other)

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

TD 3126'

8 5/8 - 295 - 265 (Circulated)

5 1/2 - 3126 - 200 (T/Cement 1400')

Perfs. 2954-56, 2978-80, 2993-95.

Well has become Non-Productive - Plan to plug and abandon as follows - Fill hole with Mud and spot plugs as follows:

Set 100' plug 2954-2854', 100' cement plug across 5 1/2" stub 25 or 30 sx. (50' in and out), 100' cement plug at base of surface casing (50' in and out), and 10 sx. cement plug on surface with Marker set in cement according to the USGS Rules & Regulations.

RECEIVED

NOV 15 1965

O. C. C.
ARTESIA, OFFICE

RECEIVED

NOV 12 1965

U. S. GEOLOGICAL SURVEY
ARTESIA, NEW MEXICO

18. I hereby certify that the foregoing is true and correct

SIGNED

Mary E. Smyke

TITLE

Agent

DATE November 8, 1965


(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY

TITLE

DATE

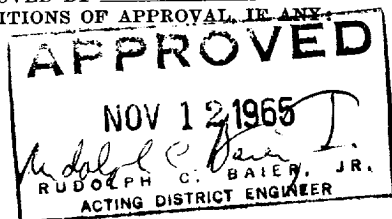

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.