

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

Artesia, NM 88210
SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐ P & A
2. NAME OF OPERATOR McCLELLAN OIL CORPORATION
3. ADDRESS OF OPERATOR P O DRAWER 730, ROSWELL, NM 88202-0730
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface
660' FSL & 660' FWL

RECEIVED

MAR - 9 1992

O. C. D.
ARTESIA OFFICE

5. LEASE DESIGNATION AND SERIAL NO.
NM-56237
6. IF INDIAN, ALLOTTEE OR TRIBE NAME
7. UNIT AGREEMENT NAME
8. FARM OR LEASE NAME
Hondo Federal
9. WELL NO.
No. 1
10. FIELD AND POOL, OR WILDCAT
11. SEC., T., R., M., OR BLK. AND
SURVEY OR ARMA
Sec. 10-T15S-R28E
12. COUNTY OR PARISH
Chaves
13. STATE
NM

14. PERMIT NO.
15. ELEVATIONS (Show whether DF, AT, OR, etc.)
3583' G.L.

10. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐
FRACTURE TREAT ☐
SHOOT OR ACIDIZE ☐
REPAIR WELL ☐
(Other) P & A
FULL OR ALTER CASING ☐
MULTIPLE COMPLETE ☐
ABANDON* ☒
CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐
FRACTURE TREATMENT ☐
SHOOTING OR ACIDIZING ☐
(Other) ☐
REPAIRING WELL ☐
ALTERING CASING ☐
ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)


17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Propose to plug well as follows:

1. Set C.I.B.P. at 2400'
A. Put 35' cmt. on top with dumpbailer
2. 1900' - 1800' 25 sx.
3. 1000' - 900' 25 sx.
4. Perf casing at 300'. Attempt to circulate cement between 8 5/8" and 5 1/2" with 70 sx., leaving (inside 4 1/2") cement at 200' (tag).
5. 60' to surface 25 sx.
6. Install dry hole marker and prep to finalize.

Perfs 2453' - 2559'
4 1/2" Csg. 2570 PBD
2 3/8" Tbg. EVE
8 5/8 Csg. 250' circulated

7. Working pit - 4' X 12' X 30'.

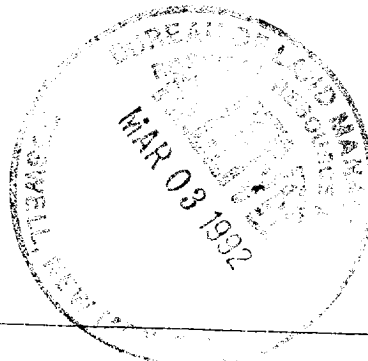

18. I hereby certify that the foregoing is true and correct


SIGNED Matt Lee

TITLE Production & Completion Eng. DATE 3-2-92

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

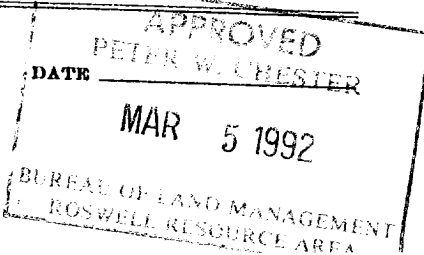

*See Instructions on Reverse Side