

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

NO OIL, GAS, OR
OTHER SUBSTANCES
TO BE PRODUCED
OR STORED IN THE
WELL (Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER <u>WATER INJECTION WELL</u>		5. LEASE DESIGNATION AND SERIAL NO. <u>LC-034999 (L)</u>
2. NAME OF OPERATOR <u>LAVION ENTERPRISES, INC. ✓</u>		6. IF INDIAN, ALLOTTEE OR TRIBE NAME <u>064832</u>
3. ADDRESS OF OPERATOR <u>3103 79TH ST LUBBOCK, TEXAS 79423</u>		7. UNIT AGREEMENT NAME <u>FOREST POOL UNIT</u>
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface <u>1650' FSL 1650' FEL</u> <u>SEC. 39, T16S, R29E</u>		8. FARM OR LEASE NAME <u>FOREST POOL UNIT</u>
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) <u>EGG 6L</u>	9. WELL NO. <u>1A</u>
16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data		10. FIELD AND POOL, OR WILDCAT <u>SQUAKE LAKE GSA</u>
		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA <u>SEC 39, T16S, R29E</u>
		12. COUNTY OR PARISH <u>EDDY</u>
		13. STATE <u>N.M.</u>

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐	WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐	FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☒	SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
REPAIR WELL ☐	CHANGE PLANS ☐	(Other) ☐	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)


17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all major and zones pertinent to this work.)*

INTEND TO PLUG & ABANDON WELL AS FOLLOWS:

8 5/8" CASING @ 356' w/ 50 SK CEMENT

7" CASING @ 2450' w/ 100 SK CEMENT

1. CIRCULATE HOLE WITH MUD LADEN FLUID
2. SPOT 100 SK CEMENT PLUG THRU TUBING @ 2475' Tag plug
3. PERFORATE 7" CASING, BELOW SALT SECTION, @ 900'
4. PUMP 300 SK CEMENT THRU 7" CASING PERFS @ 900' & CIRCULATE TO SURFACE LEAVING 7" FULL OF CEMENT
5. SET SURFACE MARKER
6. CLEAR & LEVEL LOCATION

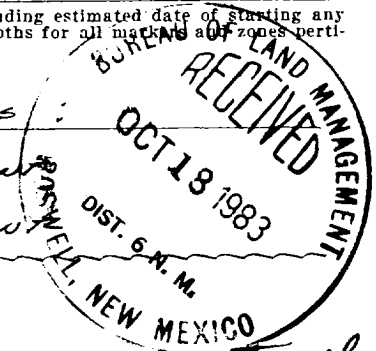

18. I hereby certify that the foregoing is true and correct

SIGNED Ronald L. Saylor TITLE PRESIDENT

RECEIVED BY
DEC 19 1983
O. C. D.
ARTESIA, OFFICE
DATE <u>12-19-83</u>

(This space for Federal Approval)

APPROVED (Sgd.) PETER W. CHESTER TITLE _____ DATE _____

CONDITIONS OF APPROVAL, IF ANY:

DEC 15 1983

*See Instructions on Reverse Side