

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPLICATE
(Other instructions on reverse side)

Expires August 31, 1985

5. LEASE DESIGNATION AND SERIAL NO.

011599 API #30-015-10151

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

WM-0162

7. UNIT AGREEMENT NAME
North Square Lake
Premier Unit

8. FARM OR LEASE NAME

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Square Lake (G/SA) North

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

J-06-175-31E

12. COUNTY OR PARISH

Eddy

13. STATE

New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Water Injector JUL 28 10 51 AM '95

2. NAME OF OPERATOR
Walsh and Watts, Inc.

3. ADDRESS OF OPERATOR
1111 Seventh Street, Wichita Falls, Texas 76301

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface Unit Letter "J" 4290' from South line & 1650' from
East line Section 6, T16S & R31E of NMPM

NM OIL CONS COMMISSION

14. PERMIT NO. Drawer DD
Artesia, NM 88210 15. ELEVATIONS (Show whether DF, RT, GR, etc.)
4010' DF

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) ☐

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

ABANDON* ☒

CHANGE PLANE ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)


17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting and proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Preparing to plug & abandon injector no longer needed for waterflood. Procedures should commence Aug. 15, 1995.

- 1.) Set CIBP at 3100'. Cap with 35' cement.
- 2.) Circulate hole with mud.
- 3.) Perforate at 1900'. Squeeze with 50 sx. cement 1800' to 1900'. Tag.
- 4.) Perforate at 1300'. Squeeze with 50 sx. cement 1200' to 1300'.
- 5.) Perforate at 285'. Squeeze with 60 sx. cement 165' to 285'. Tag.
- 6.) Perforate at 50'. Circulate to surface with 25 sx. cement. Cap with marker.

Note: Well drilled by Shell Oil as the *10/2/85 Federal on 10-4-63

RECEIVED
AUG 6 1995
OIL CON. DIV.
DIST. 2

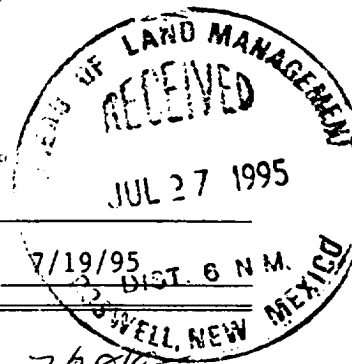

I hereby certify that the foregoing is true and correct

SIGNED

Alfred B. Guinn

TITLE

Vice-President

DATE

7/19/95

(This space for use by the operator)

(ONG. SEC.) JOE G. LARA

PETROLEUM ENGINEER

DATE

7/28/95

APPROVED BY

TITLE

CONDITIONS OF APPROVAL, IF ANY:

See attached.

*See Instructions on Reverse Side