

## SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	<b>RECEIVED BY</b> <b>FEB 06 1984</b> <b>O. C. D.</b> <b>ARTESIA, NM OFFICE</b>
2. NAME OF OPERATOR Marbob Energy Corporation	
3. ADDRESS OF OPERATOR P.O. Drawer 217, Artesia, N.M. 88210	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 330 FNL 844 FWL	

5. LEASE DESIGNATION AND SERIAL NO. NM-0560352	
6. IF INDIAN, ALLOTTEE OR TRIBE NAME	
7. UNIT AGREEMENT NAME	
8. FARM OR LEASE NAME Pure Federal	
9. WELL NO. 1	
10. FIELD AND POOL, OR WILDCAT Shugart	
11. SEC., T., R., M., OR BLE. AND SURVEY OR AREA Sec. 31-T18S-R31E	
12. COUNTY OR PARISH Eddy	13. STATE N.M.

14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 3568' DF
----------------	------------------------------------------------------------

### 16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

#### NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON\*

CHANGE PLANS

X

#### SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL


ALTERING CASING

ABANDONMENT\*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting and proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*

We propose to plug and abandon this well by setting a plug <sup>from</sup> 50' above <sup>to</sup> 50' below perfs 3450-3572', run free point on casing, cut 4 1/2" casing off at free point (estimated free point-2500'), set 100' plug in and out of 4 1/2" stub (tag), set 100' plug @ 1900-2000' (tag); set 100' plug @ 745-845' (tag); set 50' surface plug, install dry hole marker.

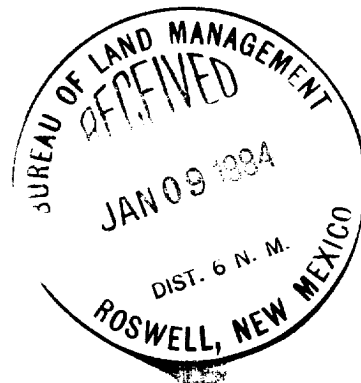

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE Production Clerk

DATE 1/6/84

(This space for Federal or State Seal)

APPROVED  
(Orig. Sgd.) PETER W. CHESTER

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

FEB 3 1984

\*See Instructions on Reverse Side