

C/SF

Form 3160-5
(June 1990)

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

YATES PETROLEUM CORPORATION

(505) 748-1471

3. Address and Telephone No.

105 South 4th St., Artesia, NM 88210

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

330' FSL & 2210' FEL of Section 8-T19S-R31E (Unit 0, SWSE)

5. Lease Designation and Serial No.

NM-82902

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Domino AOJ Federal #2

9. API Well No.

30-015-28179

10. Field and Pool, or Exploratory Area

Shugart-Yates-SR-Q-GB

11. County or Parish, State

Eddy Co., NM

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION

- ☐ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☒ Other Request to TA


- ☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Yates Petroleum Corporation respectfully requests permission to Temporary Abandon this well for a period of one (1) year in order to evaluate for possible use as a salt water disposal well. Well will be temporary abandoned as follows:

1. POOH with rods and pump. Load well with 2% KCL water. POOH with tubing.
2. TIH with gauge ring or bit & scraper to 2390'.
3. Set CIBP at 2375'. Load casing with 2% KCL water. Pressure test casing and record on chart. NOTIFY BLM-CARLSBAD (505-887-6544) AND OCD-ARTESIA (748-1283) IN SUFFICIENT TIME TO WITNESS MECHANICAL INTEGRITY TEST.
4. Install valve on 7" casing.

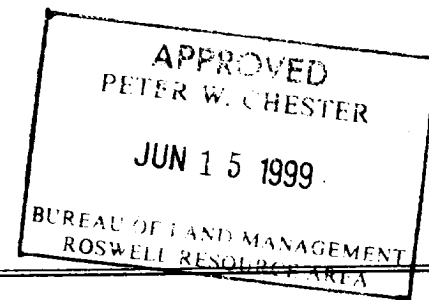

14. I hereby certify that the foregoing is true and correct

Signed

Rusty [Signature]

Title Operations Technician

Date June 8, 1999

(This space for Federal or State office use)

Approved by

Conditions of approval, if any:

Title

Date