

N. M. O. C. C. COPY
UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SEAL IN TRIPL
(Other instructions
verse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM - 0558961

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

Springs Unit

8. FARM OR LEASE NAME

9. WELL NO.

4

10. FIELD AND POOL, OR WILDCAT

Springs (Upper Penn Gas)

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 3, T21S, R25E

12. COUNTY OR PARISH

Eddy

13. STATE

New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL ☐ GAS WELL ☒ OTHER

RECEIVED

2. NAME OF OPERATOR
Shenandoah Oil Corporation

FEB 6 1974

3. ADDRESS OF OPERATOR
1203 Gihls Tower West, Midland, Texas 79701

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface

**1000' FNL 660' FEL, Sec. 3, T21S-R25E
Eddy County, New Mexico**

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3317 DF

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

We propose to plug and abandon as follows:

- 1. Set 100 foot cement plug above existing perfs (8090-8100). This plug will be spotted thru tubing.**
- 2. Determine free point of 5 1/2" casing and cut casing at that depth - top of cement indicated by temp. survey at 4820'.**
- 3. Spot 100 foot cement plug - 50 feet in and out of 5 1/2" stub.**
- 4. Spot 100 foot cement plug - 50 feet in and out of int. casing - 8 5/8" int. casing sec 3 2799'.**
- 5. Set 20 foot plug in top of 8 5/8" casing at surface.**
- 6. Install regulation dry hole marker.**

18. I hereby certify that the foregoing is true and correct

SIGNED

Thomas E. Fenno

TITLE **Division Production Mgr.**

DATE **January 8, 1974**

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE


DATE

*See Instructions on Reverse Side

RECEIVED

JAN 11 1974

U. S. GEOLOGICAL SURVEY
ARTESIA, NEW MEXICO

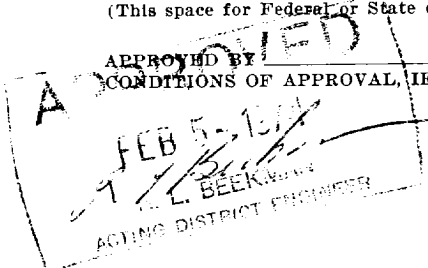

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of running of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking for approval of the abandonment.