

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPLICATE
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 1004-010
Expires August 31, 1985

5. LEASE DESIGNATION AND SERIAL NO.

NM-57602

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Federal 15

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Azotea Mesa BS

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec 15, T-22-S, R-25-E

12. COUNTY OR PARISH

Eddy

13. STATE

New Mexico

SUNDRY NOTICES AND REPORTS ON RECEIVED

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

MAY '8'89

2. NAME OF OPERATOR

INDEX, Inc. ✓

O. C. D.

3. ADDRESS OF OPERATOR

7633 E. 63rd Place, Suite 500, Tulsa, Oklahoma 74133

ARTESIA, OFFICE

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface

2080' FNL & 1980' FEL

14. PERMIT NO.

NM-57602

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3502 GR

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

The captioned well is to be abandoned as uneconomical

1. Pull production equipment.
2. Set CIBP @ 4300' & cap w/ 35' cement.
3. Free point, cut and lay down 5-1/2" casing from below 2066'.
4. RIH w/2-3/8" tbg and displace hole with 9.5 ppg mud laden fluid.
5. Spot 100' cement plug @ casing stub & tag.
6. Spot 100' cement plug @ 2116' & tag.
7. Spot 100' cement plug @ 600'.
8. Spot 50' cement plug @ surf.
9. Cut off heads. Clean location.

RECEIVED
MAY 11 15 44 '89
G.O.P.

18. I hereby certify that the foregoing is true and correct

SIGNED

Mickey Robom

TITLE Agent for INDREX, Inc.

DATE 4-27-89

(This space for Federal or State office use)

APPROVED BY

Shamir J. Smith

CONDITIONS OF APPROVAL, IF ANY:

FOR: TITLE

DATE


5-3-89

*See Instructions on Reverse Side

LOCATION: SWNE of Sec. 15, T22S, R25E, N14W, NMNM
 WELL: Federal '15' #1
 LEASE NO.: NM-57602
 AREA OF MAJOR CONCERN TO CARLSBAD WATER WELL RECHARGE
 [CARLSBAD WATER BASIN]

PLA PROPOSAL

SJ Shaw 4/26/89

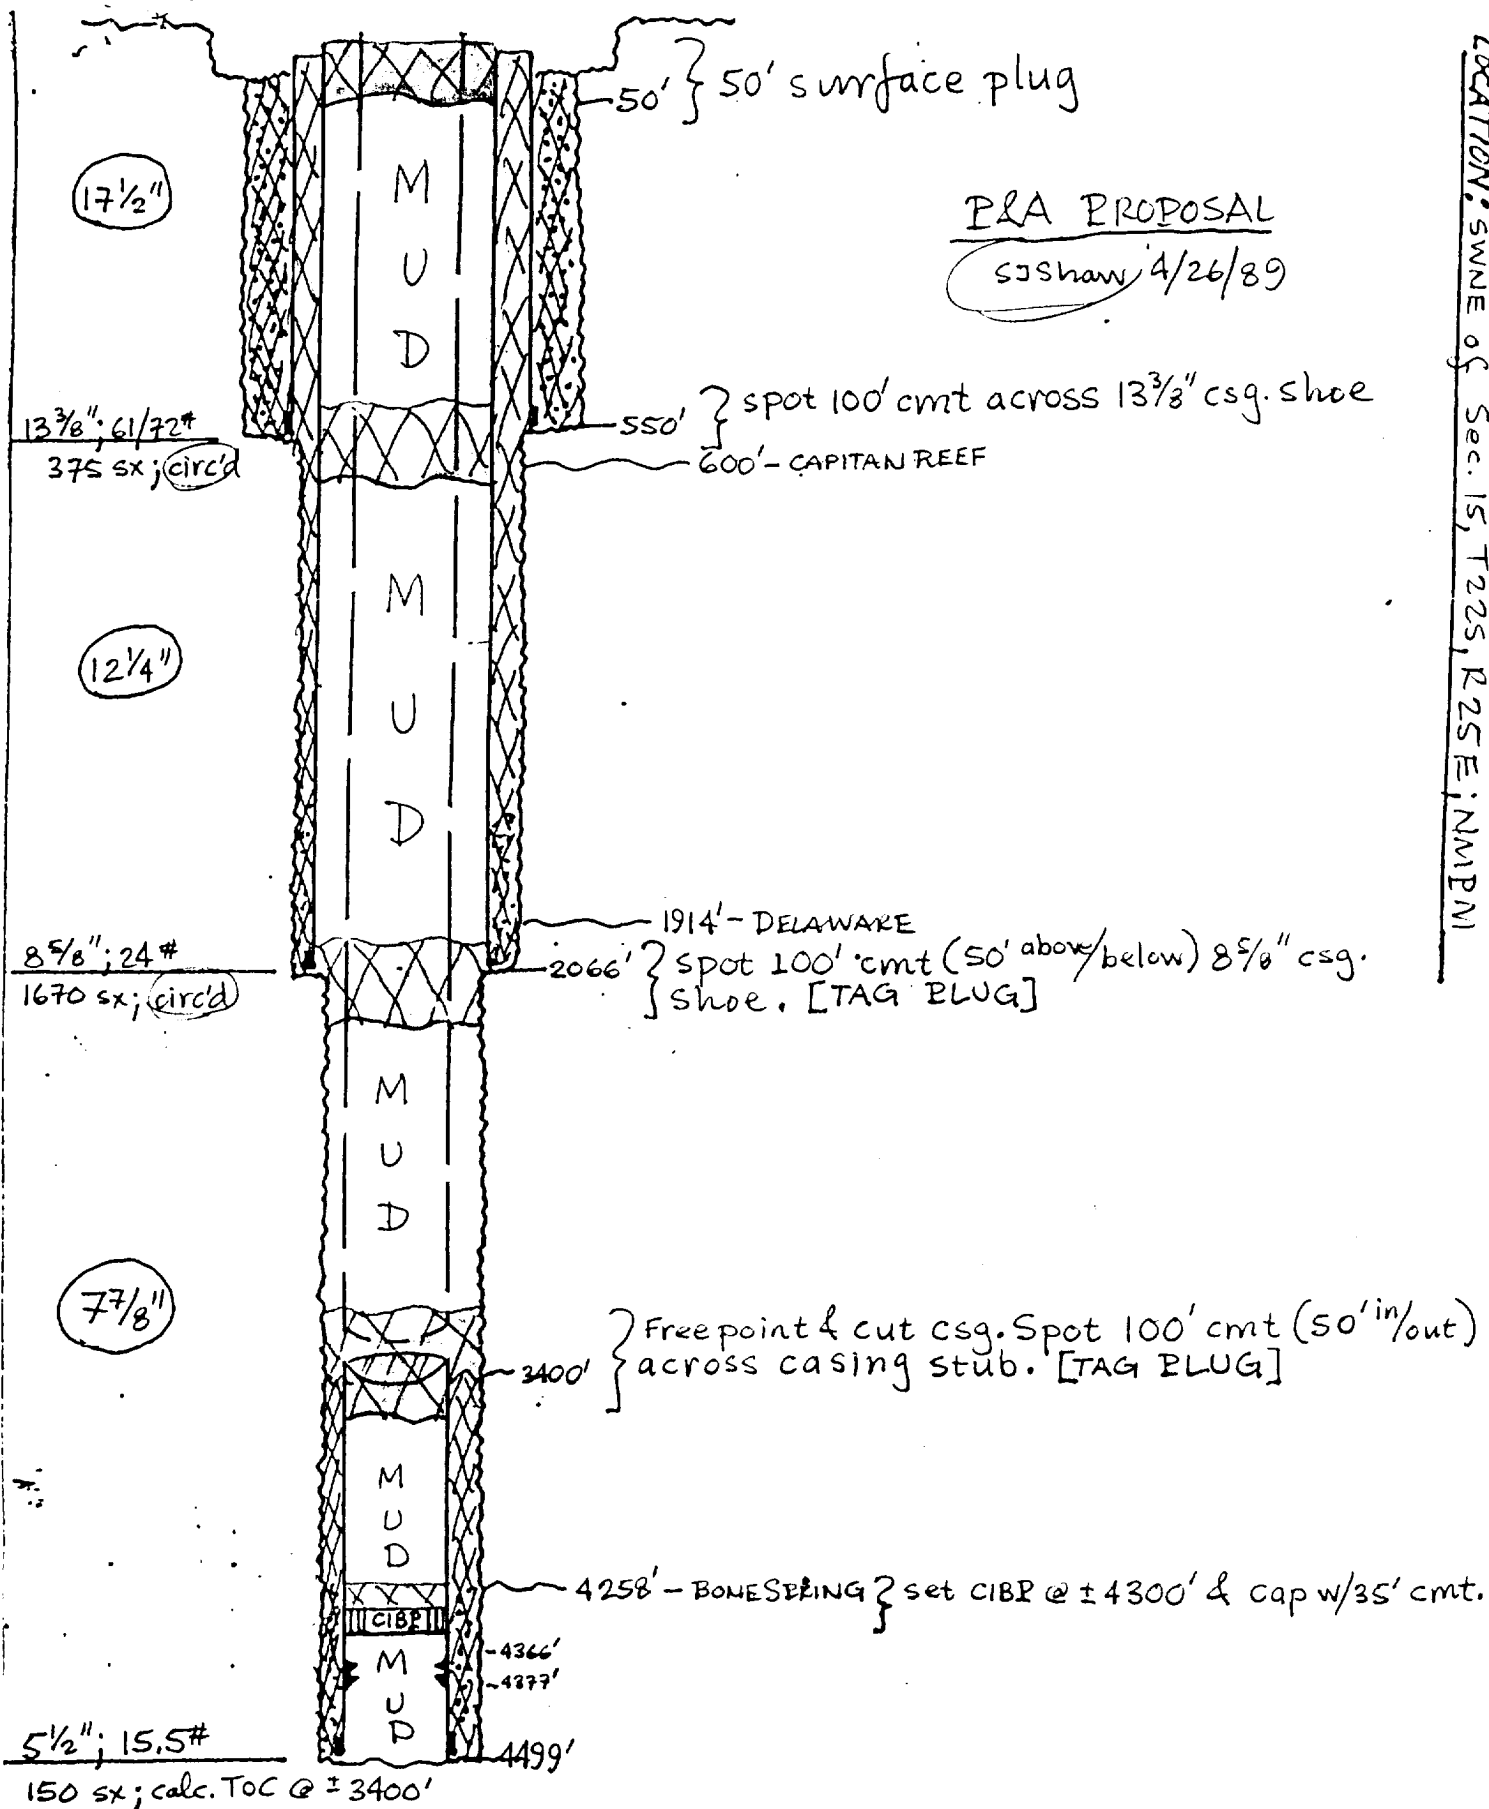

*NOTE: Use 9.5 lb/gal mud-laden fluid between plugs.