

UNITED STATES DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY
NM OIL CONS. COM. 104.
ARTESIA, NM 88210

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM 050 2925-A

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

RECEIVED

7. UNIT AGREEMENT NAME

SEP 17 1981

8. FARM OR LEASE NAME

BR Federal

9. WELL NO.

3

10. FIELD AND POOL, OR WILDCAT

Washington Ranch - Strawn

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 33, T25S, R24E

12. COUNTY OR PARISH

Eddy

13. STATE

New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

Alpha Twenty-One Production Company

3. ADDRESS OF OPERATOR

2100 First National Bank Building, Midland, Texas 79701

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.)
At surface

330 FWL and 330 FSL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3802 Ground Level

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) ☐

PULL OR ALTER CASING ☐

MULTIPLE COMPLETION ☐

ABANDON* ☒

CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☐


(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

We propose to Plug and Abandon this well using the following procedure:

Place a CIBP at 5850' and Dump 35' of cement on top
Cut off 5 1/2" casing at approximately 4800' and place a 100' cement plug across the stub at approximately 4750' to 4850'.
Place a 100' cement plug across top of Bone Spring at 3575' to 3675'.
Place a 100' cement plug at 1900' to 2000'.
Place a 100' cement plug across shoe of the 9-5/8" casing at 564' to 664'.
Place 15 sacks cement plug at the surface.
Erect monument at the wellsite.

(Oral permission to P&A received from USGS Rep. Peter Chester 9-15-81)

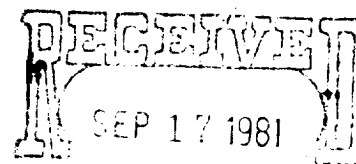

OIL & GAS
U.S. GEOLOGICAL SURVEY
ROSWELL, NEW MEXICO

18. I hereby certify that the foregoing is true and correct

SIGNED

Tommy Phillips

TITLE Executive Vice President

DATE 9-16-81

(This space for Federal or State use only)

APPROVED

APPROVED (Or: Seal) PETER W. CHESTER

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

SEP 22 1981

FOR

JAMES A. GILLHAM
DISTRICT SUPERVISOR

*See Instructions on Reverse Side