

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
OMB NO. 1004-0135
Expires: November 30, 2000

SUNDRY NOTICES AND REPORTS ON WELLS
Do not use this form for proposals to drill or to re-enter an abandoned well. Use form 3160-3 (APD) for such proposals.

SUBMIT IN TRIPLICATE - Other instructions on reverse side.


1. Type of Well <input type="checkbox"/> Oil Well <input checked="" type="checkbox"/> Gas Well <input type="checkbox"/> Other		8. Well Name and No. GCU COM D 160
2. Name of Operator BP AMERICA PRODUCTION CO		9. API Well No. 30-045-07832-00-S1
3a. Address 200 ENERGY CT FARMINGTON, NM 87402		10. Field and Pool, or Exploratory BASIN DAKOTA
3b. Phone No. (include area code) Ph: 281.366.4491 Fx: 281.366.0700		11. County or Parish, and State SAN JUAN COUNTY, NM
4. Location of Well (Footage, Sec., T., R., M., or Survey Description) Sec 27 T29N R12W NESE 1850FSL 1190FEL 36.69521 N Lat, 108.08125 W Lon		

12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION			
<input checked="" type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (Start/Resume)	<input type="checkbox"/> Water Shut-Off
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Fracture Treat	<input type="checkbox"/> Reclamation	<input type="checkbox"/> Well Integrity
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete	<input type="checkbox"/> Other
	<input type="checkbox"/> Change Plans	<input checked="" type="checkbox"/> Plug and Abandon	<input type="checkbox"/> Temporarily Abandon	
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Disposal	

13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recomple horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recomple in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

Subject well was T&A'd on August 1, 2002. BP request permission to plug and abandon the well bore as per the attached procedure.

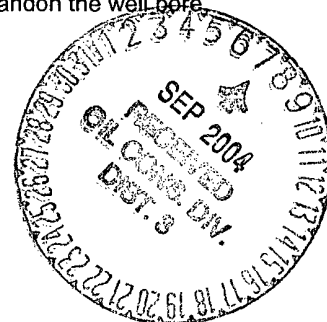

14. I hereby certify that the foregoing is true and correct. Electronic Submission #35599 verified by the BLM Well Information System For BP AMERICA PRODUCTION CO, sent to the Farmington Committed to AFMSS for processing by STEVE MASON on 09/03/2004 (04SXM1997SE)	
Name (Printed/Typed) MARY CORLEY	Title AUTHORIZED REPRESENTATIVE
Signature (Electronic Submission)	Date 09/02/2004

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved By	Title	Date SEP 03 2004
Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.		
Office		

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

** BLM REVISED ** BLM REVISED ** BLM REVISED ** BLM REVISED ** BLM REVISED **

NMOCD

**Gallegos Canyon Unit Com D 160
Plug and abandonment Procedure**

1. Contact Federal and State agencies prior to starting P&A work (NMOCD Charlie Perrin, 505-334-6178 X16, BLM 505-599-8907).
2. Check location for anchors. Install if necessary. Test anchors.
3. MIRUSU. Check and record tubing, casing and bradenhead pressures.
4. Blow down well and kill well, if necessary, with lease water.
5. ND wellhead. NU BOP's.
6. POOH with 2-3/8" tbg, visually inspecting.
7. Spot 12 sack cmt plug 1200' – 1350' to isolate the PC.
8. Spot 12 sack cmt plug 797' – 947' to isolate the FT.
9. Perf 4-1/2" csg @ 408' w/ 4 SPF. CMT SQZ & Circulate cmt to surface.
10. ND BOP. Cut off WH. Top off surface cmt plug. Erect DH marker.
11. Provide workorder to Vance Norton for surface reclamation.

GCU Com D 160 - Proposed P&A Configuration
 San Juan County, NM
 Unit I Section 27 T29N - R12W
 Run 23

5-22-2002
 ATK

KB: 12'

