Form	31	60-5	
(Augi	ıst	1999	1

## **UNITED STATES** DEPARTMENT OF THE INTERIOR **BUREAU OF LAND MANAGEMENT**

FORM APPROVED
OMB No. 1004-0135
Expires November 30, 2000

									VELLS	
Do no	t use	this	form	for p	ropos	als to	drill	or to	re-enter	an
ahana	hanad	wall	llea	Earm	. 21 <i>6</i> 0.	2 /ADI	)) for	euch	nronnes	ıle

Lease Serial No.										
4	_	20	_	600	_	3	<	3/		

ó.	If Indian, Allottee or Tribe Name	e
	Navajo	

5.

abandoned w	Nava jo		
SUBMIT IN TE	7. If Unit or CA/Agreement, Name and/or No.  Horseshoe Gallup		
1. Type of Well  Oil Well Gas Well  2. Name of Operator Vulcan			8. Well Name and No. 104 HGU
3a. Address 1000 Rro	Brazos Rd. Jm 87410	3b. Phone No. (include area code) 334-6178	9. API Well No. 30045/0558  10. Field and Pool, or Exploratory Area
4. Location of Well (Footage, Sec. 19 T. 3	., T., R., M., or Survey Descript IN., R.16 W.		Horse shoe Gallup  11. County or Parish, State  San Juan NM
		TO INDICATE NATURE OF NOT	ICE, REPORT, OR OTHER DATA
TYPE OF SUBMISSION		TYPE OF ACTI	ON
Notice of Intent	Acidize Alter Casing Casing Repair	Deepen Product Fracture Treat Reclam New Construction Recomp	

Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recomplete horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

Plug and Abandon


Plug Back

See attached plugging procedure:

Final Abandonment Notice

Change Plans

Convert to Injection

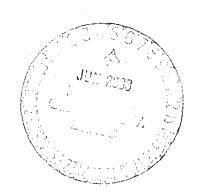

Temporarily Abandon

☐ Water Disposal

14. I hereby certify that the foregoing is true and correct Name (Printed/Typed)	. 1
NMOCO CONTract Pluggi	Title
Signature Nm 0 C 0	Date 6/3/03
4 T T NOTE OF A TOTAL OF A SECURE OF A	OR REDERALIOR STATE OFFICE USE
Original Signed: Stephen Mason Approved by	Title Date JUN 0 3 2003
Conditions of approval, if any, are attached. Approval of this noticertify that the applicant holds legal or equitable title to those right which would entitle the applicant to conduct operations thereon.	does not warrant or in the subject lease Office

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

API WELL # Well Name Well # Operator Name Type Stat County UL Sec Twp N/S Rng W/E Feet NS Ft EW Order\_No 30-045-10558- HORSESHOE GALLUP UNIT 104 PLAYA MINERALS & ENERGY INC O A San Juan I 19 31 N 16 W 1980 S 660

api\_number status csg\_1 csg\_1q csg\_1d csg\_2 csg\_2q csg\_2d csg\_3 csg\_3q csg\_3d liner\_size liner\_quan tubing t\_set\_dept csg\_perf 30-045-10558 CO 8 5/8 95 115S 4 1/2 1392 150S 2 7/8 1750 1333-45

Procedure

MIRU, NUBOPE,

POOH Lay Down Rods & Tubing if present,

RIH with Gauge ring,

Pick up work string, Run Scrapper if required,

RIH Set CIBP 1235, cap with 300 'cement.

Test casing.

POOH lay down tubing.

RU wire line RIH, perforate @ 145 '+-50' under surface casing shoe or Mesa Verde base whichever is lower..

Establish Circulation; circulate cement to surface inside and outside casing

Cut off well head and install P&A marker

Cut off anchors 2' below ground

Clean and level location