

30-045-11343
UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.LEASE DESIGNATION AND SERIAL NO.
UTE MOUNTAIN TRIBE LEASE

1-22-IND-2685-2772

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

UTE MOUNTAIN TRIBE OF
INDIANS

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

BARKER DOME

9. WELL NO.

15

10. FIELD AND POOL, OR WILDCAT

BARKER DOME

11. SEC., T., R., M., OR BLK. AND

Sec. 20, T-32-N, R-14-W,
N.M.P.M.

12. COUNTY OR PARISH

SAN JUAN

13. STATE

NEW MEXICO

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☒ OTHER ☐	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR SOUTHERN UNION PRODUCTION COMPANY	8. FARM OR LEASE NAME BARKER DOME
3. ADDRESS OF OPERATOR P. O. Box 308, FARMINGTON, NEW MEXICO	9. WELL NO. 15
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 2310 FEET FROM NORTH LINE AND 990 FEET FROM EAST LINE	10. FIELD AND POOL, OR WILDCAT BARKER DOME
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6146 FT. D.F.
12. COUNTY OR PARISH SAN JUAN	13. STATE NEW MEXICO

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF	☐	WATER SHUT-OFF	☐
FRACTURE TREAT	☐	FRACTURE TREATMENT	☐
SHOOT OR ACIDIZE	☐	SHOOTING OR ACIDIZING	☐
REPAIR WELL	☐	(Other)	☐
PULL OR ALTER CASING	☐	REPAIRING WELL	☐
MULTIPLE COMPLETE	☐	ALTERING CASING	☐
ABANDON*	☒	ABANDONMENT*	☐
CHANGE PLANS	☐		

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

WE PROPOSE TO PLUG AND ABANDON WELL AS FOLLOWS:


1. SET CEMENT PLUG OVER DAKOTA FORMATION FROM TOTAL DEPTH OF 2325 FEET TO 2208 FEET (50' IN BOTTOM OF 5-1/2" CASING) USING 20 SACKS CEMENT.
2. FILL 5-1/2" CASING W/9.0#/GAL MUD FROM 2208 FEET TO 450 FEET.
3. PERFORATE HOLES IN 5-1/2" CASING AT 450 FEET AND CIRCULATE CEMENT TO SURFACE W/ APPROXIMATELY 225 SACKS CEMENT.
4. SET 5 SACK PLUG IN TOP OF 5-1/2" CASING FROM 40 FT. TO SURFACE.
5. ALL OF 5-1/2" CASING WILL BE LEFT IN HOLE.
6. ERECT DRY HOLE MARKER AND ABANDON WELL.



18. I hereby certify that the foregoing is true and correct.

SIGNED Gilbert D. Noland, Jr. TITLE DRILLING SUPERINTENDENT DATE JULY 30, 1964

(This space for Federal or State office use)

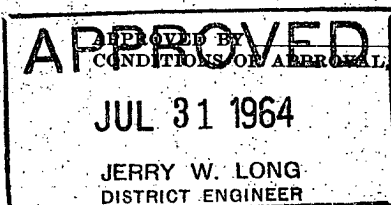

*See Instructions on Reverse Side

U. S. GEOLOGICAL SURVEY
DURANGO, COLO.