Form 3160-5 (August 2007)

RECEIVED

UNITED STATES DEPARTMENT OF THE INTERIOR

MAY 18 2000

FORM APPROVED

0

OMB No.	1004-013
 Expires: J	uly 31, 201

BUREAU OF LAND MANAGEMENT

Bureau of Land Mana

S. Lease Scrial No.

NM:12028

SUNDRY NOTICES AND REPORTS ON WELLSwington Field Co. If Indian, Allottee or Tribe Name

Do not use this	s form for p	roposals to	drill or to re	e-enter an
abandoned well	. Use Form	3160-3 (AP	D) for such	proposals

SUBMIT IN TRIPLICATE – Other instructions on page 2. 1. Type of Well Oil Well Other			7. If Unit of CA/Agreement, Name and/or No. 8. Well Name and No. Chaco Plant #5		
					2. Name of Operator Running Horse Production Co.
3a. Address PO Box 369 Ignacio, CO 81137		3b. Phone No. <i>(include area co</i> 970-563-5167	ode)	10. Field and Pool or Exploratory Area WAW Fruitland Sand Pc	
4. Location of Well (Footage, Sec., T. 1500' FNL 960' FWL, Section 21 726N R12W	R.,M., or Survey Description)			11. Country or Parish, San Juan County, N	
12. CHE	CK THE APPROPRIATE BOX	X(ES) TO INDICATE NATUR	RE OF NOTIO	CE, REPORT OR OTH	ER DATA
TYPE OF SUBMISSION		T	YPE OF ACT	rion	
Notice of Intent	Acidize Alter Casing	Deepen Fracture Treat		luction (Start/Resume)	Water Shut-Off Well Integrity
Subsequent Report	Casing Repair Change Plans	☐ New Construction✓ Plug and Abandon		omplete porarily Abandon	Other
Final Abandonment Notice	Convert to Injection	Plug Back	☐ Wat	er Disposal	

13. Describe Proposed or Completed Operation: Clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recomplete horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports must be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 must be filed once testing has been completed. Final Abandonment Notices must be filed only after all requirements, including reclamation, have been completed and the operator has determined that the site is ready for final inspection.)

RCVD MAY 22 '09 OIL CONS. DIV.

DIST. 3

Procedures:

- 1. MOL and RU completion rig. Hold safety meeting.
- 2. NU 2-3/8" relief line. Blow well down and kill with water if necessary.
- 3. Remove 2-7/8" tubing head.
- 4. Connect cement truck directly to 2-7/8" tubing and fil tubing with 40 sx (47 cu. ft.) of CI "B" cement with 1/4#sk celloflake. Drop 60 ball sealers in the first 10 sx of cement. Pump cement until tubing stands full.
- 5. Cut off wellhead and install dryhole marker. Reclaim location as per BLM specifications.

RECEIVED

MAY 1 9 2009


Bureau of Land Works School

	A61 62 51
e Engineer II	
e Engineer ii	
e 05/14/2009	
L OR STATE OFFICE U	JSE
Trid.	MAY 2° 2009
	Date
Office	
t	Title

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

RED WILLOW PRODUCTION COMPANY

Chaco Plant #5

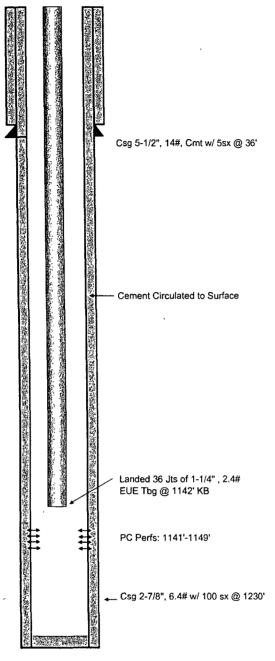

The second secon	VELL INFORMATION
WELLNAME	Chaco Plant #5
PROPERTY#	#01181
DATE (WBD updated)/Author	
API#	30-045-22067
STATUS	Shut In
SURFACE LOCATION	1500' FNL & 960' FWL
	Sec 21 T26N R12W