

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE  
(Other instructions on reverse side)

Form approved,  
Budget Bureau No. 42-11424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER		5. LEASE DESIGNATION AND SERIAL NO. CONTRACT NO. 156
2. NAME OF OPERATOR DYNA RAY OIL AND GAS CO., INC.		6. IF INDIAN, ALLOTTEE OR TRIBE NAME JICARILLA
3. ADDRESS OF OPERATOR 4101 E. Louisiana Avenue, Denver, Colorado, 80222		7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface  1850' from east line 1850' from south line		8. NAME OF LEASE NAME JICARILLA B 156
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 7366 KB	9. WELL NO. 2
		10. FIELD AND POOL, OR WILDLAND SO BLANCO, PC
		11. SEC., T., R., N. OR BDK. AND SURVEY OR AREA 2-23N-2W
		12. COUNTY OR PARISH 13. STATE RIO ARriba NEW MEXICO

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

TEST WATER SHUT-OFF

PULL OR ALTER CASING

WATER SHUT-OFF

REPAIRING WELL

FRACTURE TREAT

MULTIPLE COMPLETION

FRACTURE TREATMENT

ALTERING CASING

SHOOT OR ACIDIZE

ABANDON\*

SHOOTING OR ACIDIZING

ABANDONMENT\*

REPAIR WELL

CHANGE PLANS

(Other)

(Other)


(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) \*

We propose to plug and abandon this well. The well is non-productive and remedial operations are not warranted.

Plugging procedure:

1. Place 50 sack plug across perforations 3135'-3176'.
2. Cut off 4 1/2" casing. Pump 50 sacks cement on top of plug. Pull casing.
3. Place 25 sack plug inside 8 5/8" surface casing.
4. Erect dry hole marker.

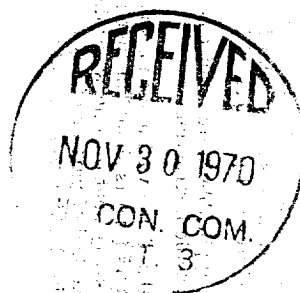

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

DATE

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

\*See Instructions on Reverse Side