

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

Contract 97

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

Jicarilla Tribal

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Tribal "C"

9. WELL NO.

2-7

10. FIELD AND POOL, OR WILDCAT

Mesaverde & Pictured cliff

11. SEC. T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 5, Twn. 26N, R3W.

12. COUNTY OR PARISH

13. STATE

Rio Arriba New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1.

OIL WELL ☐ GAS WELL ☒ OTHER

2. NAME OF OPERATOR

Consolidated Oil & Gas Inc.

3. ADDRESS OF OPERATOR

P.O. Box 2038, Farmington, New Mexico

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)

At surface

890' FWL & 890' FWL of Section 5, Township 26 North, Range
3 West, R3W.

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

7099' GL. 7110 KB.

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL


ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any
proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones perti-
nent to this work.)*

Consolidated Oil & Gas Inc. proposes to plug and abandon the Tribal "C"
7-5 as follows: Spot a cement plug across the Mesaverde perforations
5974' to 6092'. Spot a cement plug across Pictured cliff perforations
3822' to 3883'. Put a cement plug across stub of 7" casing at approximately
2000' with mud laden fluids between all plugs. A surface plug will
be in the top 100' and a permanent marker erected. All pits will be
leveled and the location cleaned of any junk.

This well is being plugged and abandoned because it is no longer an
economical producer.

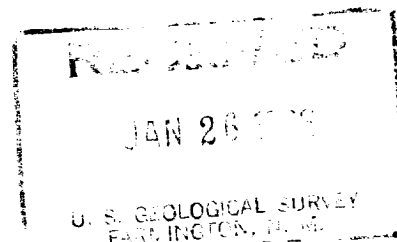

18. I hereby certify that the foregoing is true and correct

SIGNED

Clyde Sheppard


TITLE Production Foreman

(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

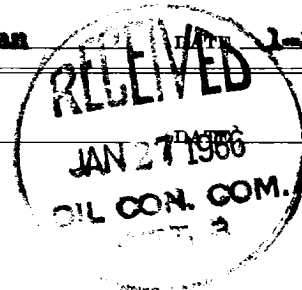

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.