

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input checked="" type="checkbox"/> Dry Hole		5. LEASE DESIGNATION AND SERIAL NO. NOO-C-14-20-5235
2. NAME OF OPERATOR Tenneco Oil Company		6. IF INDIAN, ALLOTTEE OR TRIBE NAME Navajo
3. ADDRESS OF OPERATOR 1200 Lincoln Tower Bldg., Denver, Colorado 80203		7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1650' FEL and 800' FSL		8. FARM OR LEASE NAME Mountview Com - 26D
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6652' GR	9. WELL NO. 1
		10. FIELD AND POOL, OR WILDCAT Basin Dakota
		11. SEC., T., E., M., OR BLK. AND SURVEY OR AREA Sec. 26, T 25N, R 10W
		12. COUNTY OR PARISH San Juan
		13. STATE New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☒
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other)

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*


☐
☐
☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work).*

Well drilled to TD of 6402' on 5/9/74. Tested dry. We propose to plug and abandon this well as follows:

1. MIRUPU.
2. Run cmt retainer to 6150' ±
3. Squeeze Dakota perms from 6236' to 6286' with 100 sacks cement. Leave 20' of cement on retainer top.
4. Put 150' cement plugs inside 5-1/2" casing at following depths: 5080' ±, 4360' ±, 2530' ±, 1665' ±.
5. Cut off casing head and 5-1/2" pipe.
6. Install 20' of cement and 6' dry hole marker in top of 5-1/2" pipe.
7. Clean and level location.

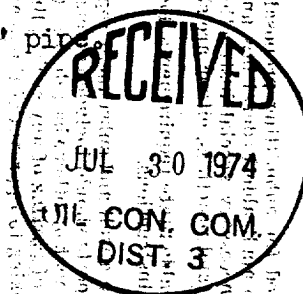

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE Sr. Production Clerk

DATE

7/25/74

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY: