

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEYSUBMIT IN TRIPPLICATE\*  
(Other instructions on reverse side)Form approved.  
Budget Bureau No. 42-R1424

## SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER		5. LEASE DESIGNATION AND SERIAL NO. SF 079115
2. NAME OF OPERATOR Dugan Production Corp.		6. IF INDIAN, ALLOTTEE OR TRIBE NAME
3. ADDRESS OF OPERATOR Box 234, Farmington, New Mexico 87401		7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1650' FSL — 990' FEL		8. FARM OR LEASE NAME Tonkin
14. PERMIT NO.		9. WELL NO. 2
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6100' GR		10. FIELD AND POOL, OR WILDCAT West Kutz - PC
		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 13, T27N, R12W
		12. COUNTY OR PARISH San Juan
		13. STATE NM

## 16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

## NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON\*

CHANGE PLANS

X

## SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING


ABANDONMENT\*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work)\*

## PLAN TO P&amp;A AS FOLLOWS:

1. Spot 25 cu ft cement 1675' to 1775'
2. Shoot off 5-1/2" casing at free point and recover casing
3. Spot cement plug 50' in and 50' above stub
4. Spot 50 cu ft cement 750' to 675'
5. Spot 10 cu ft cement in surface casing
6. Erect dry hole marker and clean up location.

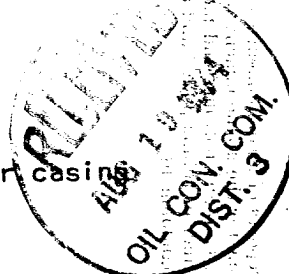

18. I hereby certify that the foregoing is true and correct

SIGNED Original signed by T. A. Dugan TITLE Petroleum Engineer  
Thomas A. Dugan

DATE 8-14-74

(This space for Federal or State office use)

APPROVED BY  
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

\*See Instructions on Reverse Side