

NO. OF COPIES RECEIVED	3
DISTRIBUTION	
SANTA FE	1
FILE	1
U.S.G.S.	
LAND OFFICE	
OPERATOR	1

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65


5a. Indicate Type of Lease	
State <input type="checkbox"/>	Fee <input checked="" type="checkbox"/>
5. State Oil & Gas Lease No.	

<b>SUNDRY NOTICES AND REPORTS ON WELLS</b> (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT - 1" (FORM C-101) FOR SUCH PROPOSALS.)	
1. <input checked="" type="checkbox"/> OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER-	7. Unit Agreement Name
2. Name of Operator Pettus and Associates	8. Farm or Lease Name Hunt
3. Address of Operator Box 234, Farmington, New Mexico 87401	9. Well No. 1
4. Location of Well UNIT LETTER <u>K</u> <u>1980</u> FEET FROM THE <u>South</u> LINE AND <u>1980</u> FEET FROM THE <u>West</u> LINE, SECTION <u>3</u> TOWNSHIP <u>29N</u> RANGE <u>16W</u> NMPM.	10. Field and Pool, or Wildcat, or Undesignated <i>Jewett Valley Hol.</i>
15. Elevation (Show whether DF, RT, GR, etc.)	12. County San Juan

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>
OTHER <input type="checkbox"/>	OTHER <input type="checkbox"/>
PLUG AND ABANDON <input checked="" type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
CHANGE PLANS <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

1. Spot 20 sacks cement plug 3561' to 3410'
2. Shot off casing at free point
3. Spot 25 sacks cement plug at casing stub
4. Spot 33 sacks cement plug 200' to 300'
5. Spot 10 sacks cement plug at surface
6. Erect dry hole marker and clean up location.

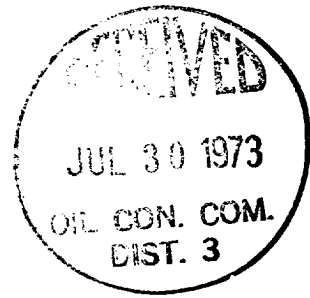

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED <u>Thomas A. Dugan</u>	TITLE <u>Agent</u>	DATE <u>7-26-73</u>
APPROVED BY <u>[Signature]</u>	TITLE <u>SUPERVISOR DIST. #3</u>	DATE <u>JUL 26 1973</u>
CONDITIONS OF APPROVAL, IF ANY:		