

NO. OF COPIES RECEIVED	3
DISTRIBUTION	1
SANTA FE	1
FILE	1
U.S.G.S.	
LAND OFFICE	
OPERATOR	1

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease
State <input type="checkbox"/> Federal <input checked="" type="checkbox"/>
5. State Oil & Gas Lease No.

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT - A" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name
2. Name of Operator El Paso Natural Gas Company	8. Farm or Lease Name Riddle
3. Address of Operator PO Box 990, Farmington, NM 87401	9. Well No. 5 (P&A)
4. Location of Well UNIT LETTER <u>K</u> <u>1840</u> FEET FROM THE <u>South</u> LINE AND <u>1840</u> FEET FROM <u>West</u> LINE, SECTION <u>4</u> TOWNSHIP <u>30N</u> RANGE <u>9W</u> NMPM.	10. Field and Pool, or Wildcat Undes. Farmington
15. Elevation (Show whether DF, RT, GR, etc.) 6147'GL	12. County San Juan

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>

SUBSEQUENT REPORT OF:

REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.


Due to non-production it is planned to plug and abandon this well in the following manner:

Spot a 50 sk. cement plug over the perforations from 1915' to 2244', to cover to approximately 1600' which will cover the Ojo Alamo inside the casing. (The original cement job covered the Ojo Alamo outside the casing.)

Determine the free point by stretch of the 4 1/2" casing and shoot off. Spot a 50 sk. cement plug on top of the casing stub. Pull casing. Spot a 25 sk. cement plug at the base of the surface casing.

Place a 15 sk. cement plug at the surface with a 4'X 4" Plug & Abandon marker.

Clean up location.

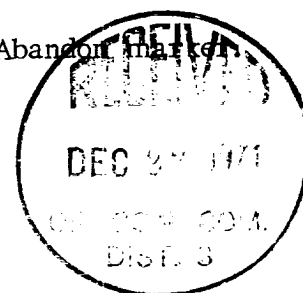

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED Original Signed F. H. WOOD TITLE Petroleum Engineer DATE December 20, 1971

APPROVED BY [Signature] TITLE Supervisor DATE 12-22-71
CONDITIONS OF APPROVAL, IF ANY: