

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

14-20-604-89

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

Ute Mountain Tribal

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Ute Mountain Tribal "A"

9. WELL NO.

4

10. FIELD AND POOL, OR WILDCAT

Verde Gallup

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

NW/4 SE/4 Section 33,
T-31-N, R-15-W

12. COUNTY OR PARISH

San Juan

13. STATE

New Mexico

1.

OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

PAN AMERICAN PETROLEUM CORPORATION

3. ADDRESS OF OPERATOR

P. O. Box 480, Farmington, New Mexico

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*

See also space 17 below.)

At surface 1705 FSL and 1980 FEL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

5493 (RDB)

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

As a result of declining production we propose to plug and abandon the above well as follows:

1. Move in pulling unit and pull rods and tubing.
2. Re-run tubing and recover 4-1/2" slotted liner set 2917 to 3096.
3. Pump 50 sacks cement down 5-1/2" casing with cementing plug, leaving cement plug about 2950, which would be 150' off bottom and 55' above bottom of 5-1/2" casing. Squeeze 15 sacks into formation leaving 35 sacks in casing.
4. Pump 25 sacks cement down 5-1/2" - 8-5/8" casing annulus.
5. Remove wellhead and surface equipment.
6. Spot 5 sack cement plug from surface to 40' and erect abandonment marker.
7. Clean up location and return ground to original contours.

Verbal approval received from Jerry Long to F. H. Hollingsworth on March 22, 1965.

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

DATE


(This space for Federal or State office use)

TITLE

DATE

Fred L. Hollingsworth District Engineer


July 14, 1965



*See Instructions on Reverse Side

St

DURANGO, COLO.

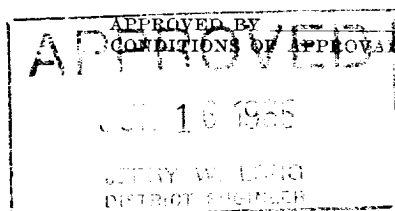

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.