
Submit I Copy To Appropriate District	Form C-103				
Office	October 13, 2009				
District 4 – (5/5) 393-6161	WELL API NO.				
District II - (575) 748-1283	30-015-02451				
811 S. First St., Artesia, NM 88210	5. Indicate Type of Lease				
District III ~ (505) 334-6178	STATE FEE				
District IV – (505) 476-3460 Provide P	6. State Oil & Gas Lease No.				
Office District II - (575) 393-6161 1625 N. French Dr., Hobbs, NM 88240 District III - (575) 748-1283 811 S. First St., Artesia, NM 88210 District III - (505) 334-6178 1000 Rio Brazos Rd., Aztec, NM 8010 of test District IV - (505) 476-3460 1220 S. St. Francis Dr., Santa C, NM 87505					
Submer Copy to Appropriate District Office District II - (575) 393-6161 1625 N. French Dr., Hobbs, NM 88240 District II - (575) 748-1283 811 S. First St., Artesia, NM 88210 District III - (505) 334-6178 1000 Rio Brazos Rd., Aztec, NM 8010 District IV - (505) 476-3460 1220 S. St. Francis Dr., Santa e, NM 87505 SUNDRY NOTICES CD REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A	7. Lease Name or Unit Agreement Name				
	Saladar				
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH					
PROPOSALS.) 1. Type of Well: Oil Well 🖾 Gas Well 🗋 Other	8. Well Number 1				
2. Name of Operator	9. OGRID Number				
MNA Enterprises Limited Company	124768				
3. Address of Operator	10. Pool name or Wildcat				
106 W. Alabama, Hobbs NM 88242	Saladar Yates				
4. Well Location					
Unit Letter <u>L</u> : <u>2130</u> feet from the <u>S</u> line and <u>S</u>	990 feet from the <u>W</u> line				
Section 33 Township 20 Range 28 NMPM	County Eddy				
11. Elevation (Show whether DR, RKB, RT, GR, etc.					
3203 GR					
12. Check Appropriate Box to Indicate Nature of Notice,	Papart or Other Data				
12. Check Appropriate Box to indicate Nature of Notice,	Report of Other Data				
NOTICE OF INTENTION TO: SUB	SEQUENT REPORT OF:				
PERFORM REMEDIAL WORK 🔲 PLUG AND ABANDON 🛛 REMEDIAL WOR					
PULL OR ALTER CASING 🔲 MULTIPLE COMPL 🔲 CASING/CEMEN					
OTHER:					
13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date					
of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of					
proposed completion or recompletion. 1. Spot 25 sx cmt @ 720' (Estimated top @ 490')					
3. Spot 70 sx cmt @ tag to surface.	+ SQ - WOL & TAC				
4. Cut off wellhead, install dry hole marker.					
www.emnra.state.nm.us					
Current forms are available on our					
current forms are available on our					
website and should be used when					
filing regulatory documents.	Minute in the internet and size minute of the internet in the internet of the				
	durbing dis recar of Web Page				
	red in ter hone Rer CD wellow				
	Angen with the found state. nm				
Spud Date: Rig Release Date:	1 1. C. O. Tur he genro				
WELL MUST BE PLUCGED BY 12/14/19	Anter num vering and succommunications of the second of the second and the second of t				
l hereby certify that the information above is true and complete to the best of my knowledge and belief.					
Λ					
SIGNATURE Bunnett - R TITLE Agent	DATE 12.13.16				
SIGNATORE TALE TY ITTLE FIGURE	DATED				
Type or print name Ben Montgomery E-mail address: Benma Bernardossociates PHONE: 432-580.7161					
For State Use Only					
APPROVED BY: Maint Sur TITLE COMPLIANCE	OFFICER DATE 12/14/16				
Conditions of Approval (if any):					

A	SEE	~	ATTACHED	COA'S
---	-----	---	----------	-------

Form provided by Forms On-A-Disk · (214) 340-9429 · FormsOnADisk.com

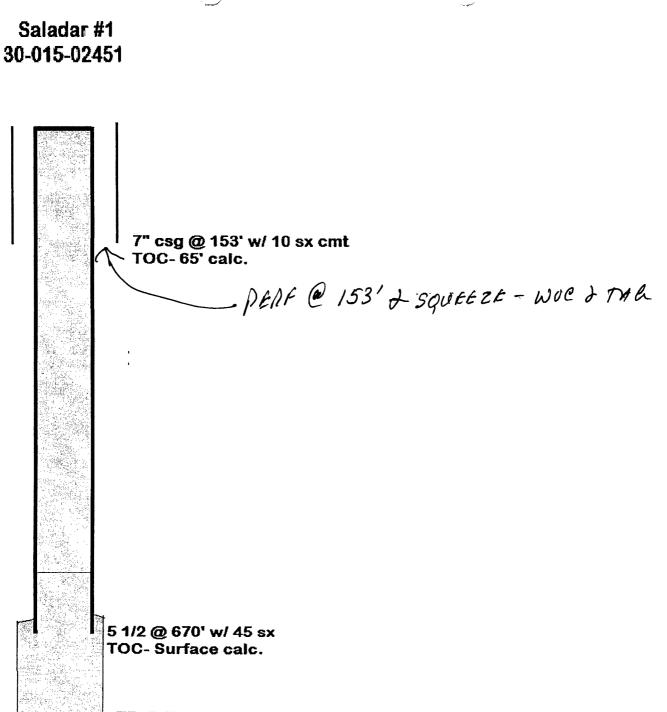

TD @ 720' OH 6 1/4 hole

ъ

CONDITIONS FOR PLUGGING AND ABANDONMENT

District II / Artesia N.M.

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office II at (575)-748-1283 at least 24 hours before beginning work.

- 1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 7. Produced water will not be used during any part of the plugging operation.
- 8. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- 9. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 10. Class 'C' cement will be used above 7500 feet.

•

- 11. Class 'H' cement will be used below 7500 feet.
- 12. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 13. All Casing Shoes Will Be Perforated and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing
- 14. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 15. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 16. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).

- 17. No more than **3000' is allowed between cement plugs in cased hole and 2000' in open hole.**
- 18. Formations to be isolated with cement plugs are:
 - A) Fusselman

۲

- B) Devonian
- C) Morrow
- D) Wolfcamp
- E) Bone Springs
- F) Delaware
- G) Any salt sections
- H) Abo
- I) Glorieta
- J) Yates.
- K) Potash--- (In the R-111-P Area (Potash Mine Area), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
- 19. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing

DRY HOLE MARKER REQUIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

1. Operator name 2. Lease and Well Number 3. API Number 4. Unit Letter 5. Quarter Section (feet from the North, South, East or West) 6. Section, Township and Range 7. Plugging Date 8. County

(SPECIAL CASES)

AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)