Form 3160-5 (June 2015)

### **UNITED STATES** DEPARTMENT OF THE INTERIOR

BUREAU OF LAND MANAGEMENT

OMB NO. 1004-0137 Expires: January 31, 2018

5. Lease Serial No. NMLC067348

SUNDRY NOTICES AND REPORTS ON WELLS	
Do not use this form for proposals to drill or to re-enter a	
abandoned well. Use form 3160-3 (APD) for such proposa	ls.

FORM APPROVED

abandoned we	II. Use form 3160-3 (AP	D) for such proposals.	6. If Indian, Allottee or Tribe Name
SUBMIT IN	TRIPLICATE - Other ins	tructions on page 2	7. If Unit or CA/Agreement, Name and/or No.
Type of Well     Gas Well □ Ot	her		8. Well Name and No. DIXON YATES LM FEDERAL 001
Name of Operator     EOG Y RESOURCES INC		KAY MADDOX dox@EOGRESOURCES.com	9. API Well No. 30-015-23272
3a. Address PO BOX 2267 MIDLAND, TX 79702	<del></del>	3b. Phone No. (include area coor Ph: 432-686-3658	de) 10. Field and Pool or Exploratory Area LOCO HILLS; WOLFCAMP
4. Location of Well (Footage, Sec., 2	T., R., M., or Survey Description	n)	11. County or Parish, State
Sec 28 T18S R29E 1680FNL	1980FEL		EDDY COUNTY, NM
12. CHECK THE A	PPROPRIATE BOX(ES)	TO INDICATE NATURE	OF NOTICE, REPORT, OR OTHER DATA
TYPE OF SUBMISSION	PE OF SUBMISSION TYPE OF ACTION		
	D Asidi-a	T Doomon	Dec duction (Stort/Decourse) D Water Shut Off

I I LE OL SOBMISSION	THEOFACTION				
Notice of Intent	☐ Acidize	☐ Deepen	☐ Production (Start/Resume)	☐ Water Shut-Off	
_	☐ Alter Casing	☐ Hydraulic Fracturing	□ Reclamation	□ Well Integrity	
☐ Subsequent Report	□ Casing Repair	☐ New Construction	☐ Recomplete	□ Other	
☐ Final Abandonment Notice	☐ Change Plans	Plug and Abandon	☐ Temporarily Abandon		
	☐ Convert to Injection	☐ Plug Back	☐ Water Disposal		

13. Describe Proposed or Completed Operation: Clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recomplete horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports must be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 must be filed once testing has been completed. Final Abandonment Notices must be filed only after all requirements, including reclamation, have been completed and the operator has determined that the site is ready for final inspection.

EOG Y Resources requests permission to plug this well using the attached procedure. The current and proposed wellbore schematics are attached.

WIN OIL CONSERVATION ARTESIA DISTRICT

MAY 2 2 2017

RECLAMATION PROCEDURE ATTACHED

LLE ATTACHED FOR CONDITIONS OF APPROVAL

14. I hereby certify that t	ne foregoing is true and correct.  Electronic Submission #375238 verifi For EOG Y RESOURCES Committed to AFMSS for processing b	NC, se	ent to the Carlsbad	05/10/2017 ()	, 401,	(ecold
Name (Printed/Typed)	KAY MADDOX	Title	REGULATORY	ANALYST	100 C	$Q_{\mu}$
Signature	(Electronic Submission)	Date	05/08/2017	Vicce	SiNO	1/3/
	THIS SPACE FOR FEDER	AL OR	STATE OFFICE	USE	14	
Approved By	eme a lamo	Title	5067			5-/7-/ Date
certify that the applicant ho	ny, are attached. Approval of this notice does not warrant or ds legal or equitable title to those rights in the subject lease licant to conduct operations thereon.	Office	e lto			

States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.



Dixon & Yates LM Federal #1 1680' FNL & 1980' FEL Sec. 28-185-29E Eddy County, New Mexico API # 30-015-23272

### P&A Procedure AFE # 108343

### **Executive Summary:**

Pull production equipment, P&A well, cut off wellhead, install dry hole marker and clean location.

**TD:** 11

11,500'

**PBTD**: 9,600'

GR:

3,438'

KB: 3,451'

Surface Casing:

13 %" 48# at 426'. Cemented with 450 sx. Cement circulated. 8 %" 32# at 2,878'. Cemented with 1,650 sx. Cement circulated.

Intermediate Casing: Production Casing:

4 ½" 11.6# & 13.5# at 11,423'. Cemented with 880 sx. TOC at 8,410' by TS.

#### P&A Procedure:

- 1. MIRU well service unit and all necessary safety equipment. ND wellhead and NU BOP. TOH with production equipment. RU WL and make a GR & JB run to 8,697'. POOH. RIH with 4½" CIBP and set CIBP at 8,687'. POOH.
- 2. TIH with open ended tubing, tag CIBP at 8,687', load the hole with plugging mud and spot 25 sx class "H" cement on top of CIBP. Pick up, reverse tubing clean and POOH.
- 3. RU WL to RIH and perf 4½" casing at 6,861'. POOH. TIH with 4½" packer, set packer at 6,700' and spet a 160' (≈ 45 sx) class "H" cement plug from 6,861'-6,700' inside and outside 4½" casing (this will cover top of Bone Springs). Release packer, pick up, reverse tubing clean and POOH. 200 € 74-9
- 4. RU WL to RIH and perf 4½" casing at 3,700'. POOH. TIH with 4½" packer, set packer at 3,570' and spot a 130' (≈ 30 sx) class "C" cement plug from 3,700'-3,570' inside and outside 4½" casing (this fulfills minimum plug spacing requirement). Release packer, pick up, reverse tubing clean and POOH.
  - 5. RU WL to RIH and perf 4½" casing at 2,928'. POOH. TIH with 4½" packer, set packer at 2,700' and 50 poot a 228' (≈ 55 sx) class "C" cement plug from 2,978'-2,700' inside and outside 4½" casing (this will cover 8½" csg shoe and top of San Andres). Release packer, pick up, reverse tubing clean and POOH to WOC. Add Alag Perf @ 1034, Soz cm + + > 934. Loo C Tag. (Typics)


6. RU WL to RIH and tag TOC, then pull up and perf 4½" csg at 476'. POOH. Circulate a 115 sx class "C" cement plug from 476' to surface.


7. RDMO well service unit, cut off wellhead, install dry hole marker and clean location.

Production Engineer:

Brice A. Letcher, P.E.

Bris A Settle Date: 5/4/2017

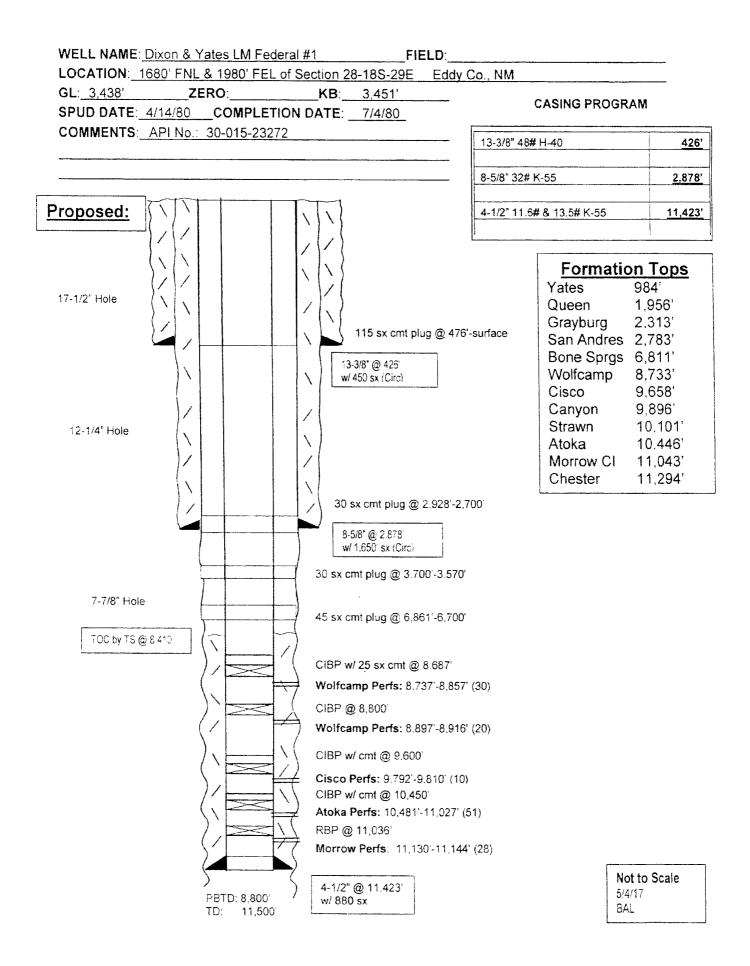

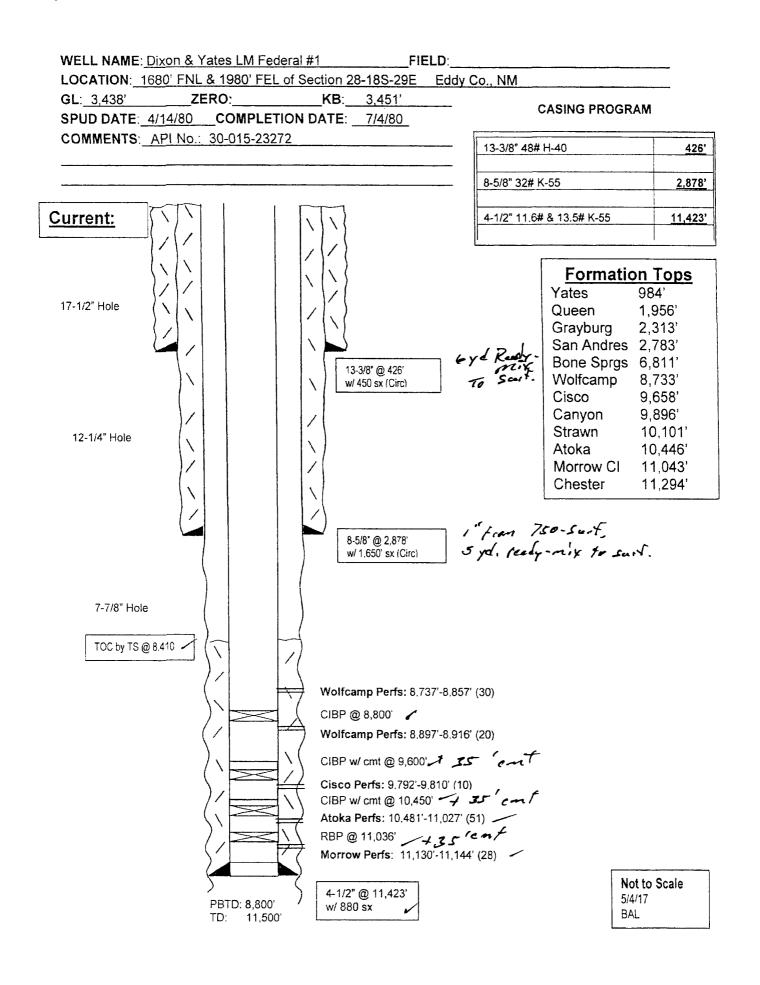

In the event of an a	accident/safety incident involving EOG	employees or conti	ract personnel
contact:			
Name	Title	Cell	Office
Brian Chandler	Safety Manager	817-239-0251	817-806-0486
Ashley Mayfield	Sr. Safety Rep	432-258-7998	432-686-3662
In the event of a sp	pill or environmental release contact:		
Name	Title	Cell	Office
Zane Kurtz	Sr. Environmental Rep	432-425-2023	432-686-3667
Jamon Hohensee	Environmental Rep	432-556-8074	
Doug Lowrie	Environmental Manager	432-425-6923	432-686-3755
<b>Production Depart</b>	ment Contacts:		
Name	Title	Cell	Office
Mario Arevalo	NM Prod. Superintendent	940-231-8118	575-738-0397
Aaron Bishop	Production Foreman	575-703-6527	
Junior Orquiz	Sr. Production Foreman	575-703-5071	
Joe Palma	Production Foreman	575-365-5562	
Brice Letcher	Sr. Production Engineer	575-748-5021	432-686-6965
Eric Burkholder	Lead Production Engineer	817-374-3321	432-686-3682
Shane Brannan	Sr. Production Engineer	432-269-5030	432-686-3688
James Keeton	Production Engineer II	940-391-6856	432-686-3635
Joey Damiano	Sr. Production Engineer	817-739-8042	432-686-3675
Ron Willett	Production Advisor	432-230-2135	432-686-3775
Randy Lewellen	Production Superintendent	682-478-8879	432-686-3710
Completions Depa	rtment Contacts:		
Name	Title	Cell	Office
Alex Richter	Completions Engineer Advisor	432-634-9148	432-686-3638
Tom Redd	Completions Engineer Advisor	303-854-8605	432-686-3674
Police/Fire/Hospit	al Contacts		
Fire			911
Sheriff (Eddy Coun	575-887-7551		
Sheriff (Lea County	575-396-3611		
Hospital – Carlsbac	575-887-4100		
Hospital – Lea Reg	575-492-5000		
Hospital – Nor-Lea	575-396-6611		
Hospital – Winkler	432-586-5864		

# BUREAU OF LAND MANAGEMENT Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 575-234-5972

## Permanent Abandonment of Federal Wells Conditions of Approval

Failure to comply with the following Conditions of Approval may result in a Notice of Incidents of Noncompliance (INC) in accordance with 43 CFR 3163.1.

1. Plugging operations shall commence within <u>ninety (90)</u> days from the approval date of this Notice of Intent to Abandon.

If you are unable to plug the well by the 90<sup>th</sup> day provide this office, prior to the 90<sup>th</sup> day, with the reason for not meeting the deadline and a date when we can expect the well to be plugged. Failure to do so will result in enforcement action.

The rig used for the plugging procedure cannot be released and moved off without the prior approval of the authorized officer. Failure to do so may result in enforcement action.

- 2. <u>Notification:</u> Contact the appropriate BLM office at least 24 hours prior to the commencing of any plugging operations. For wells in Chaves and Roosevelt County, call 575-627-0272; Eddy County, call 575-361-2822; Lea County, call 575-393-3612.
- 3. <u>Blowout Preventers</u>: A blowout preventer (BOP), as appropriate, shall be installed before commencing any plugging operation. The BOP must be installed and maintained as per API and manufacturer recommendations. The minimum BOP requirement is a 2M system for a well not deeper than 9.090 feet; a 3M system for a well not deeper than 13,636 feet; and a 5M system for a well not deeper than 22,727 feet.
- 4. <u>Mud Requirement:</u> Mud shall be placed between all plugs. Minimum consistency of plugging mud shall be obtained by mixing at the rate of 25 sacks (50 pounds each) of gel per 100 barrels of brine water. Minimum nine (9) pounds per gallon.
- 5. <u>Cement Requirement</u>: Sufficient cement shall be used to bring any required plug to the specified depth and length. Any given cement volumes on the proposed plugging procedure are merely estimates and are not final. Unless specific approval is received, no plug except the surface plug shall be less than 25 sacks of cement. Any plug that requires a tag will have a minimum WOC time of 4 hours.

In lieu of a cement plug across perforations in a cased hole (not for any other plugs), a bridge plug set within 50 feet to 100 feet above the perforations shall be capped with 25 sacks of cement. If a bailer is used to cap this plug, 35 feet of cement shall be sufficient. Before pumping or bailing cement on top of CIBP, tag will be required to verify depth. Based on depth, a tag of the cement may be deemed necessary.

Unless otherwise specified in the approved procedure, the cement plug shall consist of either Neat Class "C", for up to 7,500 feet of depth or Neat Class "H", for deeper than 7,500 feet plugs.

6. <u>Dry Hole Marker</u>: All casing shall be cut-off at the base of the cellar or 3 feet below final restored ground level (whichever is deeper). The BLM is to be notified a minimum of 4 hours prior to the wellhead being cut off to verify that cement is to surface in the casing and all annuluses. Wellhead cut off shall commence within ten (10) calendar days of the well being plugged. If the cut off cannot be done by the 10<sup>th</sup> day, the BLM is to be contacted with justification to receive an extension for completing the cut off.

The well bore shall then be capped with a 4-inch pipe, 10-feet in length, 4 feet above ground and embedded in cement, unless otherwise noted in COA (requirements will be attached). The following information shall be permanently inscribed on the dry hole marker: well name and number, name of the operator, lease serial number, surveyed location (quarter-quarter section, section, township and range or other authorized survey designation acceptable to the authorized officer such as metes and bounds).

- 7. <u>Subsequent Plugging Reporting:</u> Within 30 days after plugging work is completed, file one original and three copies of the Subsequent Report of Abandonment, Form 3160-5 to BLM. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. **Show date well was plugged.**
- 8. <u>Trash</u>: All trash, junk and other waste material shall be contained in trash cages or bins to prevent scattering and will be removed and deposited in an approved sanitary landfill. Burial on site is not permitted.

Following the submission and approval of the Subsequent Report of Abandonment, surface restoration will be required. See attached reclamation objectives.





#### BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 E. Greene St. Carlsbad, New Mexico 88220-6292 www.blm.gov/nm



In Reply Refer To: 1310

### Reclamation Objectives and Procedures

Reclamation Objective: Oil and gas development is one of many uses of the public lands and resources. While development may have a short- or long-term effect on the land, successful reclamation can ensure the effect is not permanent. During the life of the development, all disturbed areas not needed for active support of production operations should undergo "interim" reclamation in order to minimize the environmental impacts of development on other resources and uses. At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its predisturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, redistribute the native soils, provide erosion control as needed, rip and seed as specified in the original APD COA. This will apply to well pads, facilities, and access roads. Barricade access road at the starting point. If reserve pits have not reclaimed due to salts or other contaminants, submit a plan for approval, as to how you propose to provide adequate restoration of the pit area.

- 1. The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of Operations must include adequate measures for stabilization and reclamation of disturbed lands. Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD process as per Onshore Oil and Gas Order No. 1.
- 2. For wells and/or access roads not having an approved plan, or an inadequate plan for surface reclamation (either interim or final reclamation), the operator must submit a proposal describing the procedures for reclamation. For interim reclamation, the appropriate time for submittal would be when filing the Well Completion or Recompletion Report and Log (Form 3160-4). For final reclamation, the appropriate time for submittal would be when filing the Notice of Intent, or the Subsequent Report of Abandonment, Sundry Notices and Reports on Wells (Form 3160-5). Interim reclamation is to be completed within 6 months of well completion, and final reclamation is to be completed within 6 months of well abandonment.
- 3. The operator must file a Subsequent Report Plug and Abandonment (Form 3160-5) following the plugging of a well.
- 4. Previous instruction had you waiting for a BLM specialist to inspect the location and provide you with reclamation requirements. If you have an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It would be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation

equipment to ensure that it meets BLM objectives. Upon conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a specialist to inspect the location to verify work was completed as per approved plans.

- 5. The approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been reestablished. If the BLM objectives have not been met the operator will be notified and corrective actions may be required.
- 6. It is the responsibility of the operator to monitor these locations and/or access roads until such time as the operator feels that the BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the BLM objectives have been met submit a Final Abandonment Notice (FAN), Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
- 7. At this time the BLM specialist will inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability of the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

Jim Amos Supervisory Petroleum Engineering Tech 575-234-5909, 575-361-2648 (Cell)

Arthur Arias Environmental Protection Specialist 575-234-6230

Linda Denniston
Environmental Protection Specialist
575-234-5974

Henryetta Price Environmental Protection Specialist 575-234-5951

Dara Glass Environmental Protection Specialist 575-234-5924

Shelly Tucker Environmental Protection Specialist 575-234-5979