

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
OMB No. 1004-0137
Expires: March 31, 2007

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

SUBMIT IN TRIPLICATE - Other instructions on reverse side.

1. Type of Well
☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator
Chesapeake Operating Inc.

3a. Address
P. O. Box 11050 Midland TX 79702-8050

3b. Phone No. (include area code)
(432)687-2992

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)
10' FSL & 2170 FEL of Sec. 1, T21S, R27E

5. Lease Serial No.

NMNM-17095

6. If Indian, Allottee or Tribe Name

7. If Unit or CA/Agreement, Name and/or No.

8. Well Name and No.

Government "D" 14

9. API Well No.

30-015-25560

10. Field and Pool, or Exploratory Area
NW Fenton Delaware


11. County or Parish, State
Eddy
New Mexico

12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION			
<input type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (Start/Resume)	<input type="checkbox"/> Water Shut-Off
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Fracture Treat	<input type="checkbox"/> Reclamation	<input type="checkbox"/> Well Integrity
<input checked="" type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete	<input type="checkbox"/> Other
	<input type="checkbox"/> Change Plans	<input type="checkbox"/> Plug and Abandon	<input type="checkbox"/> Temporarily Abandon	
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Disposal	

13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompleat horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompleat in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

Attached is the amended procedure, per Les Babyak's request, for the plug and abandonment for this well.

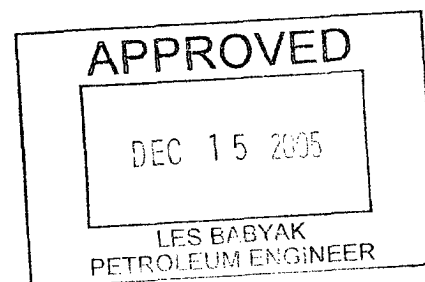

14. I hereby certify that the foregoing is true and correct
Name (Printed/Typed)

Brenda Coffman

Title Regulatory Analyst

Signature

Brenda Coffman

Date 12/13/2005

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved by

Title

Date

Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.

Office

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

Government D #14
Plug and Abandonment Procedure
Revised 12-13-2005
Eddy County, New Mexico

1. Notify the BLM and/or NMOCD 24 hrs in advance prior to commencing plug and abandonment operations.
2. MIRU Well Service Unit. ND wellhead. NU BOP. Bail 4 - 5 sxs of cement on the CIBP at 2660' (35' minimum on plug). TIH w/ 2 3/8" tubing to PBTD ~2625'. Circulate 5 1/2" casing with salt gel mud containing 9.5 pound brine and 25 lbs of gel per barrel.
3. Spot a 100' Class "C" Neat cmt plug from 2222-2122'. Shut in for 4 hrs and tag top of cement. Spot additional cement if needed.
4. Spot a 100' Class "C" Neat cmt plug from ~1400-1500' (10-3/4" shoe). Shut in for 4 hrs and tag top of cement. Spot additional cement if needed.
5. Spot a 100' Class "C" Neat cmt plug from 1100-1200' (TOL). Shut in for 4 hrs and tag top of cement. Spot additional cement if needed.
6. Spot a 100' Class "C" Neat cmt plug from 585-485' (13-3/8" shoe). Shut in for 4 hrs and tag top of cement. Spot additional cement if needed.
7. Spot 60' Class "C" Neat cmt plug from 63-3'.
8. ND BOP. Cut off 13 - 3/8" and 10-3/4" casings 3' below Ground Level.
9. Weld on an ID plate. RD and release Well Service Unit. Restore location.