

Submit 1 Copy To Appropriate District
Office
District I
1625 N. French Dr., Hobbs, NM 88240
District II
1301 W. Grand Ave., Artesia, NM 88210
District III
1000 Rio Brazos Rd., Aztec, NM 87410
District IV
1220 S. St. Francis Dr., Santa Fe, NM
87505

State of New Mexico
Energy, Minerals and Natural Resources

Form C-103
October 13, 2009

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

WELL API NO. 30-015-00054
5. Indicate Type of Lease STATE <input checked="" type="checkbox"/> FEE <input type="checkbox"/>
6. State Oil & Gas Lease No.
7. Lease Name or Unit Agreement Name GORMAN STATE
8. Well Number 1
9. OGRID Number 13343
10. Pool name or Wildcat CANYON WOLFCAMP
11. Elevation (Show whether DR, RKB, RT, GR, etc.)

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well: Oil Well <input checked="" type="checkbox"/> Gas Well <input type="checkbox"/> Other
2. Name of Operator LINDENMUTH & ASSOCIATES, INC.
3. Address of Operator 510 HEARN STREET, SUITE 200, AUSTIN, TX 78703
4. Well Location Unit Letter C : 660 feet from the N line and 1980 feet from the W line Section 36 Township 19S Range 24E NMPM County EDDY
11. Elevation (Show whether DR, RKB, RT, GR, etc.)

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☒
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐
PULL OR ALTER CASING ☐ MULTIPLE COMPL ☐
DOWNHOLE COMMINGLE ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐
COMMENCE DRILLING OPNS. ☐ P AND A ☐
CASING/CEMENT JOB ☐

OTHER: ☐

OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach well log diagram of proposed completion or recompletion.

1. Clean out hole to TD.
2. Spot a 50 sx plug @ 5741'. WOC & tag plug.
3. Perforate & squeeze. Spot a 25 sx plug @ 4970'. WOC & tag plug.
4. Perforate & squeeze. Spot a 255 sx plug @ 3400' to cover B.S. WOC & tag plug.
5. Perforate 5 1/2 csg @ 1050' & circulate cement up backside to surface. Shut-in valve @ surface and fill 4 1/2 csg to surface.
6. Set PXA marker, clean & level location. Cut off anchors.

* Note: Mud laden fluid must be placed between all cement plugs, mixed at 25 sx of gel per 100 bbls water.

Spud Date: ASAP after NMOCC approval.

Rig Release Date:

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE

TITLE

PRESIDENT

DATE

1/4/2011

Type or print name GERALD S. LINDENMUTH

E-mail address: glindenmuth@llbcompany.com

PHONE: 512-322-9779

For State Use Only

APPROVED BY:

TITLE

DATE

1/10/2011

Conditions of Approval (if any):

Approval Granted providing work
is complete by 2/28/2011

LINDENMUTH AND ASSOCIATES, INC.
OIL AND GAS PRODUCERS

January 4, 2011


Phil Hawkins
Oil Conservation Division
1301 W. Grand Ave.
Artesia, NM 88210


Re: Plug & Abandon
Gorman State #1
Eddy County, NM

Dear Mr. Hawkins:

Enclosed is our revised Form C-103 to plug and abandon the Gorman State #1 well. We plan to start within the next week and will call to notify you 24 hours beforehand. Please let me know if you have any questions or concerns.

Sincerely,

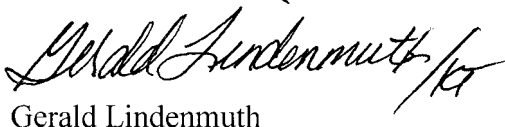
Gerald Lindenmuth

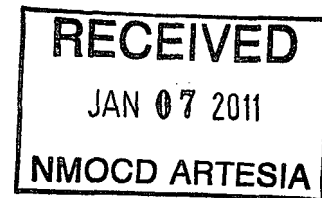

kt

Enclosure