



NEW MEXICO ENERGY, MINERALS and NATURAL RESOURCES DEPARTMENT

GARY E. JOHNSON
Governor
Jennifer A. Salisbury
Cabinet Secretary

Lori Wrotenbery
Director
Oil Conservation Division

11/27/01

copy

Jack J. Grynberg
Prentice Point, Suite 500
5299 DTC Boulevard
Greenwood Village, Co. 80111-332

RE: HORSE CREEK ST. COM. # 2	C-4-5-24	30-005-61935
GRYNBERG 32 ST. # 3	N-32-5-24	30-005-61344
GRYNBURG 16 ST. # 3	E-16-5-24	30-005-61151
GRYNBURG 16 ST. # 4	G-16-5-24	30-005-61152

Dear Sirs:


An inspection of your wells on 11-01-2001 found these wells not producing. A search of the records found no production for the last year. The wells have been idle for 12 months which puts them in violation of Rule 201.B. These wells must be brought into compliance on or before 27 February, 2002. To bring them into compliance you have 3 options:

1. Put the wells into production.
2. T.A. the wells.
3. P. A. the wells.

Thank you for your prompt attention to this matter and your efforts in helping to protect our environment and the infrastructure of the oil and gas industry.

Sincerely,

Van Barton
Field Rep. II

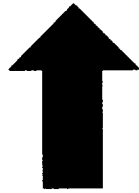

LTR



Job separation sheet

30-015-6112

1980'N / 1980' - 16-5-24

Jack J. Grynberg

Grynberg 16 St. #4

Before

1. Run + set CIBP @ 3446' @ 35' cement.
or Run tubing to 3630'

Set 25 sx cement Plug 3446' 3546' TAG

2. Circulate brine gel.

3. Set 25 sx cement Plug 1210' 1110'

4. Perforate 4 1/2" casing @ 951'

5. Run Packer. Squeeze cement 100' cement Plug
inside + outside 4 1/2" casing. TAG

6. Perforate 4 1/2" casing @ 100'
Circulate cement to surface
inside + outside 4 1/2" casing.

7. Cut + level all surface pits,

+ Perfs 3546' 3750', Cut deamen, Clear location of junk,
Erect dry hole marker.

4 1/2" csq

set @ 3990'

w/1460 sx cement.

cal. to circ. ?

No Well Sign

No Flowline.

Shut-IN.

11/01/01

RJ