

UN. STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPL
(Other instructions on re-
verse side)


Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

clsf

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐
2. NAME OF OPERATOR
Stevens Operating Corporation
3. ADDRESS OF OPERATOR
P.O. Box 2408, Roswell, NM 88201
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

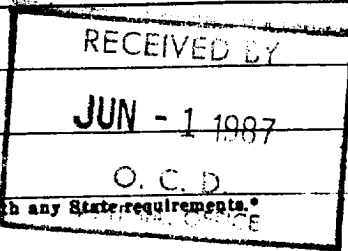

660 FEL, 1980 FSL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, OR, etc.)

4101.9 GR

5. LEASE DESIGNATION AND SERIAL NO.

NM-22070

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

N/A

7. UNIT AGREEMENT NAME

N/A

8. FARM OR LEASE NAME

Schutz Federal

9. WELL NO.

#1

10. FIELD AND POOL, OR WILDCAT

Wildcat-San Andres

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec 4, T7S, R27E

12. COUNTY OR PARISH

Chaves

13. STATE

NM

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON* Plug

CHANGE PLANS

☐
☐
☒
☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

☐
☐
☐

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

☐
☐
☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)


17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

We propose to set a CIBP @ 1425' w/ 35' cement plug. Cut 6 5/8" casing at free point and pull out of hole. We would load the hole with 25 sacks (50#) of gel per 100 Bbbls of water. Run a cement plug 50' below and 50' above the 6 5/8" stub. Tag the top of the cement and set a 10' cement surface plug. Set dry hole marker.

50'

* There needs to be a 100' cmt plug across the 8 5/8" casing shoe from at least 452'-352'.

Peter W. Chester

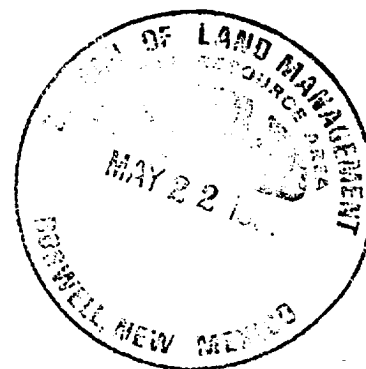

18. I hereby certify that the foregoing is true and correct

SIGNED

John E. White

TITLE Production Manager

(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

5-18-87

APPROVED

PETER W. CHESTER

DATE

MAY 29 1987

BUREAU OF LAND MANAGEMENT
ROSWELL RESOURCE AREA

*See Instructions on Reverse Side