

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
N.M. Oil Cons. Division

FORM APPROVED
Budget Project No. 1004-0113
Expires March 31, 1993
at Designation and Serial No.

SUNDRY NOTICES AND REPORTS ON WELLS
Do not use this form for proposals to drill or to deepen or re-enter a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

NM14900

SUBMIT IN TRIPLICATE

1. Type of Well ☒ Oil Well ☐ Gas Well ☐ Other	6. If Indian, Allottee or Tribe Name
2. Name of Operator Hanson Operating Company, Inc.	7. If Unit or CA, Agreement Designation
3. Address and Telephone No. P.O. Box 1515, Roswell, NM 88202-1515	8. Well Name and No. <i>FEDERAL</i> Square Lake #1
4. Location of Well (Footage, Sec., T., R., M., or Survey Description) Sec. 28, T. 16S, R. 30E 660' PSL & 660' FEL	9. API Well No. 30-015-21965
	10. Field and Pool, or Exploratory Area Square Lake
	11. County or Parish, State Eddy, New Mexico

12 CHECK APPROPRIATE BOX(es) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA


TYPE OF SUBMISSION	TYPE OF ACTION
☒ Notice of Intent	☒ Abandonment
☐ Subsequent Report	☐ Recompletion
☐ Final Abandonment Notice	☐ Plugging Back
	☐ Casing Repair
	☐ Altering Casing
	☐ Other
	☐ Change of Plans
	☐ New Construction
	☐ Non-Routine Fracturing
	☐ Water Shut-Off
	☐ Conversion to Injection
	☐ Dispose Water

(Note: Report results of completion on Well Completion or Recompletion Report and Log form.)

13 Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Hanson Operating Company, Inc. is proposing to plug & abandon the above well in the following manner:

2. Cut off & pull ~~8-578"~~^{4 1/2"} casing at 1300' (top of cement),
3. set a 100' cement plug at top of Yates formation. 50' in 4" out of casing stub. Tag plug
5. Set a 50' cement plug at surface.
1. Set cement plug 100' above perfs at 2859'-2900'-2900'. Tag plug.
4. Remove all equipment, install dry hole marker & restore location. All plugs will be set in place using 9.5# mud laden fluid, all cement plugs will be Class C cement.
6. Set cement plug from 543' to 443'. Tag plug.

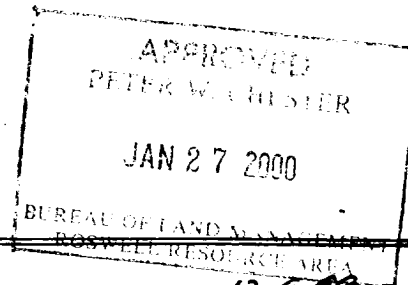

14. I hereby certify that the foregoing is true and correct

Signed *Betsy Spier* Title *Prod. Analyst*

(This space for Federal or State office use)

Approved by _____ Title _____
Conditions of approval, if any: *approved as modified.*

Date *12-9-99*

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

*See instruction on Reverse Side