

Office

DISTRICT I

1625 N. French Dr., Hobbs NM 88240

DISTRICT II

1301 W. Grand Avenue, Artesia NM 88210

DISTRICT III

1000 Rio Brazos Rd., Aztec NM 87410

DISTRICT IV

1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico  
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION  
1220 South St. Francis Dr.  
Santa Fe, New Mexico 87504-2088

Form C-103

Revised March 25, 1999

|   |
|---|
| WELL API NO.<br>30-025-30059  |
| 5. Indicate Type of Lease<br>STATE <input type="checkbox"/> FEE <input checked="" type="checkbox"/> |
| 6. State Oil & Gas Lease No.  |
| 7. Lease Name or Unit Agreement Name<br><br>Burton AER Com  |
| 8. Well No.<br>1  |
| 9. Pool Name or Wildcat<br>Casey San Andres   |

SUNDRY NOTICES AND REPORTS ON WELLS  
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well:

Oil Well ☒ Gas Well ☐ Other

2. Name of Operator

Yates Petroleum Corporation

3. Address of Operator

105 South 4th Str., Artesia, NM 88210

4. Well Location

Unit Letter J : 2400 feet from the South line and 1850 feet from the East lineSection 26 Township 16S Range 37E NMPM County Lea

10. Elevation (Show whether DF, RKB, RT, GR, etc.)

3765.2' GR

11. Check Appropriate Box to Indicate Nature of Notice, Report, or Other Data

## NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐PLUG AND ABANDON ☒TEMPORARILY ABANDON ☐CHANGE PLANS ☐PULL OR ALTER CASING ☐MULTIPLE COMPLETION ☐OTHER: ☐

## SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ALTERING CASING ☐COMMENCE DRILLING OPNS. ☐PLUG AND ABANDONMENT ☐CASING TEST AND CEMENT JOB ☐OTHER: ☐


12. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompilation.

## Propose to plug and abandon as follows:

- 1) MIRU pulling unit and safety equipment.
- 2) Set CIBP @ 4915' and dump 35' cement on plug.
- 3) Cut 5-1/2" casing @ 4300'. Spear and pull casing.
- 4) Spot 100' plug 4350-4250'. WOC and tag plug.
- 5) Spot 100' plug 508-408'. WOC and tag plug.
- 6) Spot 10 sx plug @ surface. Cut-off 8-5/8" head and install marker.

→ SPOT 100' OR 25 SX (WHICHEVER IS GREATER)  
F/2275' - 2175' (TOP OF SALT)

THE COMMISSION MUST BE NOTIFIED 24 HOURS PRIOR TO THE BEGINNING OF PLUGGING OPERATIONS FOR THE C-103 TO BE APPROVED.

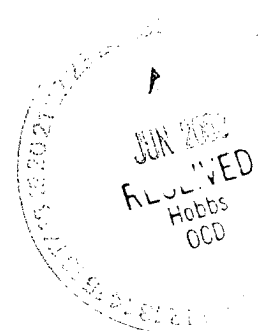

SIGNATURE

Stormi Davis

TITLE

Regulatory Compliance Technician

DATE

6/23/03

Type or print name

Stormi Davis

Telephone No.

505-748-1471

APPROVED BY

Gary W. Wink

Conditions of approval, if any:

FIELD REPRESENTATIVE II/STAFF MANAGER

DATE

JUN 25 2003